 


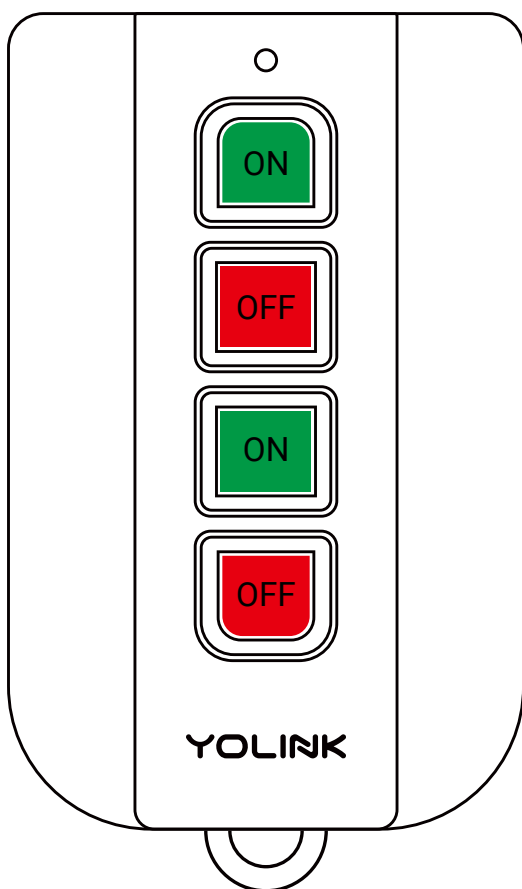

On/OffFob

YS3605-UC



Installation & User Guide

Revision Jun. 02, 2026

Contents

A . Welcome!	01
B . Before You Begin	02
C . In the Box	04
D . Get to Know Your On/OffFob	04
E . Power Up	05

F . Install the App	06
G . Add Your Fob to the App	07
H . On/OffFob Operation	09
I . App Functions: Device Details Screen	10
J . Control-D2D	11

K . Battery Replacement	14
L . Firmware Updates	16
M . Factory Reset	18
N . Specifications	19
O . Troubleshooting	21

P . Warnings	22
Q . Warranty	23
R . FCC Statement	24
S . Contact Us	26

If you have completed the set-up of your SirenFob using the quick start guide, you can proceed to section H.



Welcome!

Thank you for purchasing YoLink products! We appreciate you trusting YoLink for your smart home & automation needs. Your 100% satisfaction is our goal. If you experience any problems with your installation, with our products or if you have any questions that this manual does not answer, please contact us right away. See the Contact Us section for more info.

Thank you!

YoLink Customer Support

User Guide Conventions

The following icons are used in this guide to convey specific types of information:



Very important information
(can save you time!)



Good to know info but may not
apply to you

B Before You Begin

Visit our On/OffFob support page on our website, for the latest installation guides, additional resources, information and videos by visiting:

<https://www.yosmart.com/support/YS3605-UC>

Or by scanning the QR code:



Download the most current version of the user guide by scanning the QR code:



 
B Before You Begin, Continued




Your On/OffFob connects to the internet via a YoLink hub, and it does not connect directly to your WiFi or local network. In order for remote access to the device from the app, and for full functionality, a hub is required.

This guide assumes the YoLink app has been installed on your smartphone, and a YoLink hub is installed and online (or your location, apartment, condo, etcetera, is already served by a YoLink wireless network).


C In the Box

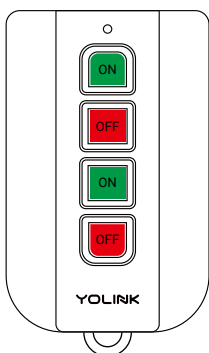

On/OffFob

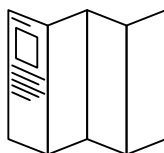 


Quick Start Guide

 

AAA Batteries (2) Installed

 D Get to Know Your On/OffFob

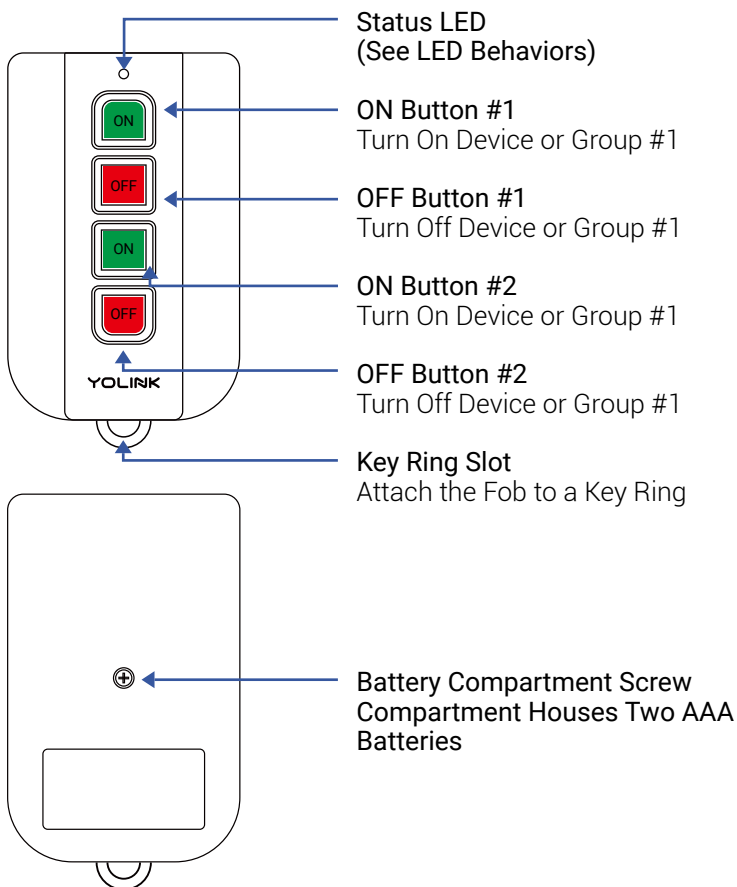

D

Get to Know Your On/OffFob, Continued

LED & Beep Behaviors



**Blinking Red Once,
Then Green Once**
Device Power Up



**Blinking Red And Green
Alternately**
Restoring to Factory
Defaults



**Blinking Green Once
One Beep**
On Button Pressed



**Blinking Red Once
Two Beeps**
Off Button Pressed



Blinking Green Twice
Connecting to Cloud



Quick Blinking Green
Control-D2D Pairing in
Progress



Quick Blinking Red
Control-D2D Unpairing
in Progress



 
Slow Blinking Green
Updating



**Fast Blinking Red Every
30 Seconds**
Batteries are Low,
Please Replace the
Batteries

E

Power Up

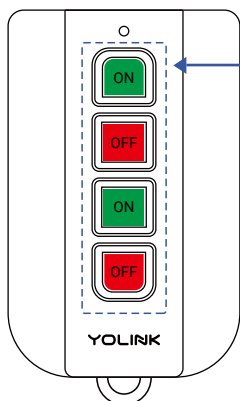

**Press any button on your fob
briefly.**
Observe the LED blinks red then
green.



Install the App

If you are new to YoLink, please install the app on your phone or tablet, if you have not already. Otherwise, please proceed to the next section.

Scan the appropriate QR code below or find the “YoLink app” on the appropriate app store.



Apple phone/tablet
iOS 9.0 or higher



Android phone/tablet
6.0 or higher

Open the app and tap **Sign up for an account**. You will be required to provide a username and a password. Follow the instructions, to set up a new account. Allow notifications, when prompted.

You will immediately receive a welcome email from no-reply@yosmart.com with some helpful information. Please mark the yosmart.com domain as safe, to ensure you receive important messages in the future.

 
Log in to the app using your new username and password.

The app opens to the **Favorite** screen. This is where your favorite devices and scenes will be shown. You can organize your devices by room, in the **Rooms** screen, later.




Add Your Fob to the App

1. Tap **Add Device** (if shown) or tap the scanner icon:

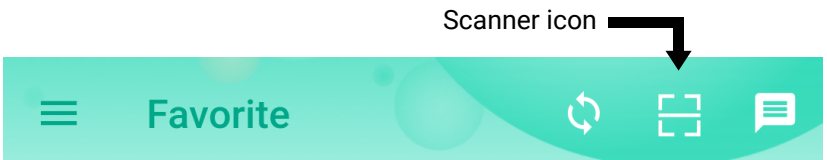

 2. Approve access to your phone's camera, if requested. A viewfinder will be shown on the app.

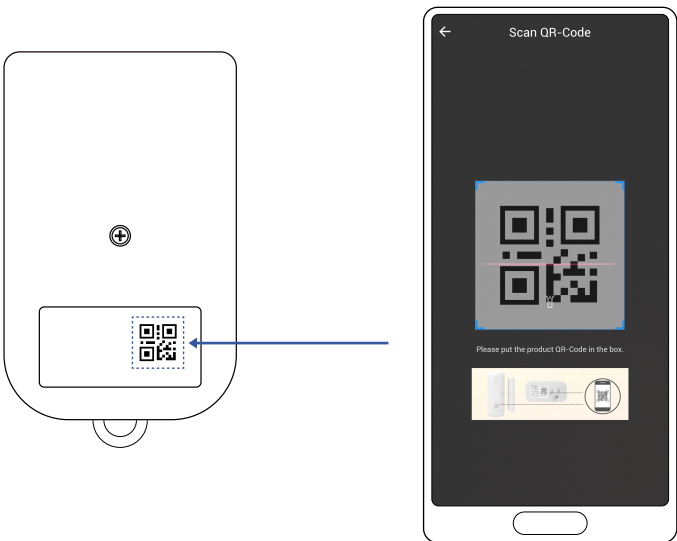


3. Hold the phone over the QR code so that the code appears in the viewfinder. If successful, the **Add Device** screen will be displayed.



Add Your Fob to the App, Continued

4. You can change the device name and assign it to a room later. Tap **Bind device**.

 5. If successful, the screen will appear as shown. Tap **Done**.

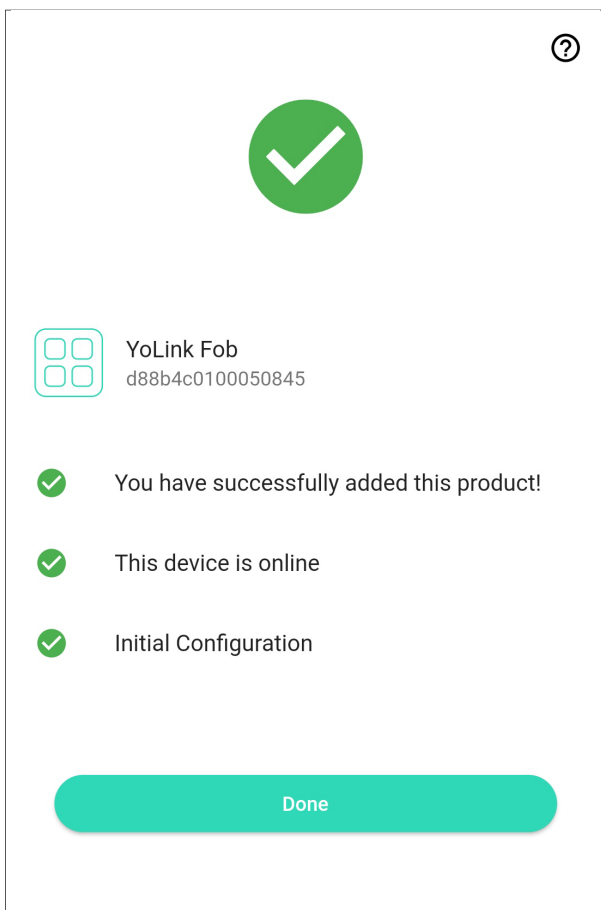



On/OffFob Use & Applications:

After pairing your On/OffFob to one or more compatible YoLink devices, you can use the On/OffFob to turn that device on or off. The pairing process is done using the SET button on each device (it is not done in the app). The procedure for pairing devices to your On/OffFob is covered in the next section.

The On/OffFob uses our unique Control-D2D device-to-device pairing. Each Control-D2D pairing consists of one device that initiates the action, referred to as the “controller”. The device (or devices) that are controlled are called the “responder”. The On/OffFob is a controller, only; it does not respond to other devices.

Once paired to your On/OffFob, you can use your On/OffFob to turn a light switch, plug or relay on or off, to open or close a garage door, or to lock or unlock a smart lock.

The On/OffFob has two sets of ON & OFF buttons. You can pair one or more devices to the top set, and one or more devices to the bottom set.



App Functions: Device Details Screen

In the app, tap on the On/OffFob icon, to view the fob's Details screen. Your fob's Details screen should be similar to the one shown below.

The screenshot shows the 'Details' screen for a YoLink Fob. The screen is divided into two sections. The top section contains settings: Type (YoLink Fob), Name (3605 OnOffFob >), Room (Office >), Favorite (Will show in favorite screen, with a heart icon), and History (Get device logs, with a chevron icon). The bottom section contains technical details: Model (YS3605-UC), Device EUI (d88b4c010005e513), SN (E52A216137 with a QR code), and Firmware (Unknown). At the bottom is a red 'Delete' button. Annotations with arrows point to various elements: 'Device Type' points to the header bar; 'Device Name (Tap to Edit)' points to the Name field; 'Room (Tap to Edit)' points to the Room field; 'Favorite (Red if Favorite, Tap to Edit)' points to the heart icon; 'History (Tap to View Activity Logs)' points to the History field; 'Model Number' points to the Model field; 'Device Equipment Unique Identifier Number (Unique)' points to the Device EUI field; 'Device Serial Number (Unique)' points to the SN field; 'Firmware Revision (Refer to page 16)' points to the Firmware field; and 'Remove Device From Current Account Tap to delete the device from your YoLink account' points to the Delete button.

Device Type

Device Name
(Tap to Edit)

Room
(Tap to Edit)

Favorite
(Red if Favorite, Tap to Edit)

History
(Tap to View Activity Logs)

Model Number

Device Equipment Unique Identifier Number
(Unique)

Device Serial Number
(Unique)

Firmware Revision
(Refer to page 16)

 
Remove Device From Current Account
Tap to delete the device from your YoLink account

Pair Your On/OffFob:


Before you can use your On/OffFob, it must be paired to at least one YoLink device. It must be a device that can act as a responder, like a Relay, Plug, Alarm Controller, or Smart Lock. You will need to have each device available to perform the pairing process – pairing is not done in the app. The steps to pair your On/OffFob to one or more Relays are as follows:

1. On the On/OffFob, to pair one or more devices to the top ON & OFF buttons, press and hold the top ON button for 5 to 10 seconds, until the LED flashes green, then release the button.

Press for 5-10 Seconds

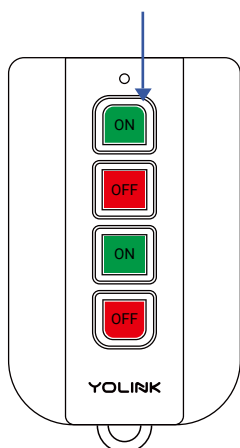

Until the LED Flashes Green

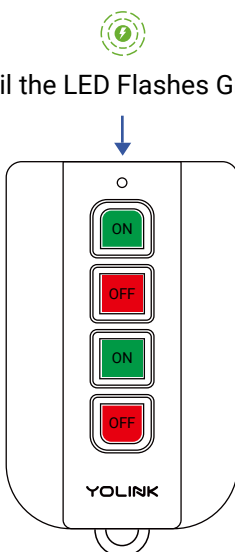 


J


Control-D2D, Continued

2. On the Relay, press and hold the SET button for 5 to 10 seconds, until the status LED flashes green

 Press for 5-10 Seconds

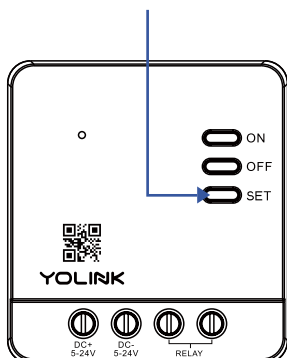

Until the LED Flashes Green

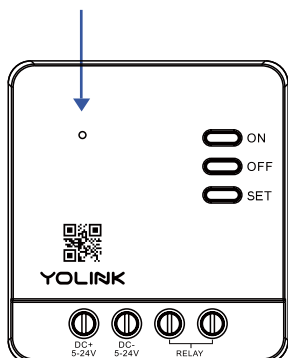 

Your On/OffFob is now paired to your Relay. Pressing the ON button will turn the paired device(s) on. Pressing the OFF button will turn the paired device(s) off.

You can continue to pair additional Relays or other devices to the top ON button, or you can pair devices to the bottom ON button, using the same steps.

Test the On/OffFob. Start with your paired devices off. Press the associated ON button on the On/OffFob, and verify the paired device(s) turned on. Press the associated OFF button on the On/OffFob, and verify the paired device(s) turned off.

The process for pairing other YoLink devices is similar. Refer to the device's documentation for specific instructions.



Control-D2D, Continued

 
Unpair Your On/OffFob:

1. On the On/OffFob, press the applicable ON button for 10 to 15 seconds, until the LED flashes green, then red, then release the button.
2. On the Relay, press and hold the SET button for 10 to 15 seconds, until the status LED flashes green, then red.

The Relay should no longer respond to the On/OffFob. Test the fob, and perform the unpairing steps again, if needed.

K Battery Replacement

- 1 Using a small Phillips screwdriver, remove the housing screw. Carefully place it to the side.

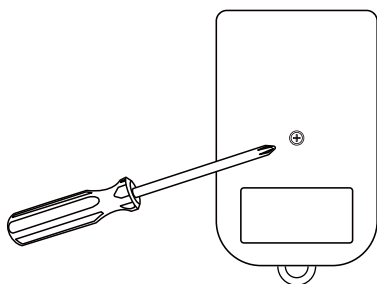


- 2 Remove the back shell.




You may find it easier to pry open the case using a fingernail, or a slotted screwdriver. Start at the bottom of the fob, at the keyring loop. Once part of the case begins to separate, move your fingernail or screwdriver gently around the edges of the case, until the back cover comes free.

K Battery Replacement, Continued

 
- 3 Remove the old batteries.

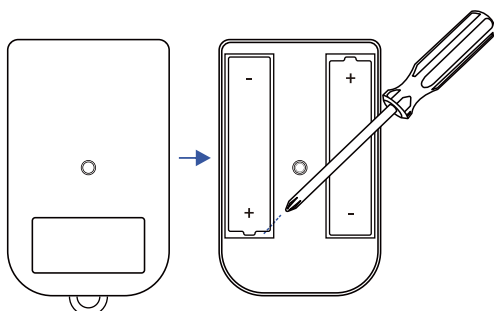

 - 4 Install two new alkaline AAA batteries.
(Do not mix old and new batteries)

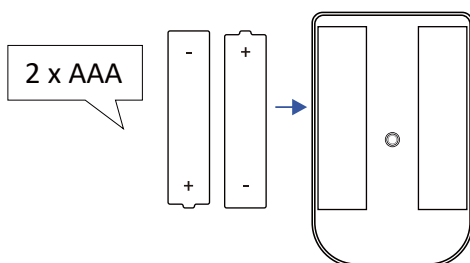

 - 5 Reassemble the fob and tighten the screw.

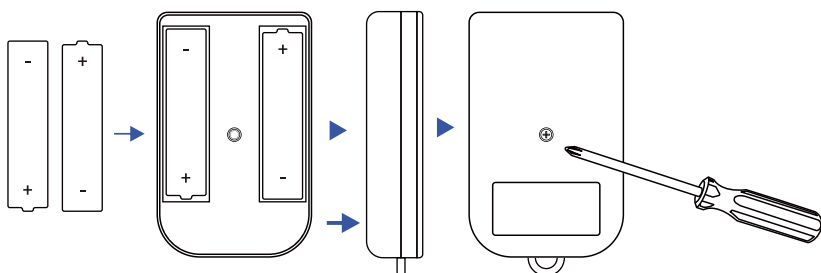


- 6 Test the operation of your fob.



Firmware Updates

Your YoLink products are frequently being improved, with new features and functions added over time. It is periodically necessary to make changes to your fob's firmware. For optimal performance of your fob, and to give you access to any improvements made to your fob's model, these firmware updates should be installed (added to your fob) when they become available.

 In the Detail screen of your fob, you will see the Firmware section, as shown in the image below. A firmware update is available if it says "#### ready now" (where #### is a four-digit combination of letters and/or numbers).

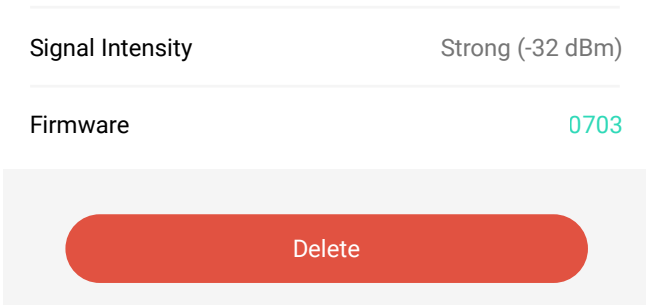

Tap in the Firmware area to start the update. The fob will update automatically, indicating the progress by percentage-complete. You may use your fob during the update process, as the update is performed "in the background". You may see the LED slowly blink green during the update, and the update may continue for several minutes beyond the LED turning off.



Firmware Updates, Continued

 


Firmware is like settings in your fob that define the overall operations of the fob, for example, determining when and how the fob's sounder should beep. These settings are added to the fob when it is manufactured, and they are periodically updated, as needed, to add improvements, new features, new integrations, etc, to your fob, as they become available. If you use your On/OffFob without an associated YoLink hub, firmware updates can not be made on your fob.

M Factory Reset

When directed by customer support, and/or as an attempt to resolve a problem with your fob, it may be necessary to perform a factory reset. Factory resetting your fob returns it to the factory default programming and settings. This is a simple process:

- Hold the bottom OFF button for 20 to 30 seconds, until the LED blinks red and green alternately, then release the button.

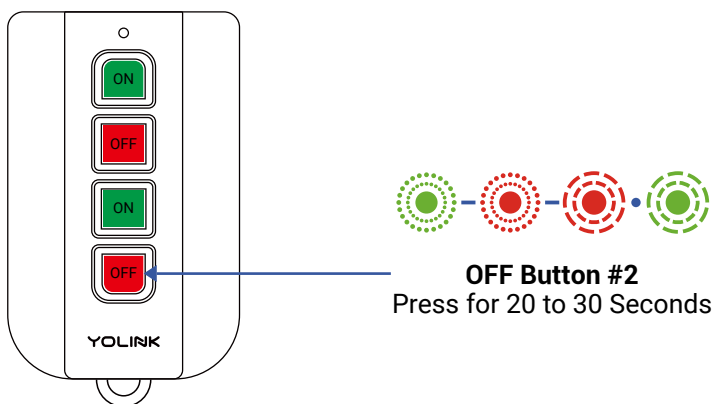

Factory reset is complete when the LED stops flashing.



Pressing the button for longer than 30 seconds will abort the factory reset process.


Factory reset will not remove the fob from the app. The only way to remove the fob from the app is to delete it (in the app).

N Specifications


Battery:	3V DC (two AAA batteries)
Device Current Draw:	$\leq 135\text{mA}$ (on), $\leq 5\mu\text{A}$ (standby)
Dimensions, Imperial (L x W x D):	2.67 x 1.69 x 0.61 inches
Dimensions, Metric (L x W x D):	68 x 43 x 15.5 mm
Environment:	Working Temperature: -4°F-122°F (-20°C-50°C) Working Humidity: $\leq 95\%$, non-condensing



 
Specifications, Continued

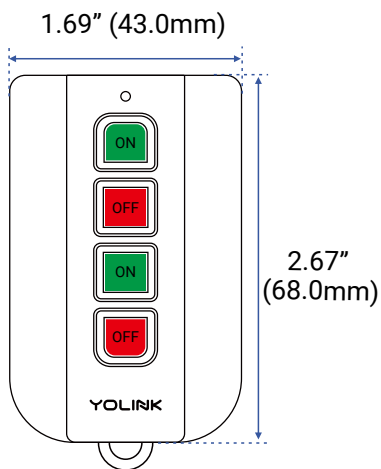

FRONT

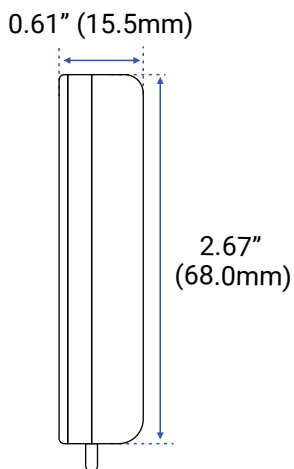 

SIDE

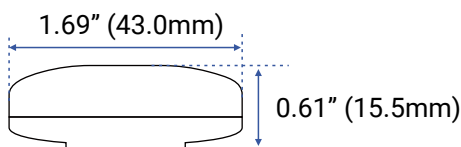 

TOP

Troubleshooting

If your fob does not operate as expected, if the fob has worked before, but stopped working, check and replace the batteries, if needed. If the fob has not worked before, perform the pairing process as previously explained, then test the fob again.

If this does not resolve the issue, please contact our customer support department (see the contact info on the last page of this guide).

We recommend checking for and performing any available firmware updates before contacting customer support.

Warnings

For optimal performance and lifetime of your fob, please adhere to the following warnings:

The On/OffFob is water-resistant but not waterproof. Do not allow your fob to get wet or be submerged in water or other liquids. Promptly dry off your fob if it does get wet.

- The On/OffFob is intended generally for use in indoor environments or safe from the elements. Do not leave your fob outside and/or where it may be exposed to extreme hot or cold environments. The battery life can be adversely impacted by extreme hot or cold environments. The fob can be harmed by ice, water, or condensing moisture.
- When replacing the batteries, only use new alkaline or lithium non-rechargeable batteries.

Do not use zinc blend batteries.

- Do not mix old and new batteries.
- Adhere to the battery manufacturer's safety and disposal or recycling instructions.

- If storing your fob unused for extended
- periods, remove the batteries.

- Please contact Customer Support before
- attempting to repair, disassemble, or modify your fob, any of which can permanently damage your fob and void the warranty.



Warranty

2 Year Limited Electrical Warranty

YoSmart Inc. warrants to the original user ("customer") of this product that it will be free from defects in materials and workmanship, under normal use, for 2 years from the date of purchase. This warranty does not apply to devices that have been improperly installed, modified, put to a use other than designed, or subjected to acts of God (such as floods, lightning, earthquakes, etc.). This warranty does not cover neglected or abused products. This warranty is limited to the repair or replacement of the device, only, at YoSmart's sole discretion. YoSmart will NOT be liable for the cost of installing, removing, nor reinstalling this product, nor direct, indirect, or consequential damages to persons or property resulting from the use of this product. This warranty only covers the cost of replacement parts or replacement units, it does not cover shipping & handling fees. The customer must provide proof of purchase, in the form of the original purchase invoice or order number. The purchase must have been made from an authorized seller.

To implement this warranty please contact us by one of the methods listed on the Contact Us page of this user guide.

FCC Statement

This device complies with part 15 of the FCC Rules. Operation is subject to the following two conditions: (1) This device may not cause harmful interference, and (2) this device must accept any interference received, including interference that may cause undesired operation. Any Changes or modifications not expressly approved by the party responsible for compliance could void the user's authority to operate the equipment.

Note: This equipment has been tested and found to comply with the limits for a Class B digital device, pursuant to part 15 of the FCC Rules. These limits are designed to provide reasonable protection against harmful interference in a residential installation. This equipment generates uses and can radiate radio frequency energy and, if not installed and used in accordance with the instructions, may cause harmful interference to radio communications. However, there is no guarantee that interference will not occur in a particular installation. If this equipment does cause harmful interference to radio or television reception, which can be determined by turning the equipment off and on, the user is encouraged to try to correct the interference by one or more of the following measures:

- Reorient or relocate the receiving antenna.
- Increase the separation between the equipment and receiver.
- Connect the equipment into an outlet on a circuit different from that to which the receiver is connected.



FCC Statement, Continued

- Consult the dealer or an experienced radio/TV technician for help.

The device has been evaluated to meet general RF exposure requirement. The device can be used in portable exposure condition without restriction.

PRODUCT NAME:
ON/OFFFOB

PARTY:
YOSMART, INC.

TELEPHONE:
831-292-4831

MODEL NUMBER:
YS3605-UC

ADDRESS:
25172 ARCTIC OCEAN DRIVE, SUITE 106
LAKE FOREST, CA 92630 USA

EMAIL:
SERVICE@YOSMART.COM



Contact Us

We are here for you, if you ever need any assistance installing, setting up or using a YoLink app or product!

Need help? For fastest service, please email us 24/7 at service@yosmart.com

Or call us at **831-292-4831** (US phone support hours: **Monday - Friday, 9AM to 5PM** Pacific)

You can also find additional support and ways to contact us at:

www.yosmart.com/support-and-service

Or scan the QR code:



Support Home Page

Finally, if you have any feedback or suggestions for us, please email us at feedback@yosmart.com

Thank you for trusting YoLink!

YoLink Customer Support



25172 Arctic Ocean Drive, Suite 106 Lake Forest, CA 92630
© 2026 YOSMART INC. CALIFORNIA, USA