


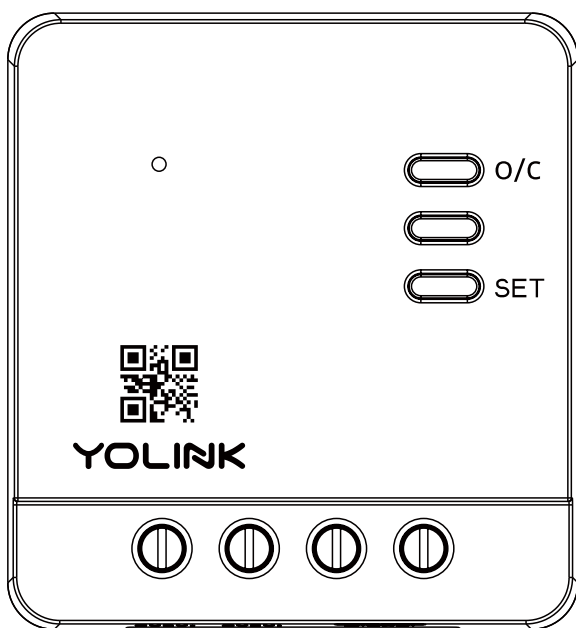

Garage Door Controller

YS4906-UC



Contents

A . Welcome	01
B . Before You Begin	02
C . In the Box	04
D . Required Items	05
E . Get to Know Your Garage Door Controller	06

F . Install the App	07
G . Add Your Controller to the App	08
H . Installation	10
I . App Functions: Device Screen	15
J . App Functions: Device Details Screen	16

K . App Functions: Alarm Strategy Screen	18
L . App Functions: Smart – Scene	20
M . App Functions: Smart – Automation	21
N . Control-D2D	22
O . App & 3rd-Party Services	26

P . Factory Reset	27
Q . Firmware Update	28
R . Specifications	29
S . Troubleshooting	31
T . Warnings	33

U . Warranty	35
V . FCC Statement	36
W . Contact Us	38



Welcome!

Thank you for purchasing YoLink products! We appreciate you trusting YoLink for your smart home & automation needs. Your 100% satisfaction is our goal. If you experience any problems with your installation, with our products or if you have any questions that this manual does not answer, please contact us right away. See the Contact Us section for more info.

Thank you!

YoLink Customer Support

User Guide Conventions

The following icons are used in this guide to convey specific types of information:



Very important information
(can save you time!)



Good to know info but may not
apply to you

B Before You Begin

Visit our Garage Door Controller support page on our website, for the latest installation guides, additional resources, information and videos by visiting:

<https://www.yosmart.com/support/YS4906-UC>

Or by scanning the QR code:



Download the most current version of the user guide by scanning the QR code:




B Before You Begin, Continued




Your Garage Door Controller connects to the internet via a YoLink hub, and it does **not** connect directly to your WiFi or local network. In order for remote access to the device from the app, and for full functionality, a hub is required.

This guide assumes the YoLink app has been installed on your smartphone, and a YoLink hub is installed and online (or your location, apartment, condo, etcetera, is already served by a YoLink wireless network).


C In the Box

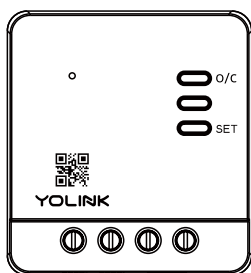


Garage Door Controller

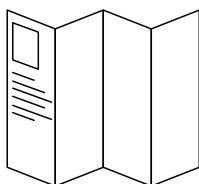


Quick Start Guide

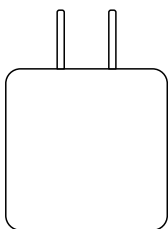

Power Adapter

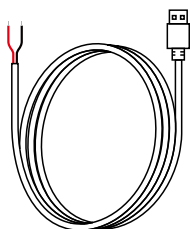


USB Cable

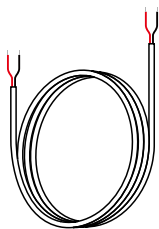


Existing or New Home
Appliances or Device with Wiring
Ready

D Required Items

Tools you will need:

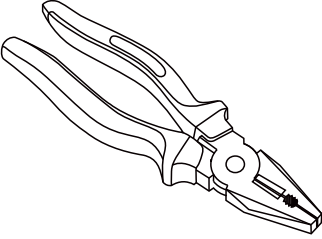


Wire Strippers or Cutters

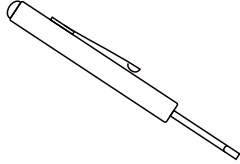

Small Slotted Screwdriver

E

Add Your Garage Door Controller to the App

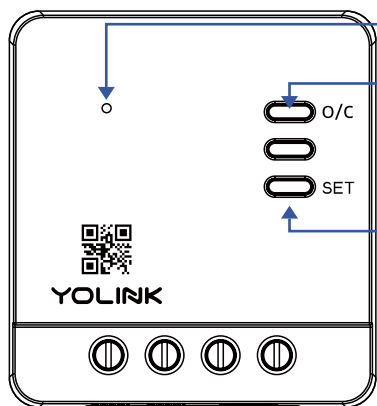


Status LED

O/C Button

Press once to open/close the garage door

SET Button

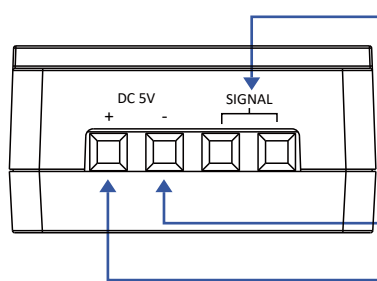

Control Terminal (Output)

DC 5V- (Input)

DC 5V+ (Input)

LED Behaviors



Blinking Green Once
Opening / Closing the Door



Blinking Green
Connecting to Cloud



Blinking Red And Green Alternately
Restoring to Factory Defaults



Quick Blinking Green
Control-D2D Pairing in Progress



Slow Blinking Green
Updating



Quick Blinking Red
Control-D2D Unpairing in Progress



Install the App

If you are new to YoLink, please install the app on your phone or tablet, if you have not already. Otherwise, please proceed to the next section.

Scan the appropriate QR code below or find the “YoLink app” on the appropriate app store.



Apple phone/tablet
iOS 9.0 or higher



Android phone/tablet
6.0 or higher

Open the app and tap **Sign up for an account**. You will be required to provide a username and a password. Follow the instructions, to set up a new account. Allow notifications, when prompted.

You will immediately receive a welcome email from no-reply@yosmart.com with some helpful information. Please mark the yosmart.com domain as safe, to ensure you receive important messages in the future.


Log in to the app using your new username and password.

The app opens to the **Favorite** screen. This is where your favorite devices and scenes will be shown. You can organize your devices by room, in the **Rooms** screen, later.




Add Your Garage Door Controller to the App

1. Tap **Add Device** (if shown) or tap the scanner icon:

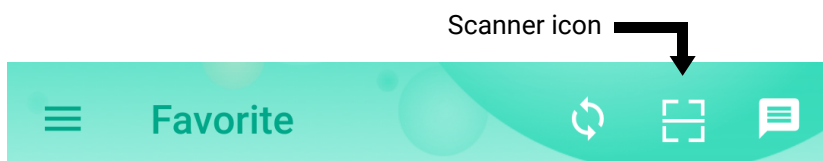

2. Approve access to your phone's camera, if requested. A viewfinder will be shown on the app.

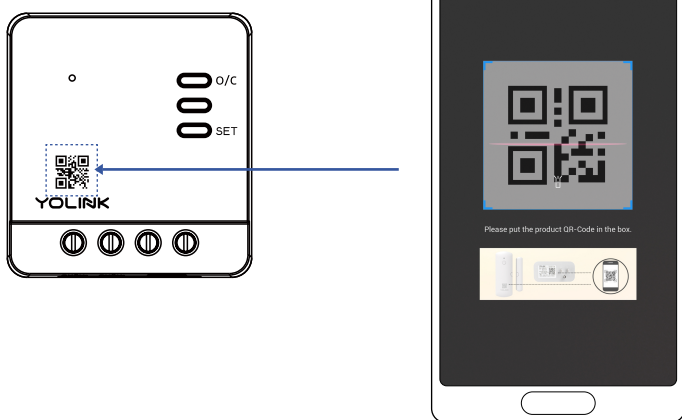


3. Hold the phone over the QR code so that the code appears in the viewfinder. If successful, the **Add Device** screen will be displayed.



Add Your Garage Door Controller to the App, Continued

4. You can change the device name and assign it to a room later. Tap **Bind device**.

5. If successful, the screen will appear as shown. Tap **Done**.

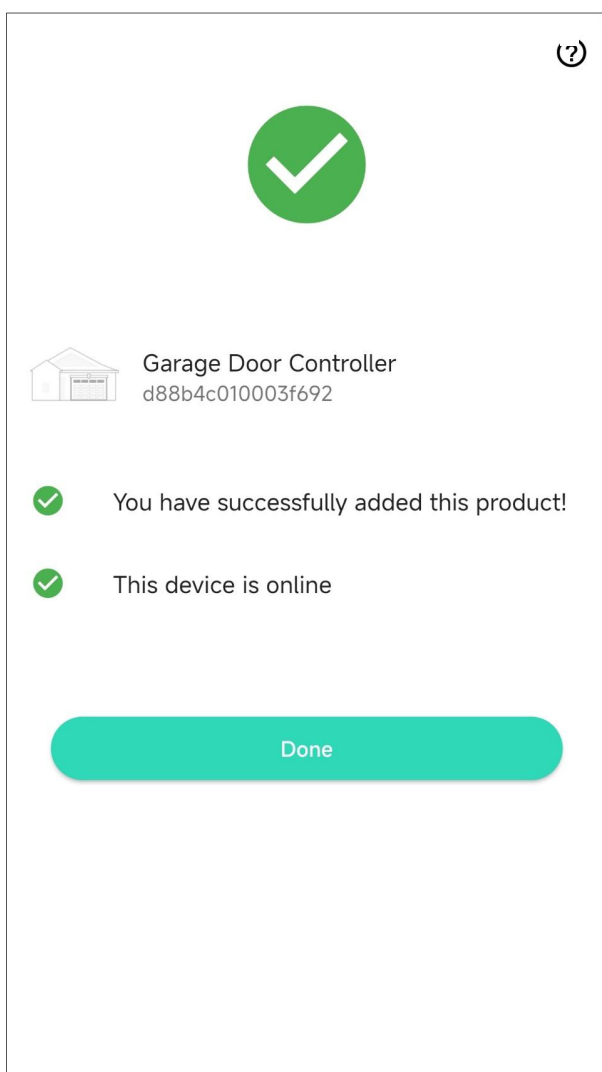


H Installation

Garage Door Operator 1 Compatibility Test:




Bend a paperclip into a U shape, as shown. You will use this at the button or at the operator.

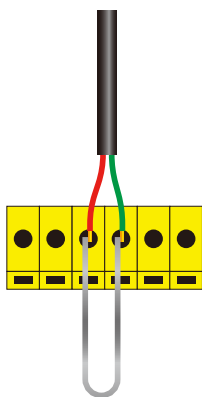

At the operator, use the paperclip to bridge across the wires from the button.

(Be sure to make a good electrical connection, by touching the paperclip to exposed copper or the metallic part of the wiring terminals)

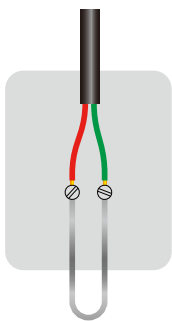


Or, at the button, use the paperclip to bridge across the wires that go to the operator on the rear of the button.

(You will need to remove the button from the wall, to access the wiring)



Installation, Continued

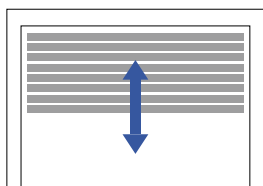

If the door operates, the Garage Door Controller 1 is compatible! If not, please consider our "Finger" Garage Door Controller 2

Proper Placement of the Controller.

The controller is very difficult to relocate after being affixed to the mounting surface. Find a proper location before affixing the device to the surface. Use masking or painters tape to secure the controller to the surface. Once you have the controller temporarily mounted, test it out. Press the O/C button on the device and test if the garage door works.

Get Ready

Before starting, choose the appropriate method for your installation, connect it to your garage door operator (Method A typically on the ceiling of your garage) or the button (Method B typically on the wall).



Installation, Continued

Installation Steps.

1. Remove the protective layer.
2. Place the controller at the desired location and press firmly for at least 5 seconds.
3. Loosen the screw terminal.

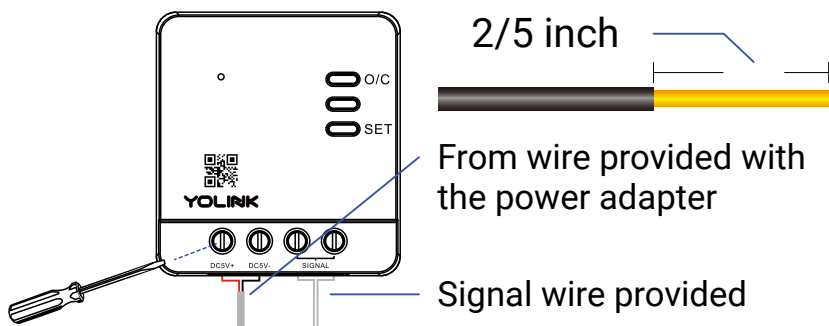


Figure 1

4. Insert the associated (DC 5V+ DC5V- and Signal Wires) wires, then tighten the screw terminal. Before connecting the wire to the terminal, ensure there is about 2/5 inch of bare wire visible (strip off insulation as needed), as shown in Figure 1.

H Installation, Continued


5. Connecting to the Garage Door Operator or Garage Door Control Button

Locate the two control terminals on your garage door operator or garage door control button, after making a note (or taking a picture) of their locations, remove the existing wires from the door operator or garage door control button. Twist* together one existing wire to one (new) signal wire install under the existing wire's original terminal. Repeat for the other existing wire and new control wire.

6. Power on the controller.

7. Test your garage door operator or garage door control button as you would normally use it. If it is not working properly, double-check or re-do steps 3 through 6 as needed.


Method A: Connecting to the Garage Door Operator

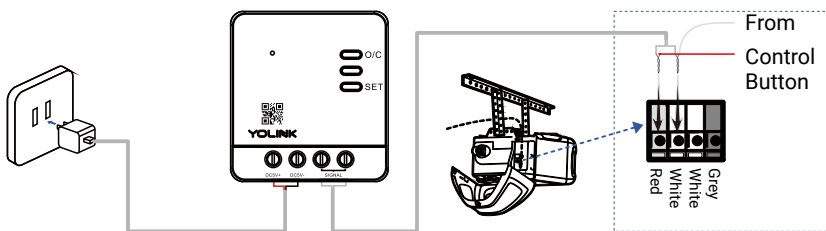



Installation, Continued

Method B: Connecting to the Garage Door Control Button

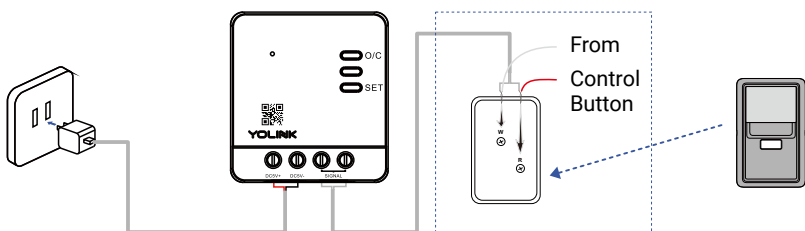


* If the wires are not twisted together, it is important to ensure both the old and new wires are both secured in place under the terminal, making a good electrical connection.



App Functions: Device Screen

In the app, tap on your Garage Door Controller icon. Your Garage Door Controller main screen should be similar to the one shown below.

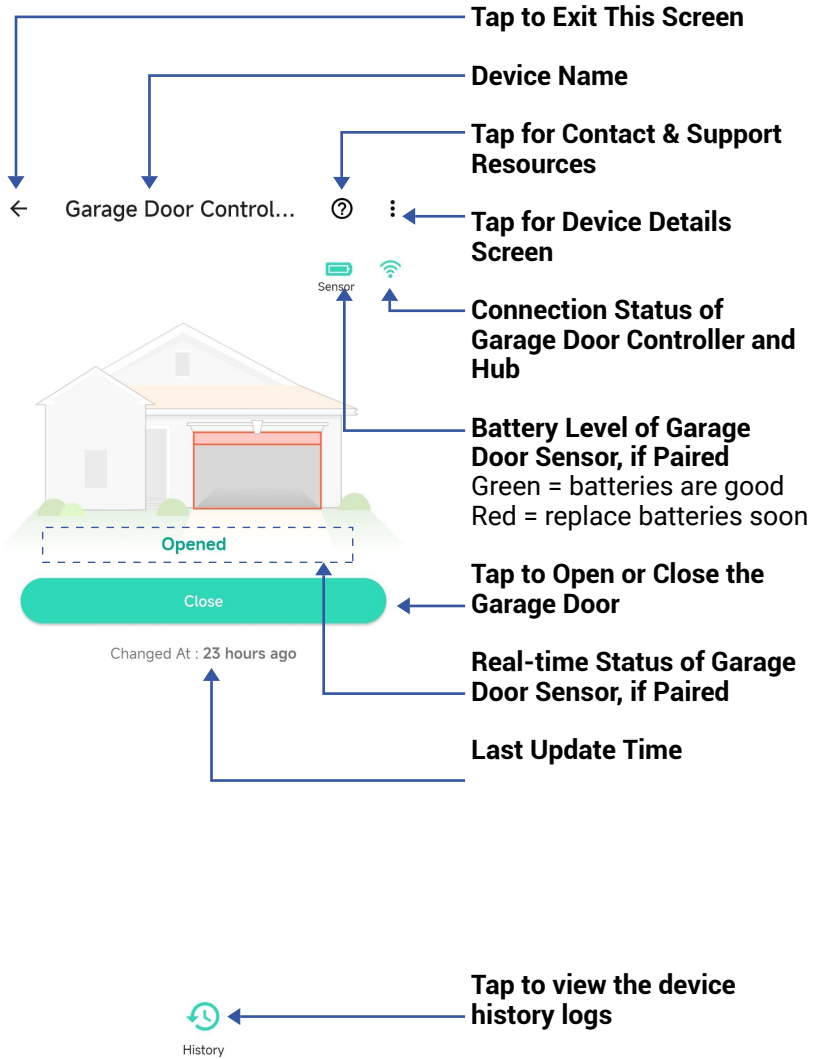



App Functions: Device Details Screen

Tap the three dots (in the upper right corner) to open the Garage Door Controller **Details** screen. Your Garage Door Controller's screen should be similar to the one shown below.

← Details ?

Type

Garage Door Controller

Name

Garage Door Controller >

Room

1.27 >

Alert

Door is opened >

Open Reminder

Alert after left open

10 min >

Favorite

Will show in favorite screen

♡

History

Get device activity logs

>

State

Opened

Sensor

Garage Door Sensor >

Controller

Model

YS4906-UC

Device Type

Device Name
(Tap to Edit)

Room
(Tap to Edit)

Alert Settings
Tap to enable or disable garage door sensor alerts, if paired

Open Reminder
Tap to edit open reminder and continuous alarm settings of garage door sensor, if paired

Favorite
(Red if Favorite, Tap to Edit)

Device history
Tap to view device history

State

Sensor
Tap to pair with the garage door sensor



App Functions: Device Details Screen, Continued

←

Details

?

Favorite

Will show in favorite screen

History

Get device activity logs

>

State

Opened

Sensor

Garage Door Sensor >

Controller

Model

YS4906-UC

Device EUI

d88b4c010003f692

SN

5E4DC96494 >

Signal Intensity

Strong (-13 dBm)

Firmware

060A
060B ready now.

Delete

Model Number

Device EUI
Unique Identifier Number

Device Serial Number

Signal Intensity
(From YoLink Hub)

Firmware Revision
(Refer to page 28)

Remove Device from Current Account
Tap to delete the device from your YoLink account



App Functions: Alarm Strategy Screen

If paired with garage door sensor, you can set up notifications in Alarm Strategy settings, make sure you have enabled App, Email, SMS notification from the app->Menu->Settings->Account Settings->Advanced Settings, and verified your email address and added your phone number in the app.

The screenshot shows the 'Alarm Strategy' settings screen. The header is green with a back arrow and the title 'Alarm Strategy'. Below the header, there are several sections: 'Name' with a value of 'Always' and a right arrow; 'Related Devices' with a value of '1' and a right arrow; 'Enable Device Alarm' with a green toggle switch; 'Do Not Disturb' with a grey toggle switch; 'Send App Notification' with a value of 'Admin' and a dropdown arrow; 'Send Email' with a value of 'None' and a dropdown arrow; 'Send SMS' with a value of 'None' and a dropdown arrow; and 'Trigger Action' with a value of 'None' and a right arrow. At the bottom is a green 'Save' button. Annotations with blue arrows point to specific elements: 'Strategy Name' points to the question mark icon in the header; 'Related Devices' points to the '1' in the 'Related Devices' section; 'Tap to Enable or Disable The Strategy' points to the 'Enable Device Alarm' toggle; and 'Tap to Set Up Dnd (Do Not Disturb)' points to the 'Do Not Disturb' toggle.

Strategy Name
Tap to edit the name

Related Devices
Tap to add more devices (that can alert) to this strategy, a device can be related to only one strategy

Tap to Enable or Disable The Strategy

Tap to Set Up Dnd (Do Not Disturb)



App Functions: Alarm Strategy Screen, Continued

The screenshot shows the 'Alarm Strategy' configuration screen. At the top is a green header with a back arrow, the title 'Alarm Strategy', and a help icon. Below the header are several sections: 'Name' with a value of 'Always' and a chevron; 'Related Devices' with a value of '1' and a chevron; 'Enable Device Alarm' with a toggle switch turned on; 'Do Not Disturb' with a toggle switch turned off; 'Send App Notification' with a dropdown menu set to 'Admin'; 'Notification Settings' with a link to 'Notification Settings ...'; 'Send Email' with a dropdown menu set to 'None'; 'Send SMS' with a dropdown menu set to 'None'; and 'Trigger Action' with a dropdown menu set to 'None'. At the bottom is a green 'Save' button. Blue arrows point from text boxes on the right to specific elements: 'Send App Notification' points to the 'Admin' dropdown; 'Notification Settings (iOS only)' points to the 'Notification Settings ...' link; 'Send Email' points to the 'None' dropdown; 'Send SMS' points to the 'None' dropdown; and 'Trigger Action' points to the 'None' dropdown.

Send App Notification

Tap to select Admin to enable App push, select All, if desired for all members

Notification Settings (iOS only)

Tap to change notification tone, if desired

Send Email

Tap to select Admin to enable email notification, select All, if desired to send to all members

Send SMS

Tap to select Admin to enable limited text messages, select All (subscribe required-starter or standard plan), if desired to send to all members

Trigger Action

Tap to choose trigger actions (YoLink sirens, YoLink SpeakerHubs, scene)



App Functions: Smart – Scene

Go to App Menu->Settings->Account->Advanced Settings->Enable the control of security devices, then you can set up scene for your garage door controller.

The screenshot shows the 'Scene' settings interface. At the top is a teal header with a back arrow, the title 'Scene', a refresh icon, and a checkmark icon. Below the header are several settings: 'Name' with the value 'Garage door' and a right arrow; 'Icon' with a scene icon and a right arrow; 'Favorite' with a heart icon; 'Group' with the value 'HomeScene' and a right arrow; and 'Behavior' which is a list of actions. The 'Behavior' list contains one item: 'Garage Door Controller Toggle' with a house icon. Annotations with arrows point to various elements: 'Tap to view the scene history' points to the refresh icon; 'Tap to save the settings' points to the checkmark icon; 'Name' points to the 'Garage door' text; 'Tap to edit the scene name' points to the right arrow next to 'Garage door'; 'Icon' points to the scene icon; 'Tap to select a scene icon' points to the right arrow next to the icon; 'Favorite' points to the heart icon; 'Tap to make it a favorite scene' points to the heart icon; 'Assign the scene to a scene group' points to the 'HomeScene' text; 'Delete the behavior' points to the red trash icon; 'Add behavior' points to the green plus icon; 'Tap to add a behavior' points to the plus icon; 'Tap to sort behaviors' points to the sort icon (three horizontal lines with arrows); and a sad face emoji is placed below the 'Behavior' list.

Tap to view the scene history

Tap to save the settings

Name

Tap to edit the scene name

Icon

Tap to select a scene icon

Favorite

Tap to make it a favorite scene

Group

Assign the scene to a scene group

Behavior

Delete the behavior

Add behavior

Tap to add a behavior

Tap to sort behaviors

🙄

The Scene settings are saved in the cloud.

If you have two or more alternating scenes, such as "Armed" and "Disarmed" or "Day Mode" and "Night Mode", you can place them into a custom scene Group. As only one scene in a Group can be active, when you activate the Night Mode scene, the Day Mode scene will be indicated as inactive. This is only a visual indicator; in this example, any specific required actions for the Day Mode (such as device actions, etc.) must be accomplished by separate automation settings.



App Functions: Smart - Automation

The Garage Door Controller can be set up as an action in automation. Firstly go to App Menu->Settings->Account->Advanced Settings->Enable the control of security devices.

The screenshot shows the 'Automation' settings screen. At the top is a green header with a back arrow, the title 'Automation', and a checkmark icon. Below this is the 'Name' field with the text 'close garage door'. A section titled 'When' shows a clock icon and the text 'When 20:00 Every Day'. Below that is a 'Then' section with a list of behaviors. The first behavior is 'Continue if condition is met IF: Garage Door Sensor is Left Open'. The second behavior is 'Garage Door Controller Toggle'. At the bottom is the 'Working Time' section with the text 'Always Working'. The 'Advanced Settings' section is at the very bottom. Annotations with arrows point to various elements: 'Tap to save the settings' points to the checkmark icon; 'Edit the name of the automation' points to the 'Name' field; 'Tap to set a condition for the automation' points to the 'When' section; 'Add behavior' points to the plus icon in the behavior list; 'Delete the behavior' points to the red minus icon; 'Tap to sort behaviors' points to the sort icon; 'Always Working' points to the 'Always Working' text; and 'Advanced Settings' points to the 'Advanced Settings' section.

Tap to save the settings

Edit the name of the automation

Tap to set a condition for the automation

Add behavior
Tap to add a behavior

Delete the behavior

Tap to sort behaviors

Always Working
Tap to set when the automation can be activated

Advanced Settings
Tap to edit advanced automation and logging settings

The Automation settings are saved in the cloud.

You can edit the Advanced Settings, including save the log, retry if action fails, notify if action fails, etc.

YoLink Control-D2D (device-to-device) pairing is a feature unique to YoLink products. One device can be paired to one (or more) devices. When two or more devices are paired, a link is created, “locking-in” the behavior, so that the device(s) will carry out their paired behavior when required, regardless of a connection to the internet or cloud, and even without AC power (in the case of battery-powered or battery backed-up devices). For example, a Door Sensor can be paired to a Siren Alarm, so that when the door is opened, the siren is activated.

Several important points:

- The use of Control-D2D is entirely optional. It is more common to use the app’s automation and scene settings to create desired behaviors, such as motion sensors turning on the lights automatically. Your application may require functionality during the loss of internet/WiFi, in which case Control-D2D pairing may be preferred.
- A device that controls another device is referred to as a Controller. The device that is controlled is referred to as a Responder.


N Control D2D, Continued

- While online, any paired behaviors as well as automation and scene settings (desired siren behaviors set in advance by you, such as the door sensor/siren example) will both be carried out. Paired behaviors and app settings can coexist, but use care to not create conflicting actions between the two, as the device may not operate as desired.
- A device can have up to 128 pairings.


The following instructions use pairing your FlexFob with a Garage Door Controller as an example, press the button on the FlexFob to toggle the Garage Door Controller.

1. To configure your FlexFob as a controller, select a button, press and hold this button for 5-10 seconds until the LED quickly blinks green, then, release the button.


Press for 5-10 Seconds

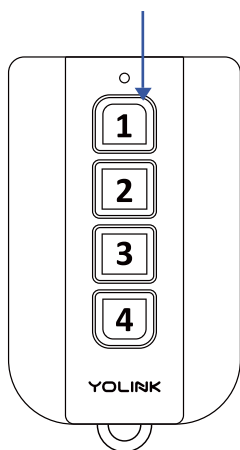

Until the LED Flashes Green

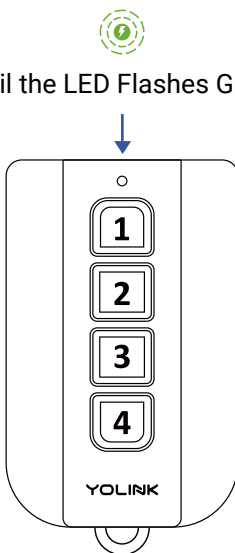

2. To configure a Garage Door Controller as the responder, press and hold the SET button for 5-10 seconds until the LED quickly blinks green, then, release the button.

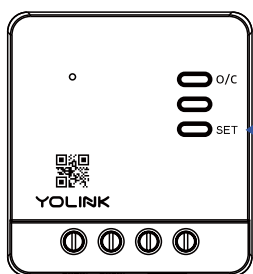

SET Button

Press for 5 to 10 Seconds

3. Upon pairing, the LED will stop blinking (this may happen after only blinking two or three times).

Pressing the FlexFob's paired button will now operate the garage door.

Unpair your Garage Door Controller.

1. On the FlexFob, press the assigned button for 10 to 15 seconds, until the LED quickly blinks red, then release the button.

2. On the Garage Door Controller, press and hold the SET button for 10 to 15 seconds, until the LED quickly blinks red, then release the button.



Control D2D, Continued



The LED will flash green prior to the 10 second mark, going into pairing mode, but keep pressing until the LED flashes red. The Controller's pairing is now removed. The Garage Door Controller should no longer respond to the FlexFob.

App & 3rd-Party Services

The YoLink Garage Door Controller works with several voice assistants, including Alexa and Google, and it works with other automation platforms such as IFTTT and Home Assistant.

To set up 3rd-party integrations (Alexa, Google and IFTTT), in the app, go to Settings, Third-Party Services, and follow the instructions.

Refer to the Home Assistant website and the YoLink integration page for instructions.

<https://www.home-assistant.io/integrations/yolink/>



To integrate with 3rd-party systems, the Garage Door Controller must first be paired with the (Garage) Door Sensor, in the YoLink App. After this initial pairing, 3rd-party systems can discover the controller. The Home Assistant does not have this limitation.



Factory Reset

Factory reset will erase device settings and restore it to factory default settings. Doing a factory reset will not remove the device from your account and it will not harm the device, or lose any data or require you to redo your automations, etc.

Instructions:

Hold the SET button down for 20-30 seconds, until the LED blinks red and green alternately. Then, release the button. (Holding the button down longer than 30 seconds will abort the factory reset operation)

Factory reset will be complete when the LED stops blinking.




PLEASE NOTE: Only deleting a device from the app will remove it from your account. Factory reset will not delete the device from the app.



Firmware Update

Your YoLink products are constantly being improved, with new features added. It is periodically necessary to make changes to your device's firmware. For optimal performance of your system, and to give you access to all available features for your devices, these firmware updates should be installed when they become available.

In the Detail screen of each device, at the bottom, you will see the Firmware section, as shown in the image below. A firmware update is available for your device if it says “#### ready now”

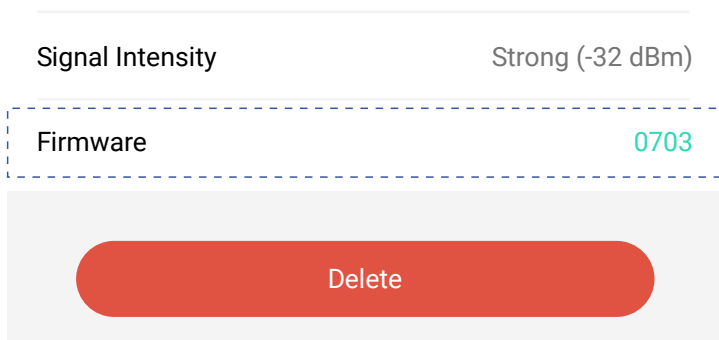

Tap in this area to start the update.

The device will update automatically, indicating progress by percentage-complete. You may use your device during the update, as the update is performed "in the background". The LED will slowly blink green during the update, and the update may continue for several minutes beyond the LED turning off.



Specifications

Voltage: 5V DC


Current: 1A

Dimensions, Imperial
(L x W x D): 2.09 x 1.93 x 0.98
inches


Dimensions, Metric
(L x W x D): 53 x 49 x 25 mm

Environment: Working Temperature:
32°F-104°F (0°C-40°C)


Working Humidity:
10% - 90%
non-condensing

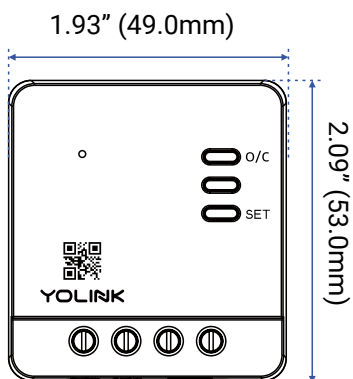

FRONT

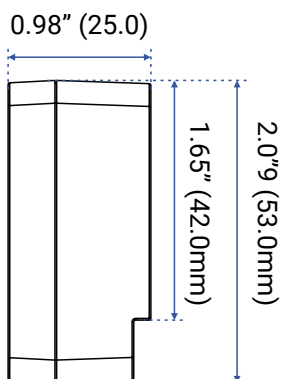

SIDE

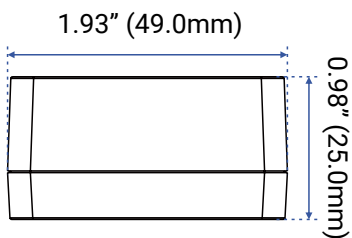

TOP

S Troubleshooting

These troubleshooting suggestions assume the device has been successfully added to the app. If the device is not working correctly and it is not in the app, return to the Add the Garage Door Controller to the App section and double-check or re-do these steps.

A. Device can not be operated at all, and can not be operated manually via the SET button:

- 1) Check the wire connection.
- 2) Test with another power supply.

B. Device can be operated manually, but it is offline

- 1) Ensure the device is connected to the cloud, by pressing the SET button until the LED illuminates briefly.
- 2) Ensure the device is within range of the hub. If you are installing the device remotely from the hub, first place it near the hub to ensure it connects to the cloud via the hub. (Press the SET button briefly to force the device to attempt to reconnect with the cloud). If it is now online, the original location was out of range of the hub. Relocating the device, the hub, or adding an additional hub may be solutions. Contact us as needed for additional guidance.



C. If a Control-D2D-paired functionality is not working:

- 1) Review and re-do the pairing steps, as needed. You can unpair the devices and re-pair them.

D. Performing a factory reset can clear up some issues. Refer to page 27 for instructions. If the device remains non-operational, it may be defective. **Please contact us for assistance with replacing your YoLink product.**

E. Other issues, please contact us via the info on the last page of this guide.

Warnings

- Please install, operate and maintain the Garage Door Controller only as outlined in this manual. Improper use may damage the unit and/or void the warranty
- Do not install or use the device outside of the temperature and humidity range listed in the Environmental section in Specifications, on page 29
- This device is not waterproof and is designed and intended only for indoor use. Subjecting this device to outdoor environment conditions such as direct sunlight, extreme hot or cold temperatures, rain, water and/or condensation can damage the device and will void the warranty

Install or use this device only in clean

- environments. Extremely dusty or dirty environments may prevent the proper operation of this device, and will void the warranty

If your Garage Door Controller gets dirty,

- please clean it by wiping it down with a clean, dry cloth. Do not use strong chemicals or detergents, which may discolor or damage the exterior and/or damage the electronics, voiding the warranty

T Warnings, Continued

- Do not install or use this device where it will be subjected to high temperatures and/or open flame
- Do not install or use this device where it will be subjected to physical impacts and/or strong vibration. Physical damage is not covered by the warranty
- Please contact Customer Service before attempting to repair, disassemble or modify the device, any of which can void the warranty and permanently damage the device



1 Year Limited Electrical Warranty

YoSmart Inc. warrants to the original user (“customer”) of this product that it will be free from defects in materials and workmanship, under normal use, for 1 years from the date of purchase. This warranty does not apply to devices that have been improperly installed, modified, put to a use other than designed, or subjected to acts of God (such as floods, lightning, earthquakes, etc.). This warranty does not cover neglected or abused products. This warranty is limited to the repair or replacement of the device, only, at YoSmart's sole discretion. YoSmart will NOT be liable for the cost of installing, removing, nor reinstalling this product, nor direct, indirect, or consequential damages to persons or property resulting from the use of this product. This warranty only covers the cost of replacement parts or replacement units, it does not cover shipping & handling fees. The customer must provide proof of purchase, in the form of the original purchase invoice or order number. The purchase must have been made from an authorized seller.

To implement this warranty please contact us by one of the methods listed on the Contact Us page of this user guide.

V FCC Statement

This device complies with part 15 of the FCC Rules. Operation is subject to the following two conditions: (1) this device may not cause harmful interference, and (2) this device must accept any interference received, including interference that may cause undesired operation.

Any changes or modifications not expressly approved by the party responsible for compliance could void the user's authority to operate the equipment.

NOTE: This equipment has been tested and found to comply with the limits for a Class B digital device, pursuant to Part 15 of the FCC Rules. These limits are designed to provide reasonable protection against harmful interference in a residential installation. This equipment generates, uses and can radiate radio frequency energy and, if not installed and used in accordance with the instructions, may cause harmful interference to radio communications. However, there is no guarantee that interference will not occur in a particular installation. If this equipment does cause harmful interference to radio or television reception, which can be determined by turning the equipment off and on, the user is encouraged to try to correct the interference by one or more of the following measures:

- Reorient or relocate the receiving antenna.
- Increase the separation between the equipment and receiver.



FCC Statement, Continued

- Connect the equipment into an outlet on a circuit different from that to which the receiver is connected.
- Consult the dealer or an experienced radio/TV technician for help.

To maintain compliance with FCC's RF Exposure guidelines, This equipment should be installed and operated with minimum distance between 20cm the radiator your body: Use only the supplied antenna.

PRODUCT NAME:
GARAGE DOOR CONTROLLER

PARTY:
YOSMART, INC.

TELEPHONE:
831-292-4831

MODEL NUMBER:
YS4906-UC

ADDRESS:
25172 ARCTIC OCEAN DRIVE, SUITE 106, LAKE
FOREST, CA 92630 USA

EMAIL:
SERVICE@YOSMART.COM



Contact Us

We are here for you, if you ever need any assistance installing, setting up or using a YoLink app or product!

Need help? For fastest service, please email us 24/7 at service@yosmart.com

Or call us at **831-292-4831** (US phone support hours: **Monday - Friday, 9AM to 5PM** Pacific)

You can also find additional support and ways to contact us at:

www.yosmart.com/support-and-service

Or scan the QR code:



Support Home Page

Finally, if you have any feedback or suggestions for us, please email us at feedback@yosmart.com

Thank you for trusting YoLink!

YoLink Customer Support

YOLINK

25172 Arctic Ocean Drive, Suite 106 Lake Forest, CA 92630
© 2026 YOSMART INC. CALIFORNIA, USA