



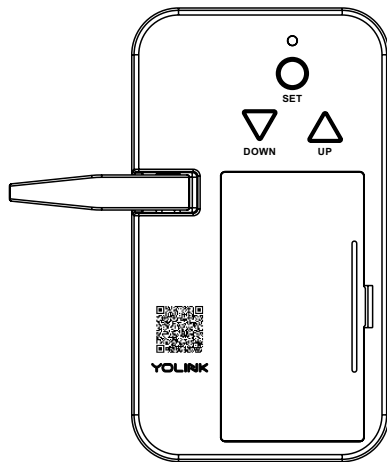

YoLink Finger

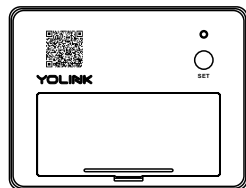

Garage Door Sensor 2

YOLINK

Smart Garage Door Kit 2

YS4908-UC_YS7706-UC
Installation & User Guide

Rev 1.1


Contents

In the Box	1
Important Notice	2
Introduction	3
Set Up	5
Installation	8
Using the YoLink App	18
About YoLink Control	28
Maintenance	37
Specifications	43
YoLink Finger Troubleshooting	44
Garage Door Sensor 2 Troubleshooting	45
Warning	46
Customer Service & Warranty	48


In the Box

- A. YoLink Finger
- B. Garage Door Sensor 2
- C. Quick Start Guide

A.

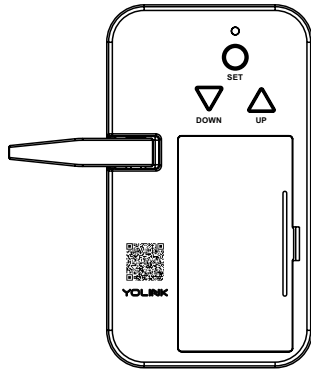

B.

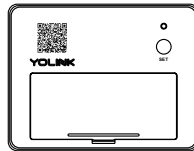

C.





Important Notice

- Improper use of your garage door operator/opener can cause property damage and/or serious injury or death. Install and use your Smart Garage Door Kit 2 only as instructed in this manual
- Allow the garage door operator/opener to complete opening or closing before opening/closing with the finger or app
- Do NOT allow children to use the door operator/opener or control it via the app without adult supervision
- Garage Door Sensor 2 is not compatible for roller doors and slide or slide hinged doors, but only compatible for sectional doors or canopy garage doors


Introduction

YoLink Smart Garage Door Kit 2 includes two products - YS4908-UC YoLink Finger, and YS7706-UC Garage Door Sensor 2

- YoLink Finger is a smart garage door button actuator that does not require any wiring, used for garage door button or switch control. Simply place the device next to the garage door control button, using the included double-sided tape (or screws, not included). Allows you to control your garage door from the YoLink app, as well as via popular voice assistants like Alexa and Google Assistants
- Garage Door Sensor 2: Supervises the position of your garage door, detecting when it is opened or closed, and can send alerts or trigger an automation based on the door opening, closing or being left open too long

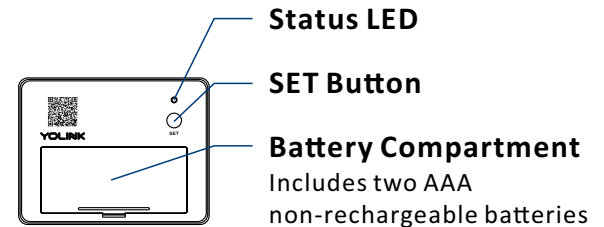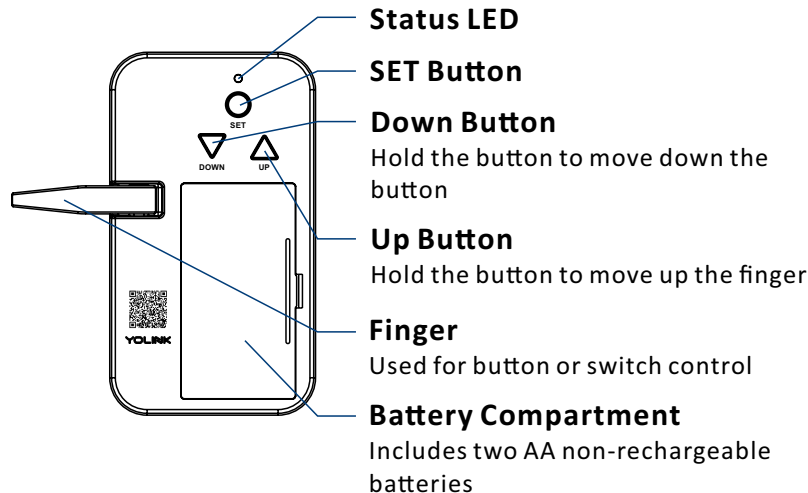


The LED light indicates the current status of the valve:

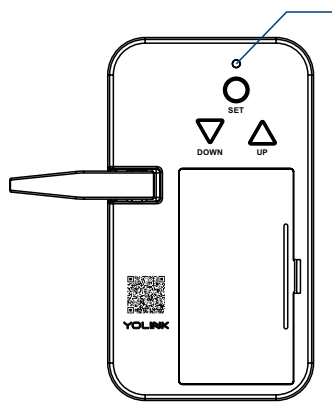

- **Green Once**
Moving up / down the finger
- **Blinking Green**
Connecting to Cloud
- **Fast Blinking Green**
Establishing Connection with YoLink System
- **Slow Blinking Green**
Updating
- **Fast Blinking Red**
Removing Connection to YoLink System
- **Blinking Red And Green Alternately**
Restoring to Factory Defaults

- **Red Once**
Alert Mode (Door is Opened or Closed)
- **Blinking Green**
Connecting to Cloud
- **Fast Blinking Green**
Establishing Connection with YoLink System
- **Slow Blinking Green**
Updating
- **Fast Blinking Red**
Removing Connection to YoLink System
- **Blinking Red And Green Alternately**
Restoring to Factory Defaults

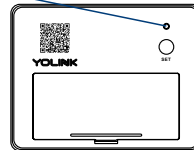


Set Up

Follow the steps below to set up your Smart Garage Door Kit 2 via the YoLink app

Set Up - First-Time YoLink Users *(Existing users proceed to **Add Device**, next page)*

*** Get ready:** To set up and use your Smart Garage Door Kit 2, you will need an Apple iPhone or tablet that is iOS 9.0 or higher, or an Android phone or tablet that is Android 4.4 or higher


- Download YoLink app through Apple App Store or Google Play Store
- Log in or create a new account if required
- YoLink Hub is required to set up your Smart Garage Door Kit 2. Please set up your YoLink Hub first (refer to YoLink Hub manual)

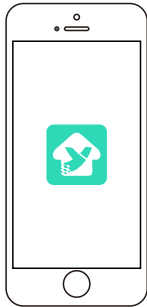

Download, and log in to YoLink app

1

** Make sure your hub is connected to the internet (green LED indicator is blinking, blue LED indicator is always on)*

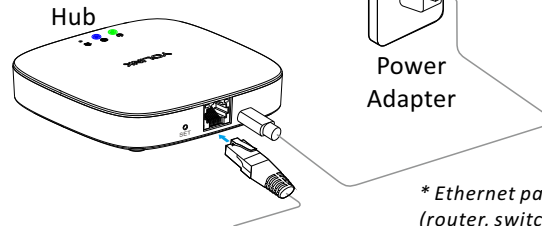

Set up YoLink Hub

2

** Ethernet patch cable (included) to your network (router, switch, etc.), recommended, but optional. Otherwise connect your Hub to your home Wi-Fi network. Refer to the Hub set up manual for more information:*




YS1603-UC_User Guide

Add Device

- Tap “” button, then scan QR Code on the YoLink Finger and Smart Garage Door Sensor 2 in turn

** For the best user experience, we suggest you pair your Garage Door Sensor 2 with a YoLink Finger. After pairing you will get real-time battery status of your YoLink Finger and Garage Door Sensor 2, signal level between YoLink Finger or Garage Door Sensor 2 and the YoLink Hub, and real-time opened or closed status of your garage door*


** If you skip the pairing when adding the device, you can pair them later in the **Details** page of YoLink Finger*

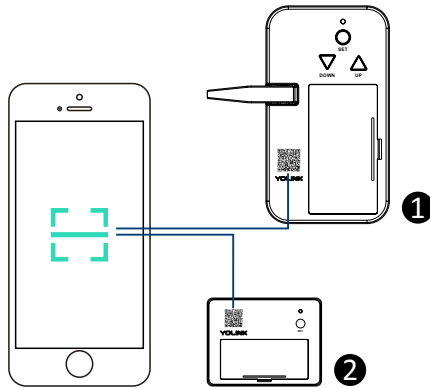

Tap “” button
to add devices


1

- Press the SET button (on front of YoLink Finger and Garage Door Sensor) once in turn, the Status LED will blink several times (red, then green). The green LED indicates the device is online and ready to use

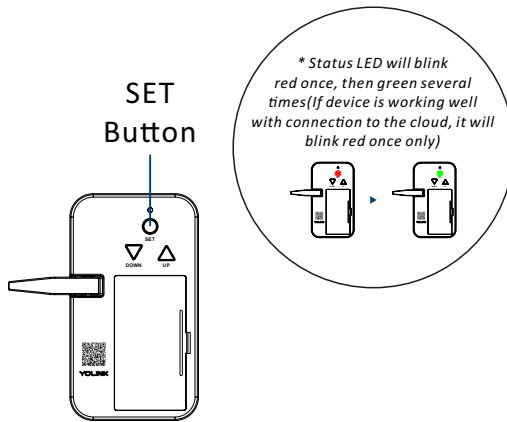

Press the SET button (on front of finger) once

2

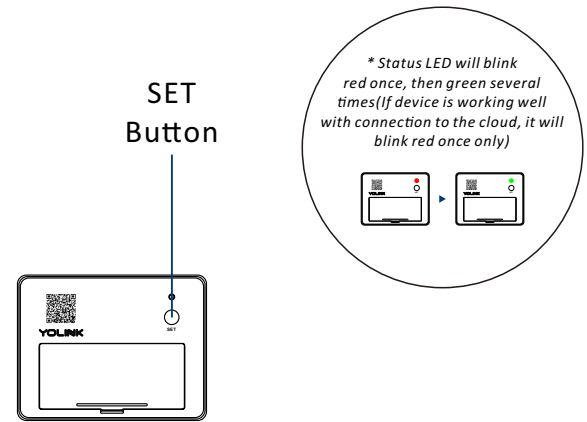

Press the SET button (on front of sensor) once

3

Installation


Test the Finger and Sensor Location Before Installation

- The finger and sensor are very difficult to relocate after being affixed to the mounting surface. Test your finger and sensor location before affixing the two devices to the surface. Use masking or painters tape to secure the finger and sensor to the surface. Once you have the finger and sensor temporarily mounted, test it out. With the app in hand, open or close the door using app and observing the status of the sensor as shown on the app (Opened or Closed). Optionally, you may set up your automation (e.g. turn on a light when the door is opened) to functionally test the status change of the door - proceed to the following steps for information on creating automations, then return to this step
- YoLink Finger and Garage Door Sensor 2 are designed and intended for indoor use only!
- Garage Door Sensor 2 should be mounted on the top panel of garage door and keep the SET button at the top and the longer side parallel to the floor, otherwise the status of sensor shown on the app (Opened or Closed) may be inaccurate
- Avoid allowing the finger and sensor to be exposed to strong impacts or vibration
- Please add the YoLink Finger and Garage Door Sensor 2 to the YoLink app before you install them

YoLink Finger


Get Ready to Install the YoLink Finger

- Before installing the YoLink Finger, place it in the appropriate position for the finger to actuate the garage door control button. Ensure the tip of the finger touches the control button (closer to the middle than the edge). Use the UP and DOWN buttons on the Finger to adjust the “resting position” (position it will in while not actuating the door control button). The use of both hands and/or something to temporarily hold the Finger in place may be needed, such as painter’s tape. When the best position for the Finger is determined, it is recommend to mark the position by outlining part of the Finger on the wall with a pencil or painter’s tape

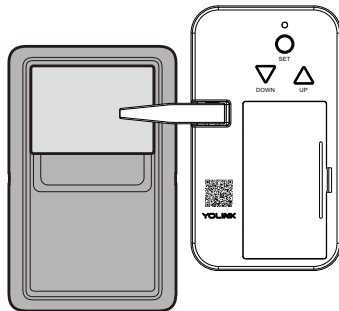


① Next to the Button

OR

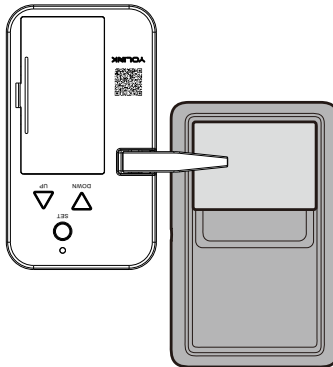

② Next to the Button (Inverted)

OR

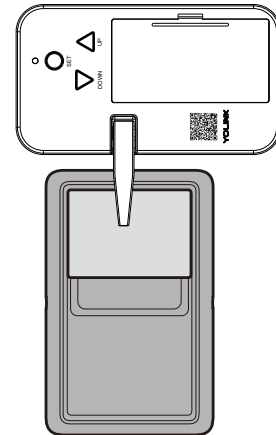


③ Above the Button

Determine the ideal location for the finger


Begin Installation:

- Method A: Install the YoLink Finger with double-sided tape on the back of the device
 - Clean the installation area
 - Remove the protective layer on the double-sided tape on the bottom of the YoLink Finger

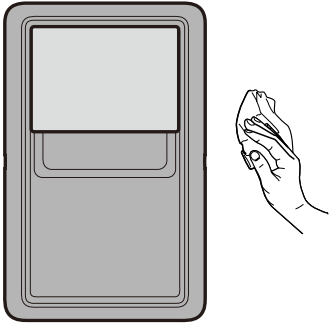

Clean the installation area


2

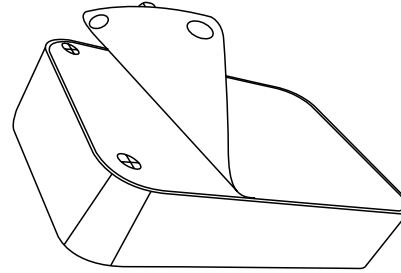

Remove the protective layer

3

- Place the YoLink Finger, double-sided tape down, at the pre-determined location. Press down firmly on the top of the Finger, pressing the Finger against the wall. Press for at least 5 seconds

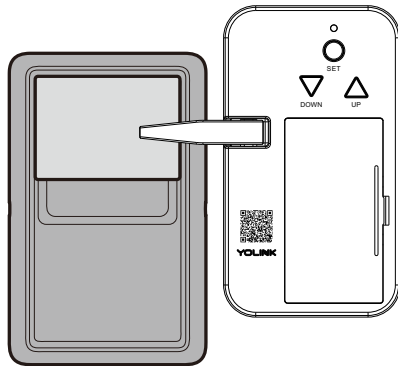


Place in position and press down firmly for at least 5 seconds

4

** Verify the Finger is secured to the wall; it should not be loose or wobble when gently pushed on*

- **Method B: Mount the YoLink Finger to the wall with screws (not included)**


- For wall-mounting, open the battery cover and remove the screws to gain access to the mounting holes on the back of the Finger

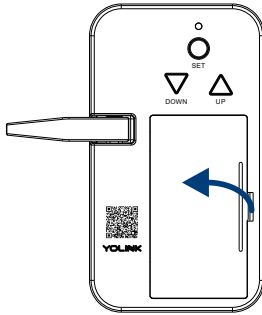

Open the battery cover and remove the batteries

2


- Mount YoLink Finger to the wall using screws

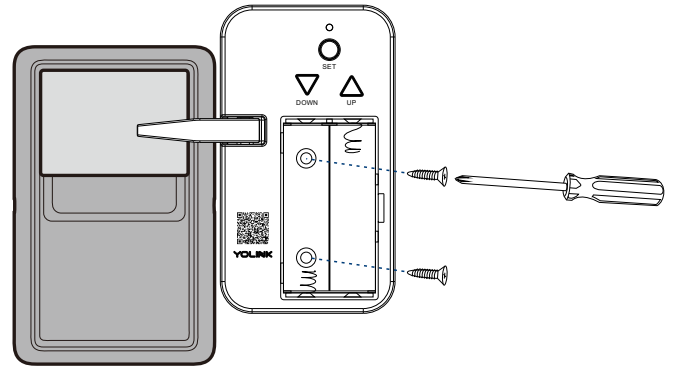

Mount the YoLink Finger

3

- Reinstall the batteries and close the battery cover

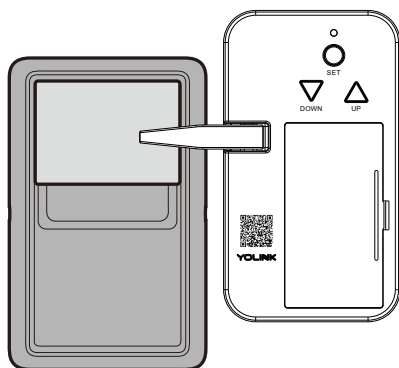


Reinstall the batteries and
close the battery cover

4


Garage Door Sensor 2

- Method A: Install the Garage Door Sensor 2 with double-sided tape on the back of the device
 - Find a suitable area on the top panel (left or right side suggested). Ensure the sensor will not come in contact with moving parts of the garage door operator/mechanism. Clean the selected installation area
 - Remove the protective layer of the double-sided tape

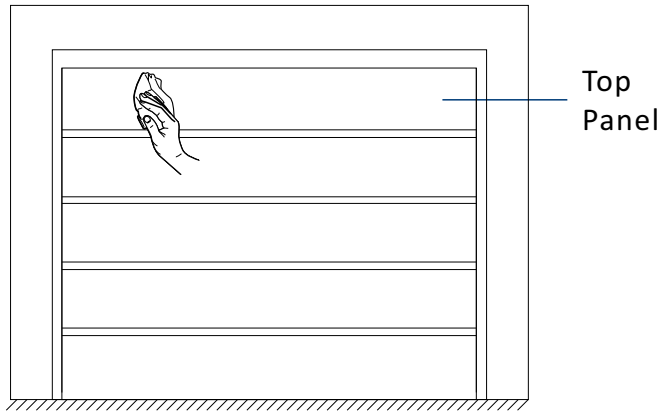

Clean the installation area



1

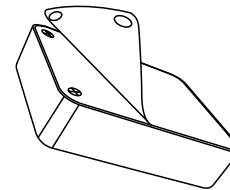

Remove the protective layer


2

- Keep the longer side of the Garage Door Sensor 2 parallel to the floor, press the sensor firmly to the door for at least 5 seconds

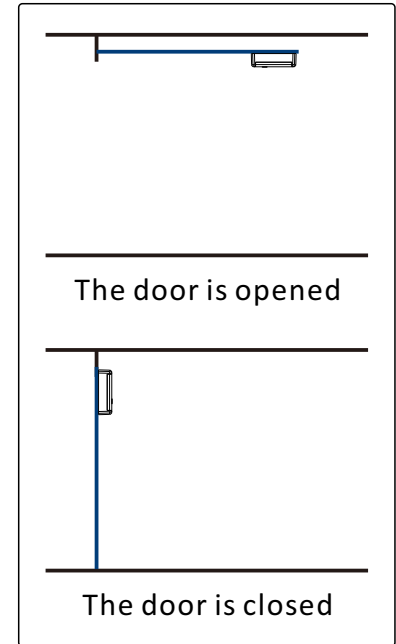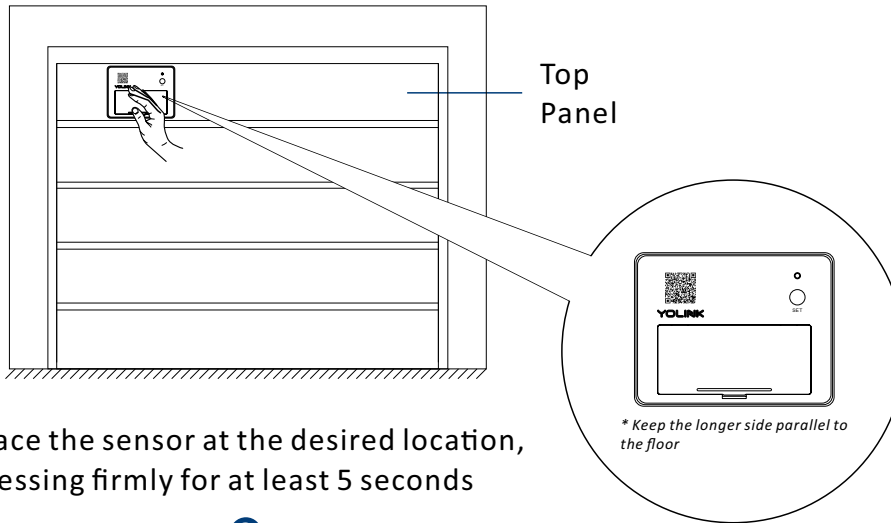

- Method B: Mount the Garage Door Sensor 2 to the wall with screws (not included)


- For wall-mounting, open the battery cover and remove the screws to gain access to the mounting holes on the back of the Sensor

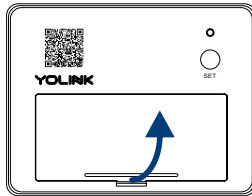

Open the battery cover and remove the batteries

2



- Keep the longer side of the Garage Door Sensor 2 parallel to the floor, mount the sensor to the top panel (left or right side suggested) of the garage door using screws

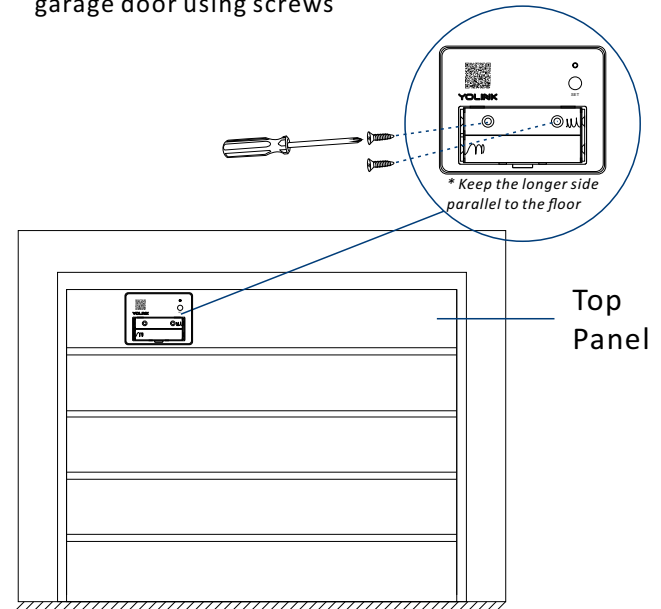

Mount the Garage Door Sensor 2

3

- Reinstall the batteries and close the battery cover

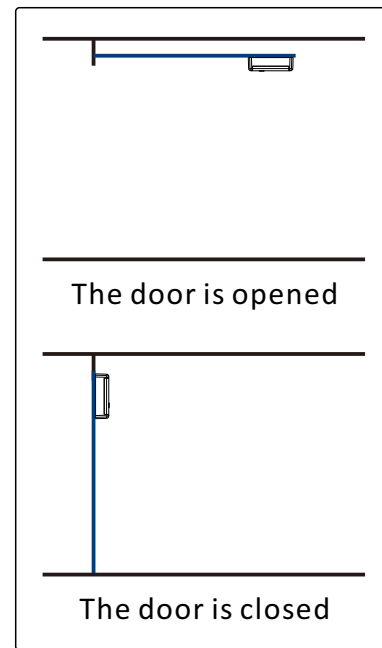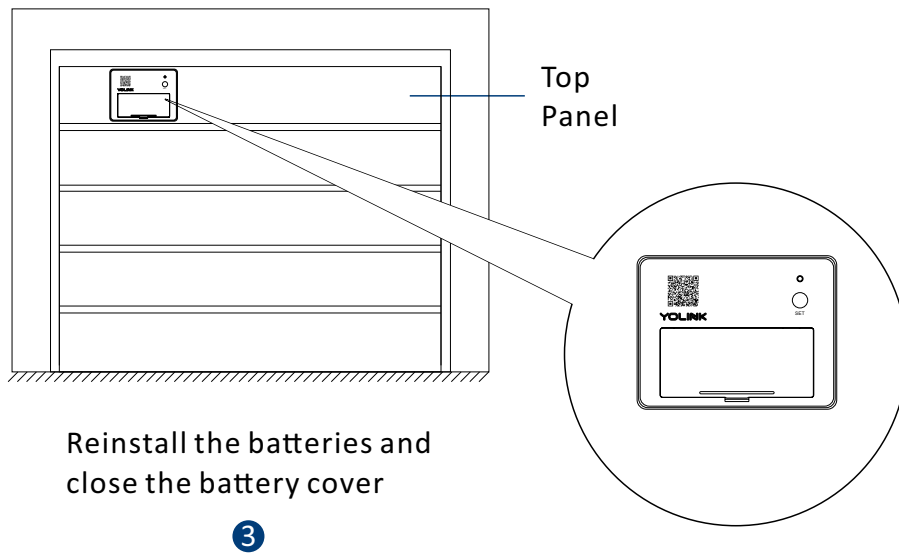

Using the YoLink App

Device page (Paired with a Sensor)

Device name

** Edit name on Details page*

Battery level


current battery level of finger

** Shown red if replacement is required*

** Tap to open/close the garage door*

Device history

Door opened and closed, logged with date & time

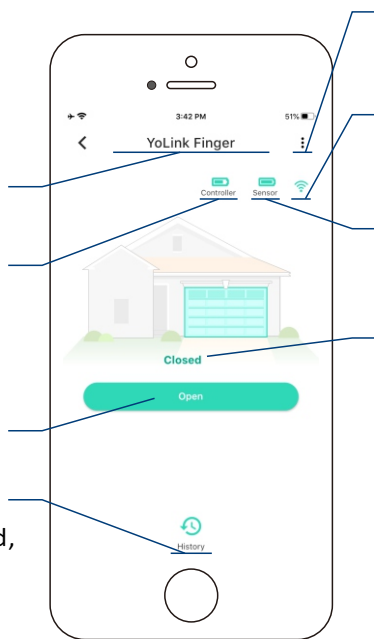

Details

** Tap to go to Details page (refer to page 21)*

Connection status

of finger/sensor and Hub (the worse one)


Battery level

current battery level of sensor


** Shown red if replacement is required*

Real-time status:

Opened or closed or inaccurate status

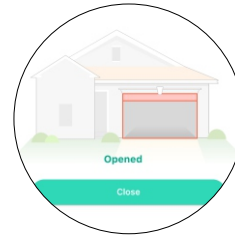

** Garage door is closed*

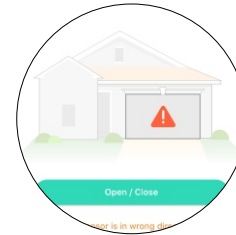

** Inaccurate status of garage door, double-check the Installation of garage door sensor*

Device page (Finger Only)


Device name

** Edit name on Details page*

** Tap to open/close the garage door*

Device history

Door controlled (no status of door), logged with date & time

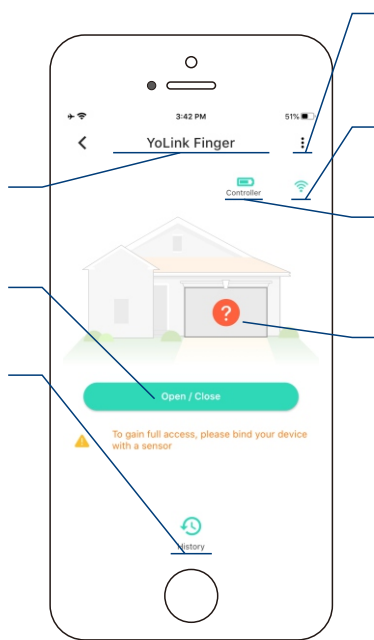

Details

** Tap to go to Details page (refer to page 23)*

Connection status

of finger and Hub

Battery level

current battery level

** Shown red if replacement is required*

Unknown status of door

** Pair with a sensor to obtain the status of door*


Device page (Sensor Only)

Device name

** Edit name on Details page*

Device history

Door opened and closed,
logged with date & time

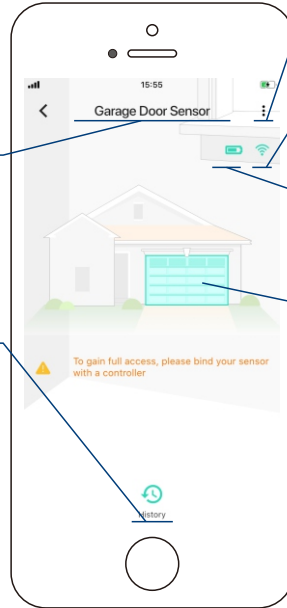

Details

** Tap to go to Details page
(refer to page 24)*

Connection status

of sensor and Hub

Battery level

current battery level

** Shown red if replacement is required*

Real-time status:

Opened or closed or inaccurate status



** Garage door is closed*



** Inaccurate status of
garage door, double-check
the Installation of garage
door sensor*

Details page (Paired with a Sensor)

Device type

Rename the device

Choose a room for device

Alert settings

** Enable or disable alerts.
Default is set to Alert When
Door is Opened or Closed*

Send notification

to you when the door
is left open for a set time
** Default is set to 30 minutes.
After the first notification, there
will be continuously notification
at a default interval of 30 minutes*

Add / remove from favorites


Device history

Door opened and closed,
logged with date & time

Battery level

current battery level
of finger

** Shown red if replacement
is required*

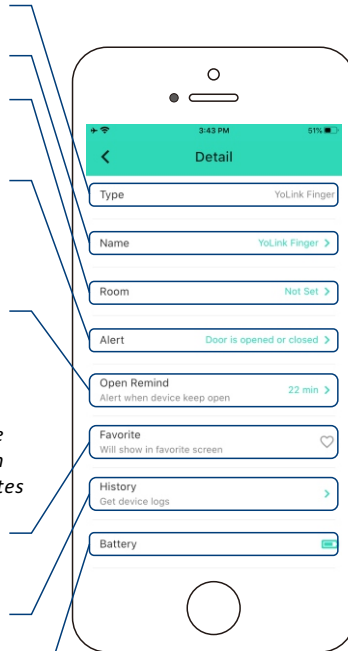

Device status

Opened or closed or
inaccurate status

Tap to pair/unpair with a sensor

** Sensor's device name indicates
the finger is paired with a sensor.
Tap to go to Details page of sensor
(refer to next page)*

Device model

Device EUI (unique)


Device SN (unique)

Connection status of finger and Hub

Firmware version

** "#### ready now" indicates a
new update is available (refer
to page 37)*

** Tap to delete the device from
your YoLink account*

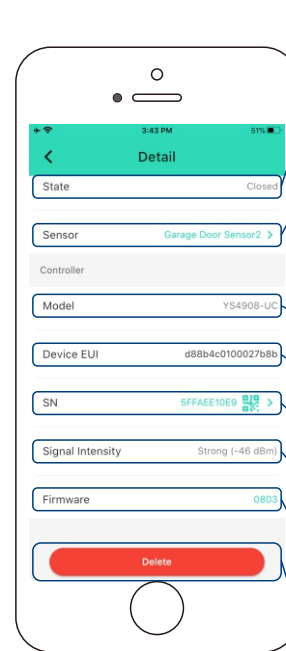

Details page of Sensor

Device type

Rename the device

Device model


Device EUI (unique)

Connection status of sensor and Hub

Firmware version

* "#### ready now" indicates a new update is available (refer to page 37)

* Tap to unpair the sensor with the finger

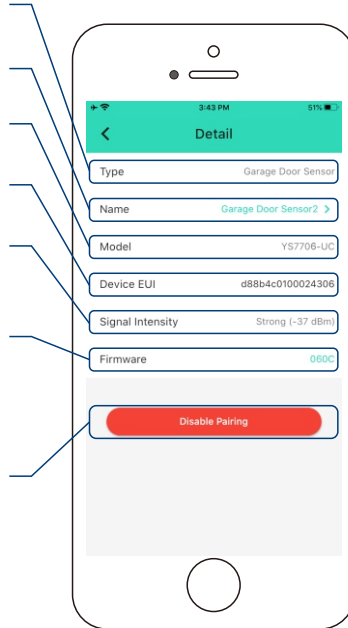

Details page (Finger Only)

Device type

Rename the device

Choose a room for device

Add / remove from favorites

Device history

Door controlled (no status of door), logged with date & time

Battery level



current battery level
** Shown red if replacement is required*

Unknown status of door

** Pair with a sensor to obtain the status of door*

Tap to pair/unpair with a sensor

** Sensor's device name indicates the finger is paired with a sensor*

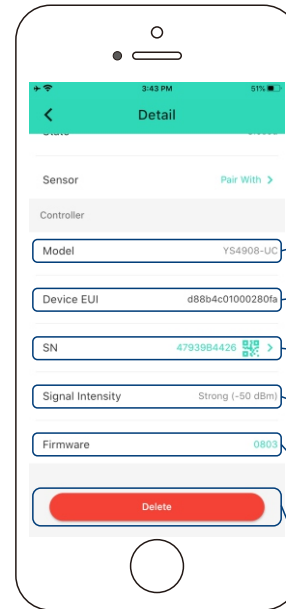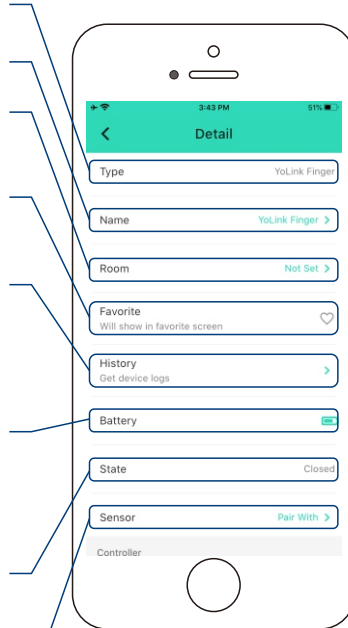

Device model

Device EUI (unique)

Device SN (unique)

Connection status of finger and Hub

Firmware version

** "#### ready now" indicates a new update is available (refer to page 38)*

** Tap to delete the device from your YoLink account*

Details page (Sensor Only)

Device type

Rename the device

Choose a room for device

Add / remove from favorites

Device history

Door opened and closed,
logged with date & time

Alert settings



** Enable or disable alerts.
Default is set to Alert When
Door is Opened or Closed*

Send notification

to you when the door
is left open for a set time
** Default is set to 30 minutes.
After the first notification, there
will be continuously notification
at a default interval of 30 minutes*

Device status

Opened or closed or
inaccurate status

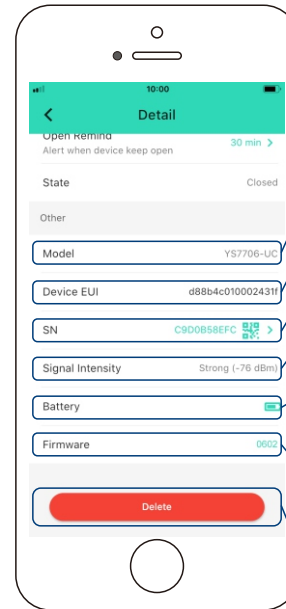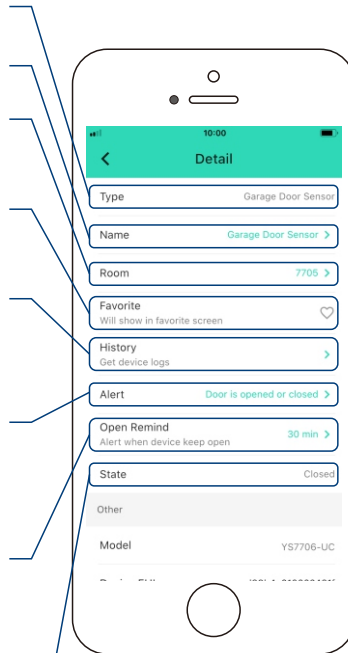

Device model

Device EUI (unique)

Device SN (unique)

Connection status of sensor and Hub

Battery level

current battery level
** Shown red if replacement is
required*




Firmware version

** "#### ready now" indicates a
new update is available (refer
to page 39)*

** Tap to delete the device from
your YoLink account*

Device Alerts

- Upon the opening or closing or left open for a set time of the garage door, an alert will be sent to your YoLink account

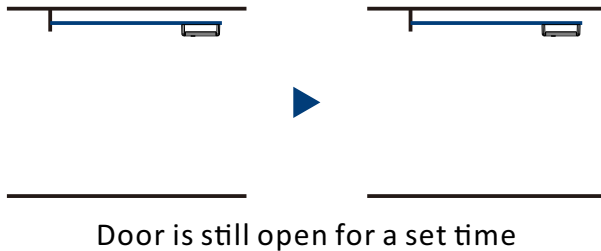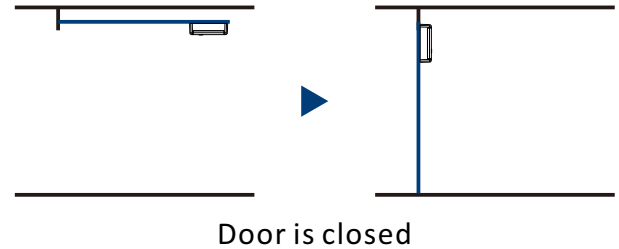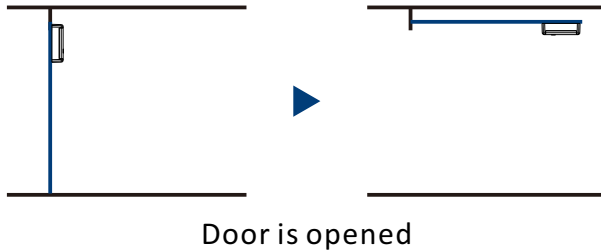

Automation

Easily set up rules for “if this then do that” functions



 
- Go to “Smart”, tap “Automation” followed by the “ + ” icon to add an automation
- Fill in details followed by the “ ✓ ” icon

** Garage Door Sensor can be set as a trigger only, YoLink Finger cannot be set as either a trigger or an action device*

Tap “ + ” button

Tap “ ☑ ” button
to enable or disable
the automation

** Click to edit the automation.
Swipe left to view the history
logs and to edit or delete the
automation*

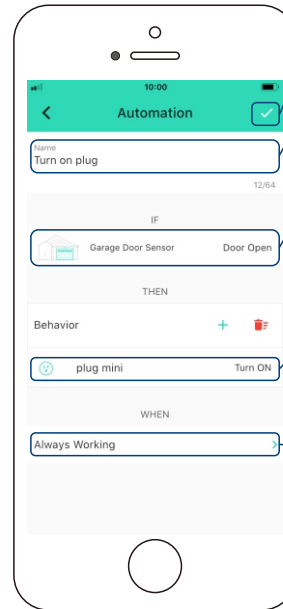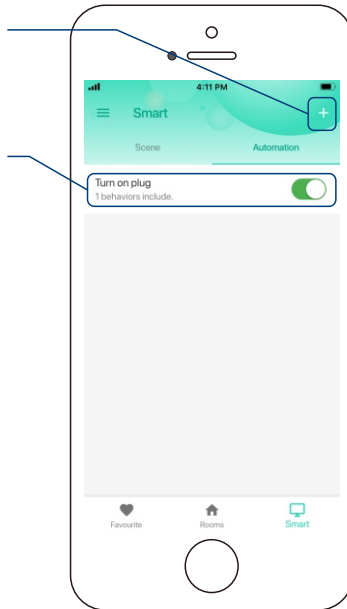

Tap to save the settings

Edit name
for the automation

Edit trigger

Edit behavior

** You must have at least one
action device, or you cannot set
a behavior*

Edit when


** Set a time range for the
automation (always or during
specific days / times)*

Voice Assistants

Connect YoLink with third-party voice assistants service to control or monitor the status of your devices through voice commands

- Tap “ ≡ ” in the upper left corner to go to My Profile
- Go to **Settings > Voice Assistants** for the applicable voice assistant integration guide

** Smart Garage Door Kit 2 is integrated with Alexa and Google Assistant only when the YoLink Finger is paired with the Garage Door Sensor 2, and is also integrated with **IFTTT.com***

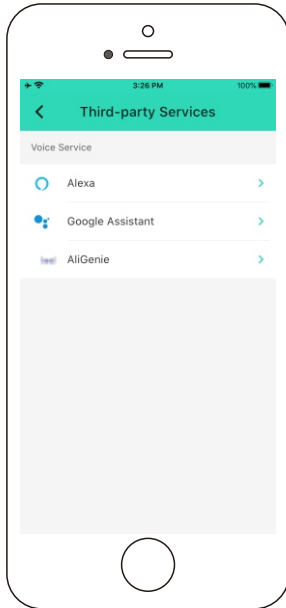

About YoLink Control

YoLink Control is our unique device-to-device control technology. Using YoLink Control, YoLink devices can be controlled without the Hub or an internet connection. (Use of YoLink Control is optional; you can use the Automation feature in the app OR use YoLink Control, but YoLink Control offers the benefit of operation without the Hub or internet connection.)


One device controls another, directly. A device that sends out commands is called the controller. A device that receives the commands is called the responder. Examples of a controller are a Door Sensor or Water Leak Sensor, while examples of a responder are a Siren or a YoLink Plug Mini

The Garage Door Sensor 2 can only work as the controller of YoLink Control, while the YoLink Finger can only work as the responder and can only set up YoLink Control with YS3603-UC YoLink Remote

YoLink Finger

Pairing

- To configure your YoLink Remote as a controller, Press and hold any ON button for 5-10 seconds until the LED quickly blinks green
- To configure a YoLink Finger as the responder. Press and hold the SET button for 5-10 seconds until the LED quickly blinks green
- Upon pairing, the LED will stop blinking (this may happen after only blinking two or three times)

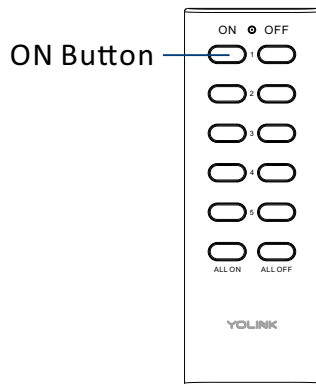


Refer to the YoLink Remote manual for more information:



YS3603-UC_YoLink Remote

Hold the first ON button on the YoLink Remote for 5-10 seconds, until the green light blinks quickly

1

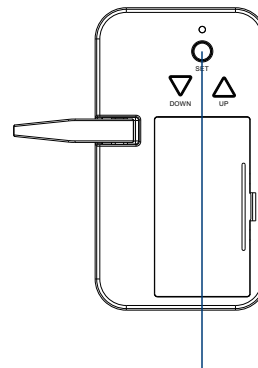


SET Button

Hold the SET button on the YoLink Finger for 5-10 seconds, until the green light blinks quickly

2

Operation

- When press the associative ON button on YoLink Remote, the YoLink Finger will click the control button of garage door once to open or close the garage door

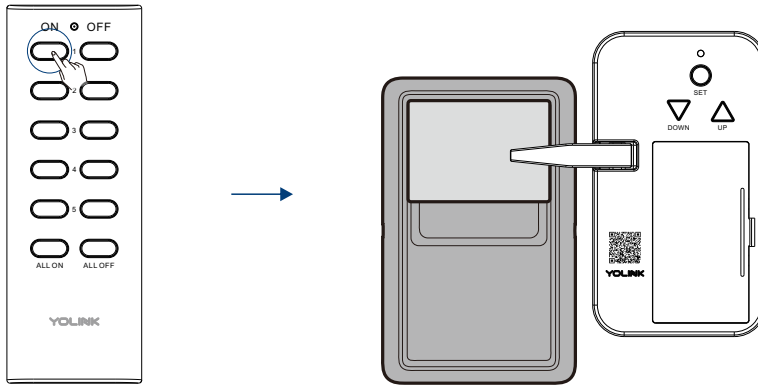


When Press the first ON button once, the YoLink Finger will click the control button once

3


Unpairing

- At the YoLink Remote (controller), press and hold any ON button for 10-15 seconds until the LED quickly blinks green, then red
- At the YoLink Finger (responder), press and hold the SET button for 10-15 seconds, until the LED quickly blinks green, then red
- Upon un-pairing, the YoLink Remote and YoLink Finger LED will stop blinking and turn off
- The YoLink Finger will no longer respond when press the associative ON button once

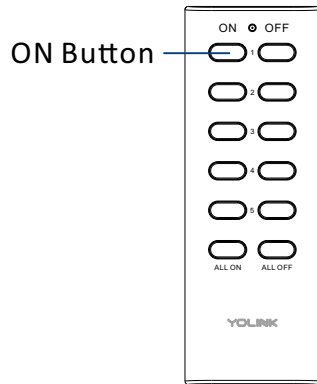

Hold the first ON button on the YoLink Remote for 10-15 seconds, until the red light blinks quickly

1

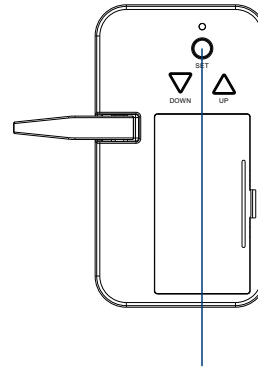

SET Button

Hold the SET button on the YoLink Finger for 10-15 seconds, until the red light blinks quickly

2


Garage Door Sensor 2

Pairing

- To configure your Garage Door Sensor 2 as a controller, turn the sensor into opened status (verify the door is opened). Press and hold the SET button for 5-10 seconds until the LED quickly blinks green
- To configure a YoLink Plug Mini as the responder. Turn on the plug using POWER button or via YoLink app (verify the Status LED of YoLink Plug Mini displays blue). Press and hold the POWER button for 5-10 seconds until the LED quickly blinks blue
- Upon pairing, the LED will stop blinking (this may happen after only blinking two or three times)

Note

- If you want to turn off the YoLink Plug Mini when the door is opened, turn off the YoLink Plug Mini first, and let it enter pairing mode
- For the same Garage Door Sensor 2 and YoLink Plug Mini, you can only choose to either turn on or turn off the YoLink Plug Mini when the door is opened
- If you want to turn on or off the YoLink Plug Mini when the door is closed, turn the sensor into closed status (verify the door is closed), and let the closed door sensor enter pairing mode
- Also for the same Garage Door Sensor 2 and YoLink Plug Mini, you can only choose to either turn on or turn off the YoLink Plug Mini when the door is closed

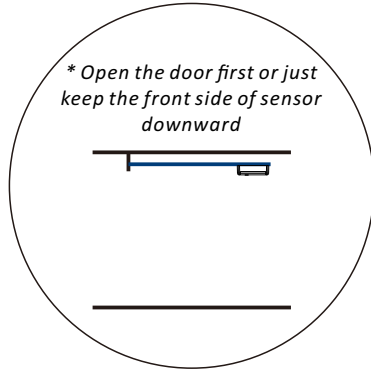


Turn on the plug

* verify the Status LED of YoLink Plug Mini displays blue. Refer to the YoLink Plug Mini manual for more information:




YS6604-UC_YoLink Plug Mini

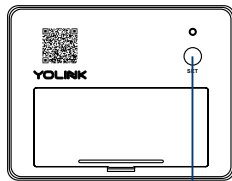

SET Button

Hold the SET button for 5-10 seconds, until the green light blinks quickly

①

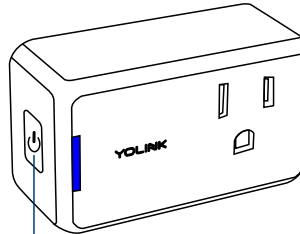


POWER Button

Hold the POWER button on the YoLink Plug Mini (**Turned on**) for 5-10 seconds, until the blue light blinks quickly

②

Operation

- When the door is opened, the YoLink Plug Mini will be immediately turned on. The plug will remain turned on until turned off using the POWER button or via the app
- More advanced sequences, controlling multiple outputs (e.g. turn off plug and activate siren) are available via the YoLink app


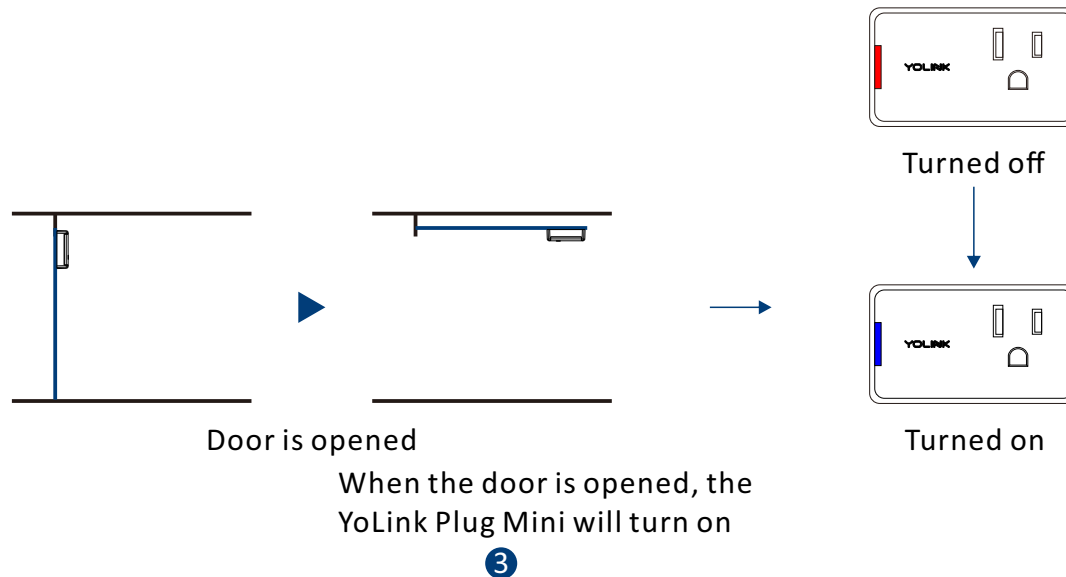


Unpairing

- At the Garage Door Sensor 2 (controller), turn the sensor into opened status (verify the door is opened), press and hold the SET button for 10-15 seconds until the LED quickly blinks green, then red
- At the YoLink Plug Mini (responder), press and hold the POWER button for 10-15 seconds, until the LED quickly blinks blue, then red
- Upon un-pairing, the Garage Door Sensor 2 LED will stop blinking and turn off, and the YoLink Plug Mini LED will stop blinking and return to the previous color (blue for turned on, red for turned off)
- The YoLink Plug Mini will no longer respond when the door is opened

Note


- If you want to unpair the Garage Door Sensor 2 (closed status) with the YoLink Plug Mini, turn the sensor into closed status (verify the door is closed), and let it enter unpairing mode

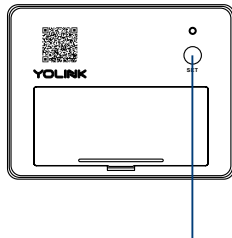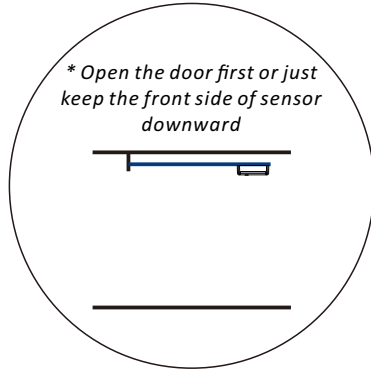

SET Button

Hold the SET button for 10-15 seconds, until the red light blinks quickly

1

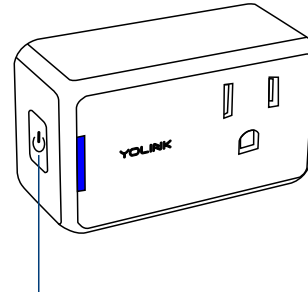

POWER Button

Hold the POWER button on the YoLink Plug Mini for 10-15 seconds, until the red light blinks quickly

2


** Plug is either turned on or turned off*

Maintenance

Firmware Update (Pair with a Sensor)

To ensure our customers have the best user experience, we highly recommend you update to the newest version firmware when an update is available

- In “Firmware” , if a new version is listed as available (#### ready now), click it to start the firmware update process
- You may use your device during the update as it is performed in the background. The LED light will slowly blink green during the update and the process will be complete within 2 minutes after the light stops blinking
- You may update the firmware of the sensor following the same procedure. For the sensor, the device's firmware will be updated automatically within 4 hours (maximum). To force an immediate update, press the SET button on the device once to make the device enter update mode

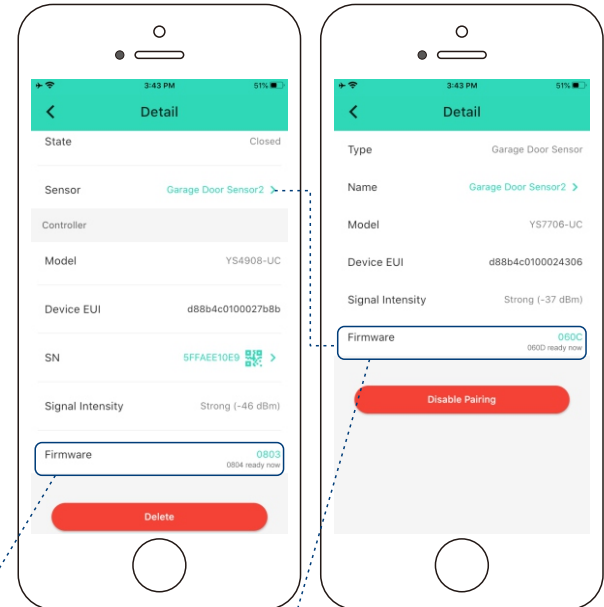


Firmware 0803
0804 ready now

Firmware 060C
060D ready now

Firmware Update (Finger Only)

To ensure our customers have the best user experience, we highly recommend you update to the newest version firmware when an update is available

- In “Firmware”, if a new version is listed as available (#### ready now), click it to start the firmware update process
- You may use your device during the update as it is performed in the background. The LED light will slowly blink green during the update and the process will be complete within 2 minutes after the light stops blinking

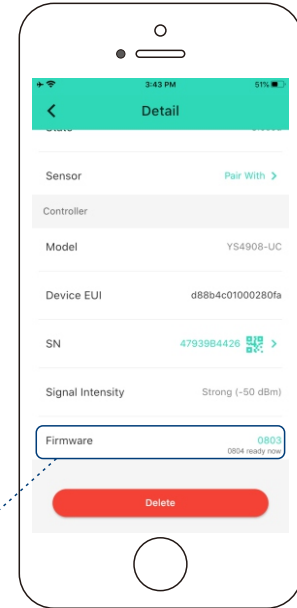


Firmware 0803
0804 ready now

Firmware Update (Sensor Only)

To ensure our customers have the best user experience, we highly recommend you update to the newest version firmware when an update is available


- In “Firmware”, if a new version is listed as available (#### ready now), click it to start the firmware update process
- The device's firmware will be updated automatically within 4 hours (maximum). To force an immediate update, press the SET button on the device once to make the device enter update mode
- You may use your device during the update as it is performed in the background. The LED light will slowly blink green during the update and the process will be complete within 2 minutes after the light stops blinking

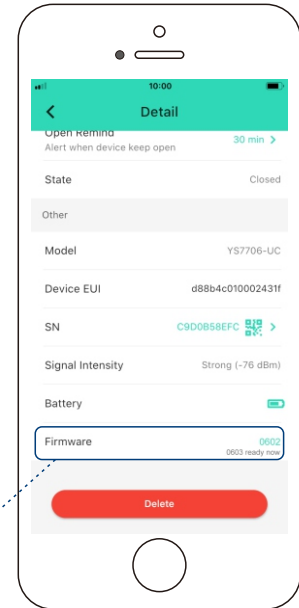


Factory Reset

Factory reset will erase all of your settings and restore it to factory defaults. After the factory reset, your device will remain in your Yolink account

- Hold the SET button for 20-25 seconds until the status light blinks red and green alternately, then, release the button (*Hold the SET button longer than 25 seconds will ABORT the factory reset operation*)
- Factory reset will be complete when the status light stops blinking
- You may factory reset the sensor following the same procedure

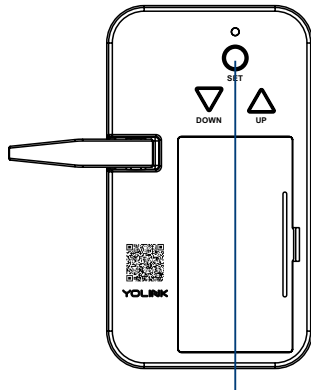


SET Button

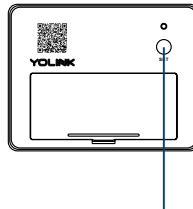


SET Button

Replacing the Batteries (YoLink Finger)


- Remove the battery cover by gently prying with your fingertip or tool at the edge as shown
- Remove the old batteries
- Install two new alkaline non-rechargeable AA batteries, and then close the battery cover
- Using the app, check the online status of the finger and verify there is no low-battery indicator
- Note: do not mix old and new batteries

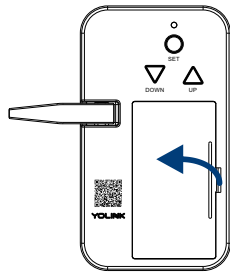


Remove the battery cover

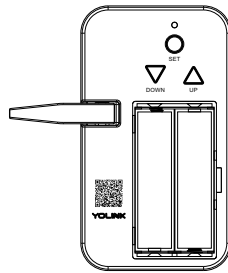

Remove the old batteries

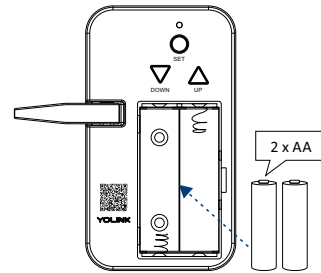


Install two new AA batteries

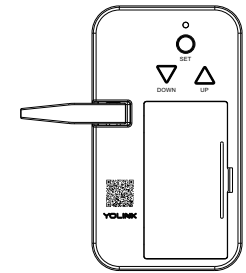

Close the battery cover

Replacing the Batteries (Garage Door Sensor 2)

- Remove the battery cover by gently prying with your fingertip or tool at the edge as shown
- Remove the old batteries
- Install two new alkaline non-rechargeable AAA batteries, and then close the battery cover
- Using the app, check the online status of the sensor and verify there is no low-battery indicator
- Note: do not mix old and new batteries

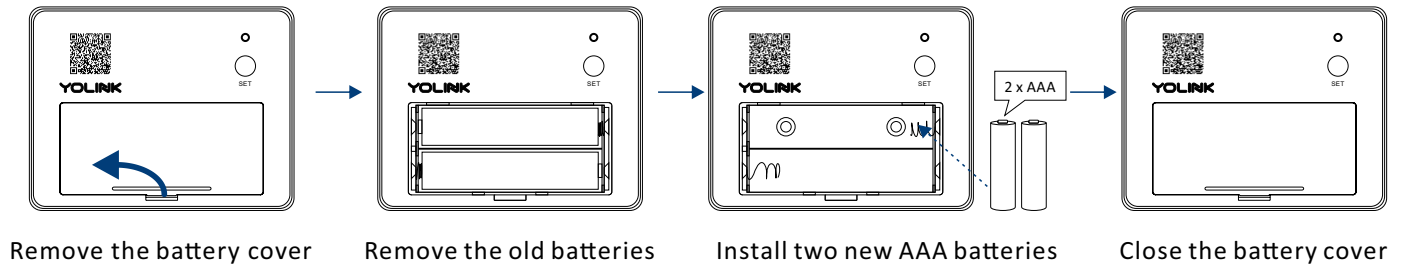

Specifications

YoLink Finger

Voltage:	3V DC (2 - AA battery)
-----------------	------------------------

Dimensions:	3.82 x 3.19 x 0.87 inch (L x W x D)
--------------------	-------------------------------------

Environment:	Working Temperature: 32°F - 122°F (0°C - 50°C) Working Humidity: 10% - 90% non-condensing
---------------------	--

Garage Door Sensor 2

Voltage:	3V DC (2 - AAA battery)
-----------------	-------------------------

Dimensions:	2.56 x 1.97 x 0.69 inch (L x W x D)
--------------------	-------------------------------------

Environment:	Working Temperature: 32°F - 122°F (0°C - 50°C) Working Humidity: 10% - 90% non-condensing
---------------------	--

YoLink Finger Troubleshooting

Hardware:

Batteries: Batteries should be brand new, name brand “AA” alkaline type. Refer to “Warnings” Section on page 46

Symptom:

1. Device is offline

- If finger is not connected to the cloud, press the SET button on finger once
- If Hub is offline, reconnect the Hub to the Internet and press the SET button on finger once
- If Hub is not on, power on the Hub again and press the SET button on finger once
- If finger is out of range with Hub, relocating the Hub may be required
- For a device with low-battery indicators or alerts or if the condition of the batteries is in question, replace the batteries with 2 premium “AA” alkaline batteries

2. Other issues, contact customer service, **1-949-825-5958 (M-F 9am - 5pm PST)**

Garage Door Sensor 2 Troubleshooting

Hardware:

Batteries: Batteries should be brand new, name brand “AAA” alkaline type. Refer to “Warnings” Section on page 46

Symptom:

1. Device is offline or no alert received from door opened/closed events

- If sensor is not connected to the cloud, press the SET button on sensor once
- If Hub is offline, reconnect the Hub to the Internet and press the SET button on sensor once
- If Hub is not on, power on the Hub again and press the SET button on sensor once
- If sensor is out of range with Hub, relocating the sensor or Hub may be required
- For a device with low-battery indicators or alerts or if the condition of the batteries is in question, replace the batteries with 2 premium “AAA” alkaline batteries

2. Other issues, contact customer service, 1-949-825-5958 (M-F 9am - 5pm PST)

Warning

- Please install, operate and maintain the YoLink Finger and Garage Door Sensor 2 only as directed herein. Failure to follow the information in this manual can void the warranty and result in malfunctions and/or equipment failure
- YoLink Finger and Garage Door Sensor 2 are not waterproof and are designed and intended only for indoor use. Subjecting these two devices to outdoor environment conditions such as direct sunlight, extreme hot or cold temperatures, rain, water and/or condensation can damage the device and will void the warranty. Refer to Specifications (page 43) for the device environmental limitations
- If your YoLink Finger or Garage Door Sensor gets dirty, please clean it by wiping it down with a clean, dry cloth. Do not use strong chemicals or detergents, which may discolor or damage the exterior and/or damage the electronics, voiding the warranty
- Do not install or use this device where it will be subjected to physical impacts and/or strong vibration. Physical damage is not covered by the warranty
- Power the finger only with two AA batteries, and power the sensor only with two AAA batteries (see below, regarding batteries)
- Use only new, name brand, alkaline non-rechargeable AA or AAA batteries
- Do not use rechargeable batteries
- Do not use zinc blend batteries
- Do not mix new and old batteries

- Do not puncture or damage batteries. Leakage can cause harm on skin contact, and is toxic if ingested
- Do not dispose of batteries in fire as they may explode! Please follow local battery disposal procedures
- To avoid damaging the device, if storing the device for an extended period, remove the batteries
- Please contact Customer Service before attempting to repair, disassemble or modify the device, any of which can void the warranty and permanently damage the device

If you have any difficulties installing or using your Smart Garage Door Kit 2, please contact our Customer Service department during business hours:

US Live Tech Support: **1-949-825-5958** M-F 9am - 5pm PST

Email: **service@yosmart.com**

YoSmart Inc. 17165 Von Karman Avenue, Suite 105, Irvine, CA 92614

Warranty 2 Year Limited Electrical Warranty

YoSmart warrants to the original residential user of this product that it will be free from defects in materials and workmanship, under normal use, for 2 years from the date of purchase. User must provide a copy of original purchase receipt. This warranty **does not cover** abuse or misused products or products used in commercial applications. This warranty does not apply to Smart Garage Door Kit2s that have been improperly installed, modified, put to a use other than designed, or subjected to acts of God (such as floods, lightning, earthquakes, etc.). This warranty is limited to repair or replacement of the Smart Garage Door Kit 2 only at YoSmart's sole discretion. YoSmart will NOT be liable for the cost of installing, removing, nor reinstalling this product, nor direct, indirect, or consequential damages to persons or property resulting from the use of this product. This warranty only covers the cost of replacement parts or replacement units, it does not cover shipping & handling fees

To implement this warranty please give us a call during business hours at 1-949-825-5958, or visit www.yosmart.com

Copyright 2020. YoSmart, Inc. All rights reserved

FCC Statement

This equipment has been tested and found to comply with the limits for a Class B digital device, pursuant to part 15 of the FCC Rules. These limits are designed to provide reasonable protection against harmful interference in a residential installation. This equipment generates, uses and can radiate radio frequency energy and, if not installed and used in accordance with the instructions, may cause harmful interference to radio communications. However, there is no guarantee that interference will not occur in a particular installation. If this equipment does cause harmful interference to radio or television reception, which can be determined by turning the equipment off and on, the user is encouraged to try to correct the interference by one or more of the following measures:

- Reorient or relocate the receiving antenna
- Increase the separation between the equipment and receiver
- Connect the equipment into an outlet on a circuit different from that to which the receiver is connected
- Consult the dealer or an experienced radio / TV technician for help

This device complies with part 15 of the FCC Rules. Operation is subject to the following two conditions:

- 1) This device may not cause harmful interference
- 2) This device must accept any interference received, including interference that may cause undesired operation. Any changes or modifications not expressly approved by the party responsible for compliance could void the user's authority to operate the equipment

Note: The manufacturer is not responsible for any radio or TV interference caused by unauthorized modifications to this equipment. Such modifications could void the user's authority to operate the equipment.

FCC RF Radiation Exposure Statement

This equipment complies with FCC RF radiation exposure limits set forth for an uncontrolled environment. This device and its antenna must not be co-located or operating in conjunction with any other antenna or transmitter.

“To comply with FCC RF exposure compliance requirements, this grant is applicable to only Mobile Configurations. The antennas used for this transmitter must be installed to provide a separation distance of at least 20 cm from all persons and must not be co-located or operating in conjunction with any other antenna or transmitter.”