




FlowSmart *Meter*

YS5007-UC

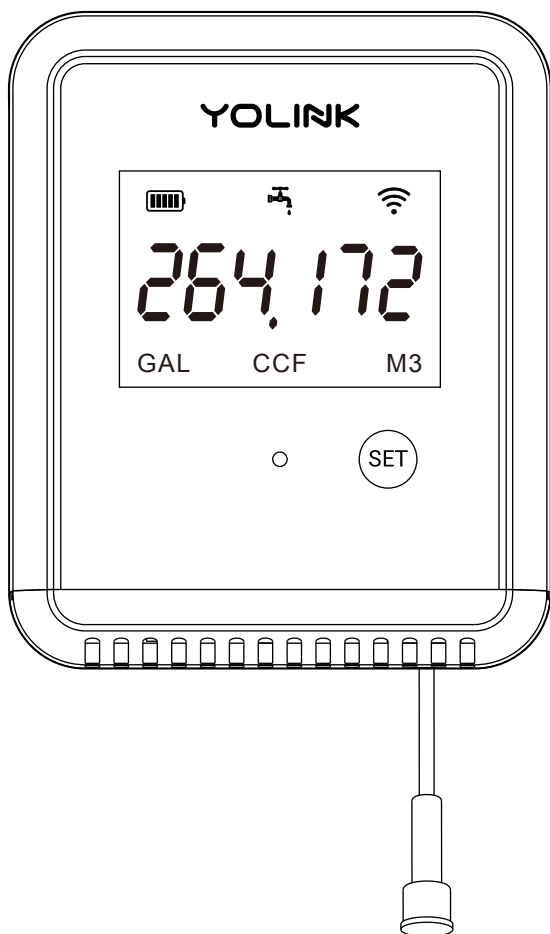

Installation & User Guide

Revision Jun. 11, 2026

TABLE OF CONTENTS

A . Welcome!	01
B . Before You Begin	02
C . In the Box	04
D . Required Items	06
E . Get to Know Your FlowSmart Meter	08

F . Install the App	11
G . Add Your FlowSmart Meter to the App	12
H . Install the FlowSmart Meter	14
I . Install the Water Meter	19
J . Final Connections & Power-Up	25

K . App Functions: Device Screen	26
L . App Functions: Device Details Screen	27
M . App Functions: Alert Settings Screen	28
N . App Functions: Smart - Automation	29
O . Factory Reset	30

P . Firmware Update	31
Q . Battery Replacement	32
R . Specifications	36
S . Troubleshooting	37
T . Warnings	38

U . Warranty	40
V . FCC Statement	41
W . Contact Us	43



Welcome!

Thank you for purchasing YoLink products! We appreciate you trusting YoLink for your smart home & automation needs. Your 100% satisfaction is our goal. If you experience any problems with your installation, with our products or if you have any questions that this manual does not answer, please contact us right away. See the Contact Us section for more info.

Thank you!

YoLink Customer Support

User Guide Conventions

The following icons are used in this guide to convey specific types of information:



Very important information
(can save you time!)



Good to know info but may not
apply to you

B Before You Begin

Visit our FlowSmart Meter support page on our website, for the latest installation guides, additional resources, information and videos by visiting:

<https://www.yosmart.com/support/YS5007-UC>

Or by scanning the QR code:



Download the most current version of the user guide by scanning the QR code:



B Before You Begin




Your FlowSmart *Meter* connects to the internet via a YoLink hub, and it does not connect directly to your WiFi or local network. In order for remote access to the device from the app, and for full functionality, a hub is required. This guide assumes the YoLink app has been installed on your smartphone, and a YoLink hub is installed and online (or your location, apartment, condo, etcetera, is already served by a YoLink wireless network).




In the Box


YS5007 Items:

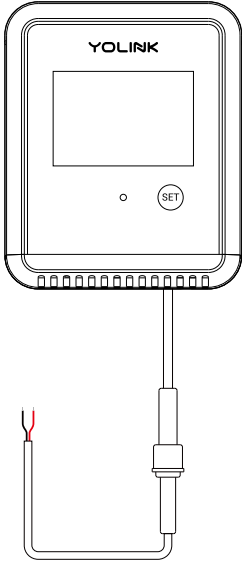


FlowSmart *Meter*

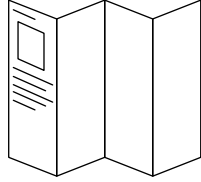


Quick Start Guide

 

2 x AA Lithium Batteries
(Pre-installed)

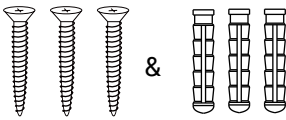

Phillips Screws (3) &
Plastic Anchors (3)

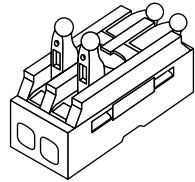


Connector (Pre-Installed)




In the Box, Continued


Water Meter Kit Items:

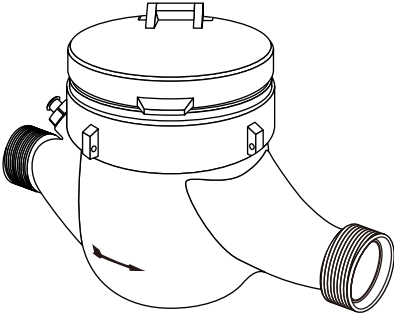


Water Meter

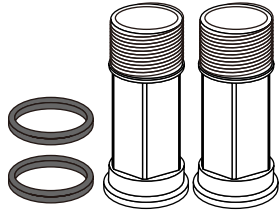

Rubber Gasket (2) &
Spud Coupling (2)

 


Nut (2)

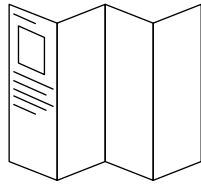


Quick Start Guide

D Required Items


These tools or items may be required:

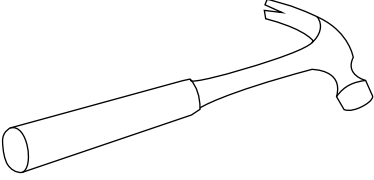


Hammer

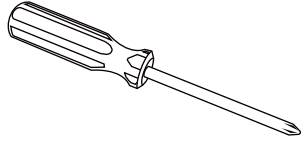

Medium Phillips Screwdriver

 

Nail or Self Tapping Screws

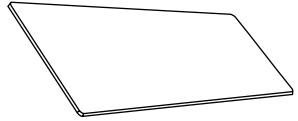


Double-sided Mounting Tape


D

Required Items, Continued

These items may be required to install the water meter:

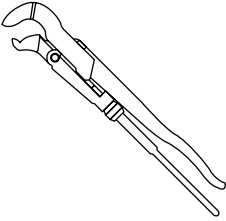


Pipe Wrench

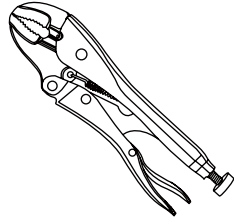


Locking Pliers




Copper Pipe Cutting Tool

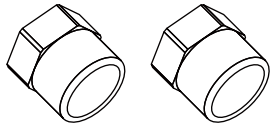

Female NPT Pipe Fitting (2)

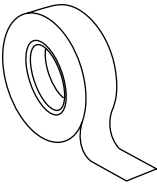


Thread Seal Tape

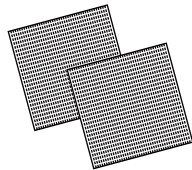


Sandpaper

E

Get to Know Your FlowSmart Meter

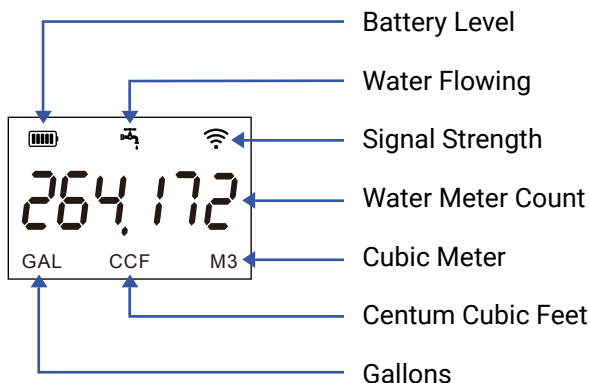

Press the Set button to cycle between display modes (Gallon/Centum Cubic Feet/Cubic Meter)

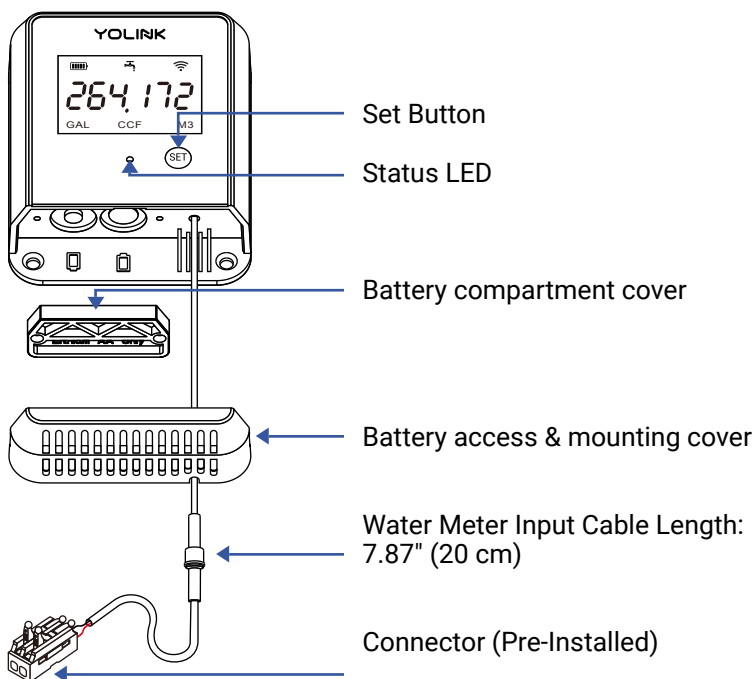

E

Get to Know Your FlowSmart Meter, Continued

LED Behaviors



Blinking Red Once, then Green Once
Device Start-Up



Blinking Red And Green Alternately
Restoring to Factory Defaults



Fast Blinking Green
Control-D2D Pairing in Progress



Fast Blinking Red
Control-D2D Unpairing in Progress



Blinking Green
Connecting to Cloud or Functioning Normally



Slow Blinking Green
Updating



Blinking Red Once
Device Alerts




or



Fast Blinking Red Every 30 Seconds or Fast Blinking Red 5 Times when pressing the SET Button
Batteries are Low, Please Replace the Batteries



Get to Know Your Water Meter

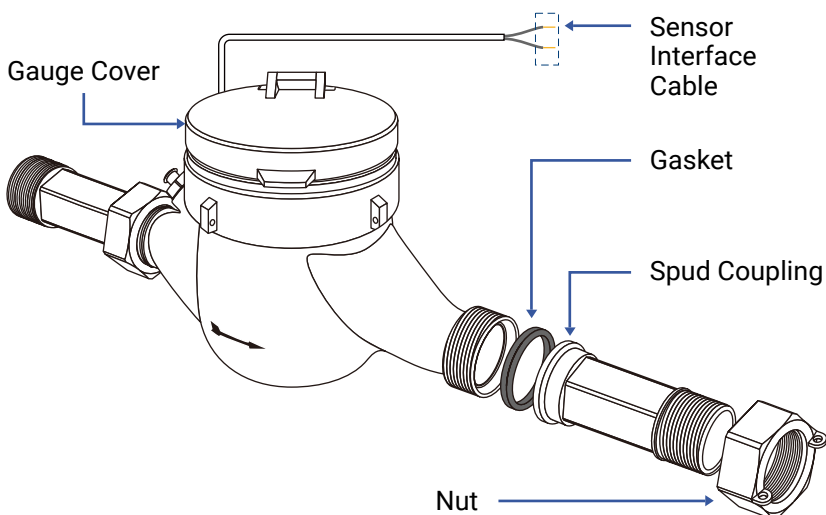

E

Get to Know Your FlowSmart Meter, Continued

How to read the meter gauge:

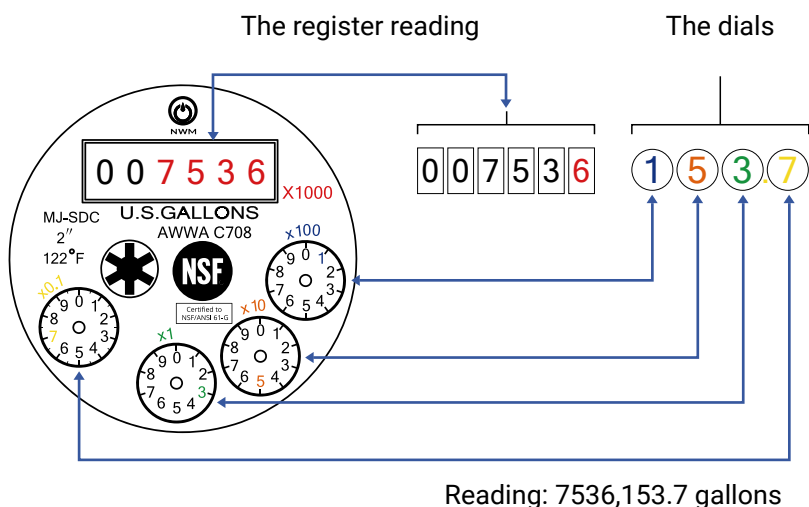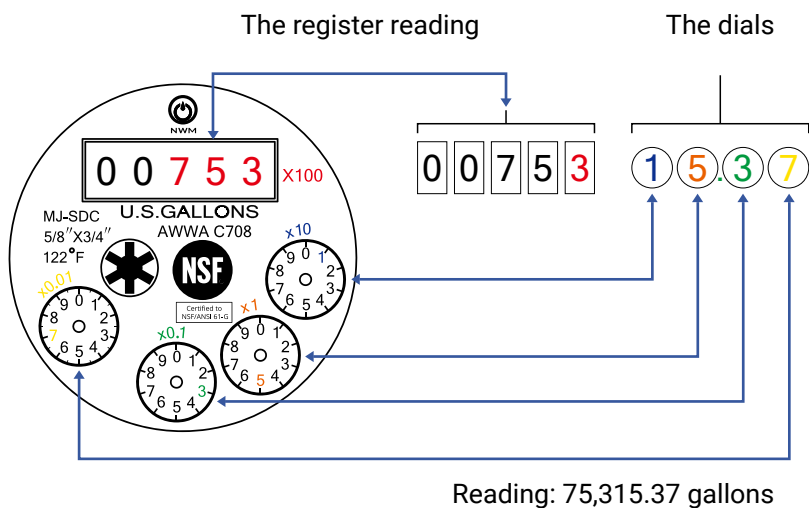

To configure 1.5-inch and 2-inch water meters (provided by YoLink), adjust the water meter equivalent setting to '1', on YoLink App. This value is set to '1/10' by default.



Install the App

If you are new to YoLink, please install the app on your phone or tablet, if you have not already. Otherwise, please proceed to the next section.

Scan the appropriate QR code below or find the “YoLink app” on the appropriate app store.



Apple phone/tablet
iOS 9.0 or higher



Android phone/tablet
6.0 or higher

Open the app and tap **Sign up for an account**. You will be required to provide a username and a password. Follow the instructions, to set up a new account. Allow notifications, when prompted.

You will immediately receive a welcome email from no-reply@yosmart.com with some helpful information. Please mark the yosmart.com domain as safe, to ensure you receive important messages in the future.


Log in to the app using your new username and password.

The app opens to the **Favorite** screen. This is where your favorite devices and scenes will be shown. You can organize your devices by room, in the **Rooms** screen, later.





Add Your FlowSmart Meter to the App

1. Tap **Add Device** (if shown) or tap the scanner icon:

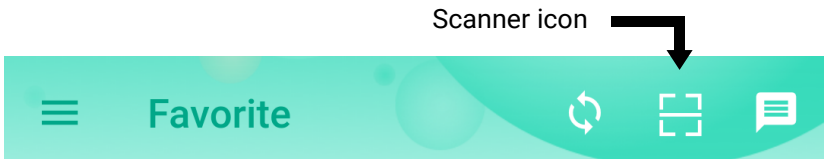

2. Approve access to your phone's camera, if requested. A viewfinder will be shown on the app.

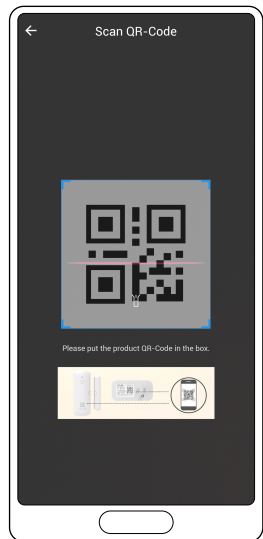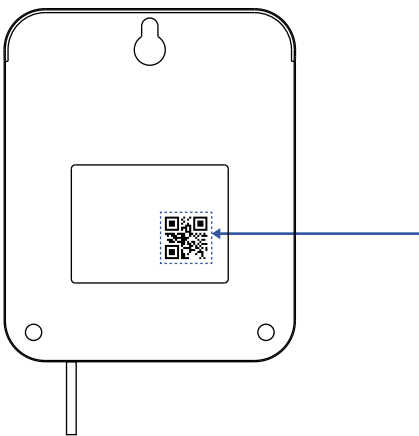


3. Hold the phone over the QR code so that the code appears in the viewfinder. If successful, the **Add Device** screen will be displayed.

G

Add Your FlowSmart Meter to the App, Continued

4. You can change the device name and assign it to a room later. Tap **Bind device**.

5. If successful, the screen will appear as shown. Tap **Done**.

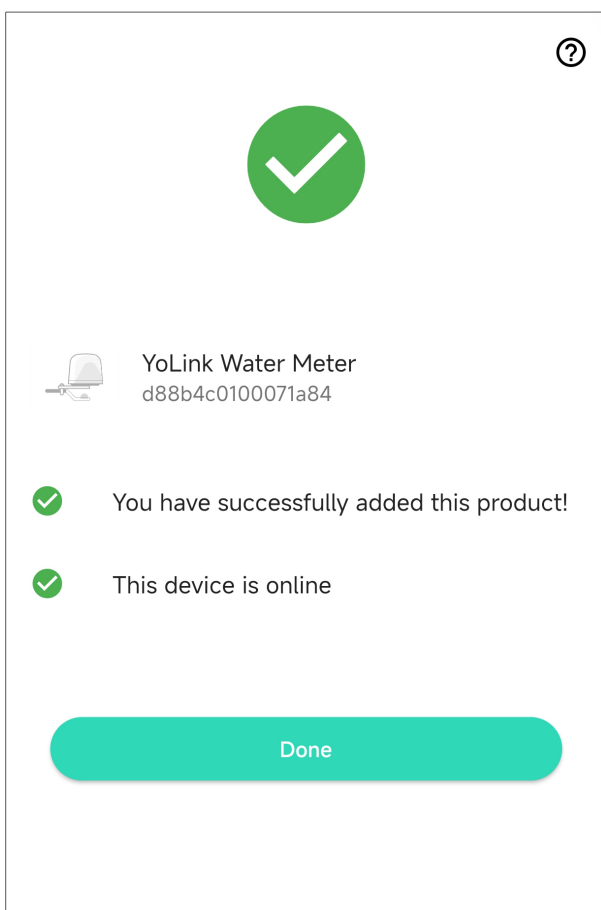



Install the FlowSmart Meter

Preparing for installation

Determine where you will install your FlowSmart Meter. Typically, it should be wall-mounted, no farther away from the meter than the length of the cable allows.

Determine how you will secure the FlowSmart Meter to the wall. It can be mounted several ways:


- Hang the FlowSmart Meter from a nail, screw, or hook, using the “keyhole” notch, or utilize all three mounting holes for a more secure method (recommended).
- Secure the FlowSmart Meter to a wall or vertical surface using alternative fasteners or adhesive methods, such as double-sided mounting tape or Velcro (not included).



Install the FlowSmart Meter, Continued

Wall-mounting method

1. The FlowSmart *Meter* has a standard "keyhole" notch on the rear, at the top. This allows for hanging the FlowSmart *Meter* from a nail or screw. Additionally, there are two more mounting holes at the bottom of the FlowSmart *Meter*. The use of the second and third holes will result in a much more secure mounting method. These holes are hidden behind the removeable access cover. This cover affords protection against tampering and device removal and their use is highly recommended. Refer to the figure below for instructions on how to remove the cover from the bottom of the FlowSmart *Meter*.

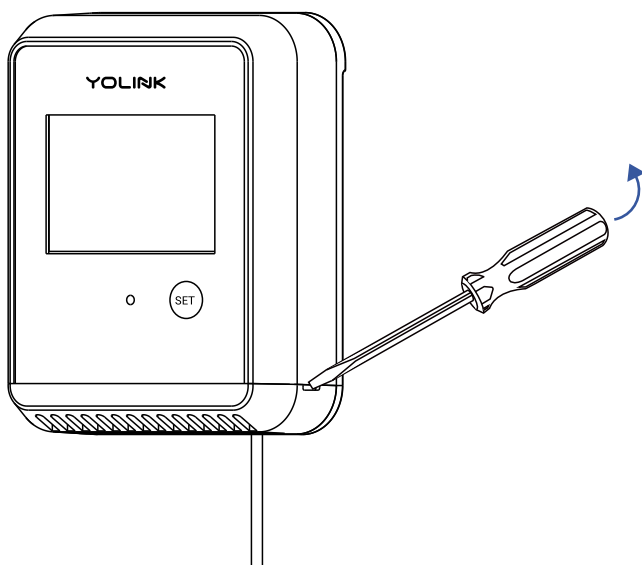

Insert the tip of a slotted screwdriver and then gently twist it to pry off the battery access cover




Install the FlowSmart Meter, Continued

2. If desired, mark or otherwise identify the exact position of your FlowSmart Meter on the wall, including one or all of the mounting points (keyhole at top, two screw holes at bottom). Use a level tool to ensure your FlowSmart Meter will be level, if desired.

3. Choose mounting hardware appropriate for the surface type. The included hardware (screws and plastic anchors) should be suitable for most types of surfaces, but substitute for another type, as required. Using plastic anchors, or another mounting hardware, as required, insert the topmost nail or screw into the wall, leaving a gap between the nail/screw head and the surface, as shown.

about 1/8th inch or 3 mm

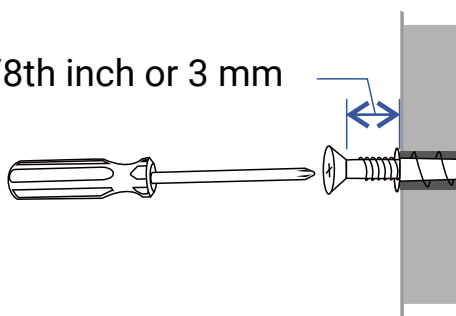



Install the FlowSmart Meter, Continued

- 4.** Hang the FlowSmart Meter from this topmost screw or nail. If you will not utilize the second and third mounting points, ensure the Meter is secure, and proceed to Final Connections & Power-up
- 5.** If not already performed in a previous step, verify the FlowSmart Meter is level prior to pre-drilling or inserting holes for the lower mounting points. Insert one or both screws through the lower mounting points of the Meter and into the wall or anchor, tightening them and securing the Meter to the wall.
- 6.** Replace the access cover by pushing it back into place, after aligning the tab on each end with the matching slot in the Meter. Proceed to Final Connections & Testing.



Install the FlowSmart Meter, Continued

Other mounting methods

Follow the manufacturer instructions if mounting your FlowSmart Meter by alternative methods, such as with Velcro or double-sided mounting tape. If using an adhesive method, is it recommended to clean and dry the surface, first. Consider the possibility of replacing or relocating the FlowSmart Meter later, when choosing alternative mounting methods.

These steps are to be performed after the installation of the water meter. Please refer to the water meter's quick start guide or full installation instructions, to complete the installation of the water meter, before returning to this section.



Install the Water Meter



The flow meter should be installed by qualified personnel using industry best practices and in conformance with all applicable building codes. Improper installation may void the warranty, and may result in malfunction, personal injury, or property damage.

Installation Requirements

- Pressure:** The meter is not rated for systems operating at pressures above 140 PSI.
- Flushing:** Thoroughly flush the service line upstream of the meter to remove dirt and debris. For new construction projects, install a spacer pipe in the designated meter location, until the water system is thoroughly flushed.
- Fittings:** Use the supplied male NPT couplers when installing the meter. Do not attempt to connect standard NPT fittings directly to the meter body (male NPS thread).






Install the Water Meter, Continued

Shut-off Valves: High quality, low pressure loss shut-off valves are recommended to be installed both upstream and downstream of the meter. Valves must be installed outside of minimum straight pipe distances (see “Straight Pipe Requirements”)

Clearances: The meter should be installed in a location that is accessible for reading and service with 8” of clearance above dial and 3” on all other sides.


Orientation: For proper operation, the flow meter must be installed horizontally with the dial facing upwards. It cannot be installed in vertical pipe sections.

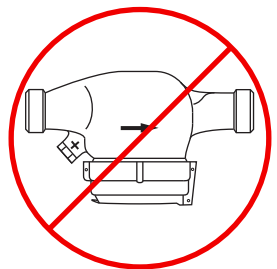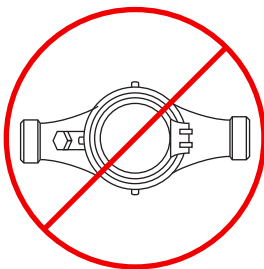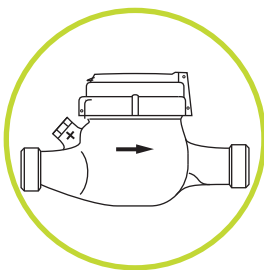



Install the Water Meter, Continued

Flow Direction: The meter must be installed with the arrow located on the meter body pointing in the direction of water flow.

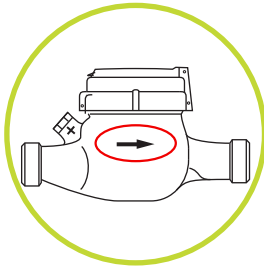

Straight Pipe Requirements: To maintain rated accuracy, the meter must be installed with 10x the diameter of straight pipe upstream (no bends, fittings, valves, etc.) and 5x the diameter of straight pipe downstream.


Example: A $\frac{3}{4}$ " meter must have 7 $\frac{1}{2}$ " of straight pipe upstream and 3 $\frac{3}{4}$ " downstream.



Install the Water Meter, Continued

Install the water meter.

1. Identify a suitable location in the piping that satisfies all installation requirements.
2. Assemble the supplied spuds/couplings on the meter:

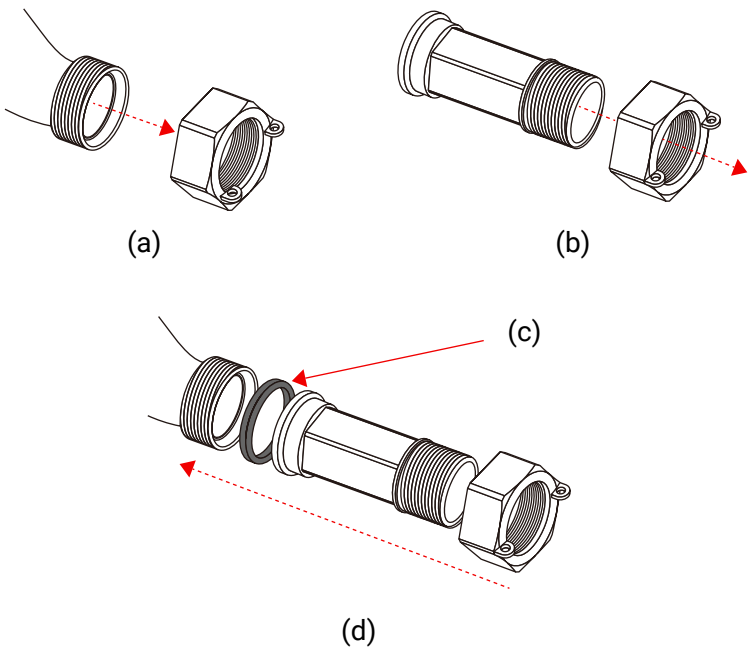


- a. Remove a nut from one side of the meter.
- b. Insert a coupling through the nut.
- c. Place a gasket inside the nut (on top of the coupling flange).
- d. Attach this coupling/gasket/nut assembly onto the meter, by screwing the nut onto the meter.
- e. Hand-tighten.




Install the Water Meter, Continued

- 3.** Loose-fit the female pipe fittings (not provided) onto the meter couplings.
- 4.** Holding the meter against the pipe at the installation location, mark the overall length.
- 5.** Cut the piping, using an appropriate pipe-cutting tool, per the tool manufacturer's instructions.
- 6.** Ensure the pipe ends are clean, dry, and free of burrs. Use sandpaper, then a clean dry cloth, to smooth and clean the pipe ends.
- 7.** Remove the female NPT fittings and permanently affix them to the piping [braze, ProPress, SharkBite, etc.] per the fittings manufacturer's instructions.

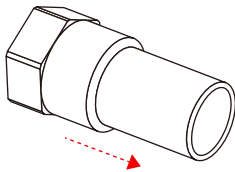

- 8.** Remove the couplings from the meter.
- 9.** Apply thread sealing tape to the (male) threads of the couplings, covering a minimum of five threads.

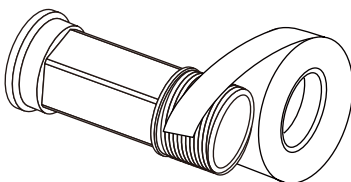




Install the Water Meter, Continued

10. Insert the couplings onto the fittings. Hand-tighten.

11. Use pipe wrenches to tighten an additional half to one full turn. ****Do not overtighten!****

12. With the dial facing up and with the arrow pointing in the flow direction, hand-tighten the coupling nuts to the meter. (The couplings have a gasket connection; do not use thread sealing tape or pipe dope on the meter's threads.)

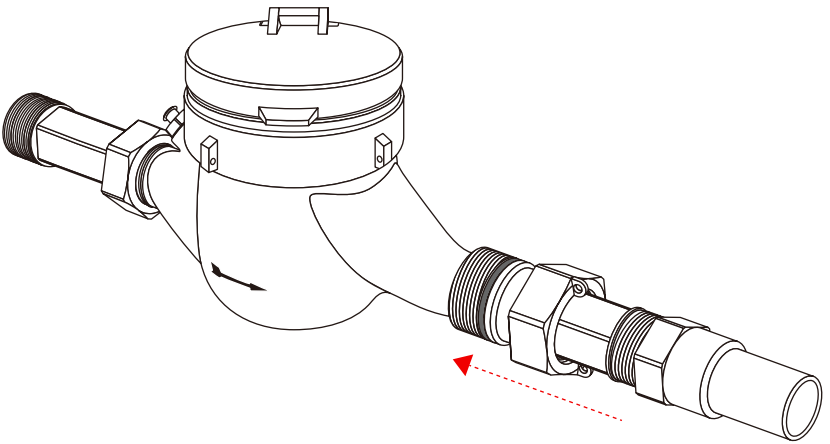

13. Use a pipe wrench to tighten the coupling nuts and the fittings an additional quarter turn, to seal the gaskets. ****Do not overtighten!****

14. Open shut-off valves, to allow water to flow.

15. Observe all connections, to ensure they are properly sealed, with no leaks.




Final Connections & Power-Up

- 1.** Connect the Meter's cable to the water meter. This is a cable with a 2-pin connector that should be connected to the Meter already, on one end, and with "lever" type wire connectors on the other end. The two bare wires on the water meter's cable must be connected to the lever connectors. (Lever connectors have a lever on each side, one for the wire coming in, and one for the wire going out. Lifting the lever allows the wire to be removed, while depressing it secures the wire in place.) Lift the levers on the empty side of the connectors, preparing them to accept wires. Matching the wire color on the wires already on the connector, insert the wires of the water meter cable into the connector, black wire to black wire, red wire to red wire. Holding the wires in place, depress the two levers. The levers should make an audible clicking sound. Gently tug on each wire, to ensure a good connection.
- 2.** The FlowSmart Meter will be offline until it is turned on and it wirelessly connects to the YoLink Hub. Turn on the Meter by pressing the SET button until you see the LED blink red, then green, which indicates the Meter has connected to the cloud.
- 3.** In the app, verify the Meter is indicated as online.



App Functions: Device Screen

In the app, tap on your FlowSmart Meter icon. Your FlowSmart Meter main screen should be similar to the one shown below.

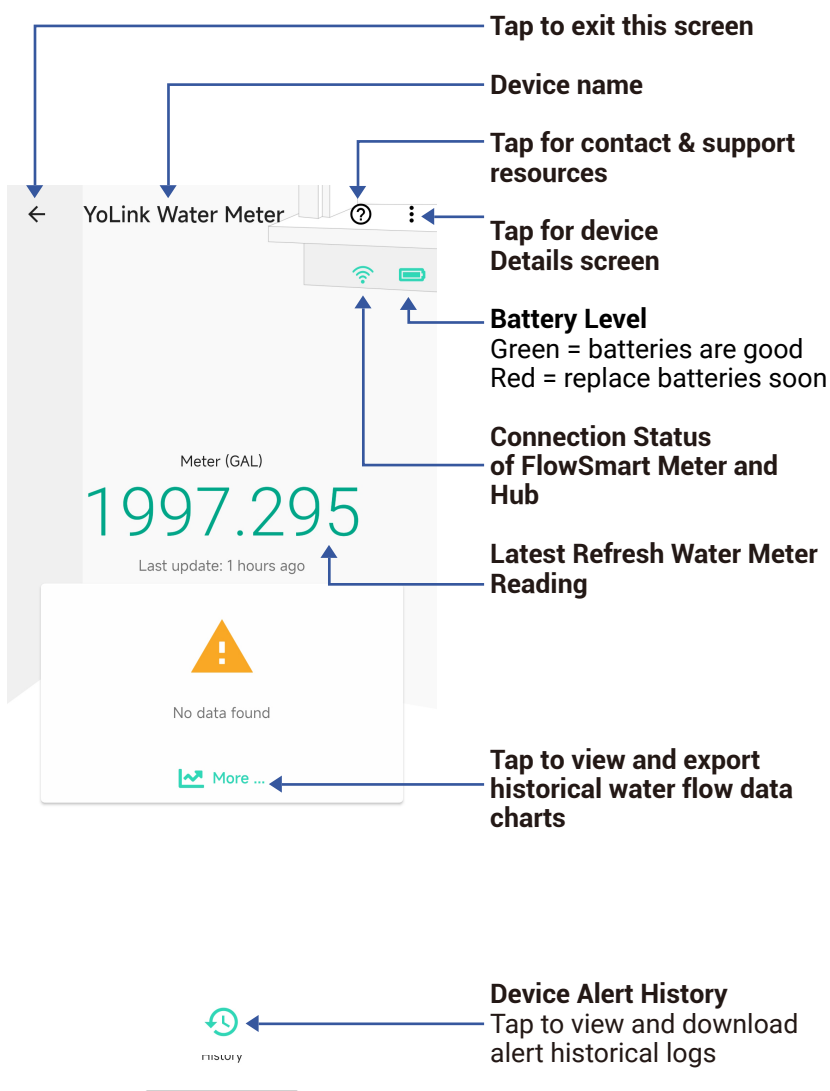



App Functions: Device Details Screen

Tap the three dots (in the upper right corner) to open the FlowSmart Meter Details screen. Your FlowSmart Meter screen should be similar to the one shown below.

The screenshot shows the 'Details' screen for a YoLink Water Meter. The screen is divided into several sections. The top section contains basic information: Type (YoLink Water Meter), Name (YoLink Water Meter), Room (11FlowSmart), Favorite (Will show in favorite screen), and Alert (5 minutes). The middle section contains Water meter parameter (Water Meter Reading: 0.815 CCF, Water Meter Type: GAL) and Other (Model: YS5007-UC, Device EUI: d88b4c0100080585, SN: 627EE50081, Signal Intensity: Strong (-24 dBm), Battery: 0704). The bottom section contains a red 'Delete' button. Annotations point to various elements: Device Type, Device Name (Tap to Edit), Room (Tap to Edit), Favorite (Red if Favorite, Tap to Edit), Alert (Tap to edit Alert Settings (see Alert Settings)), Screen Time (Tap to set the duration after which the display will turn off), Water Meter Reading (Please synchronize the reading on your water meter), Water Meter Type (Gallons/Centum Cubic Feet/Cubic Meter), Model Number, Device EUI (Unique Identifier Number (Unique)), Device Serial Number, Signal Intensity (From YoLink Hub), Battery, Firmware Revision (Refer to page 34), and Remove Device From Current Account (Tap to delete the device from your YoLink account).

Device Type

Device Name
(Tap to Edit)

Room
(Tap to Edit)

Favorite
(Red if Favorite, Tap to Edit)

Alert
Tap to edit Alert Settings (see Alert Settings)

Screen Time
Tap to set the duration after which the display will turn off

Water Meter Reading
Please synchronize the reading on your water meter

Water Meter Type
Gallons/Centum Cubic Feet/Cubic Meter

Model Number

Device EUI
Unique Identifier Number (Unique)

Device Serial Number

Signal Intensity
(From YoLink Hub)

Battery

Firmware Revision
(Refer to page 34)

Remove Device From Current Account
Tap to delete the device from your YoLink account



App Functions: Alert Settings Screen

YoLink Water Meter Alert

Alarm Strategy
Tap to edit the sensor's Alarm Strategy
Default >

You will be notified according to selected alarm strategy when device alerts
[View your alarm strategies](#)

Continuous Alarm
Continuous alarm interval
5 min >

Water Meter Equivalent
The precision of the water meter, which is the smallest value. It is the unit for one complete revolution of the dial under the sensor
1/10 >

Leak Threshold
Set a threshold (the amount of water flowing through the pipeline) to detect...
70.623 CCF >

Leak Detection Schedule
The time period for leak detection, set to ON or OFF.
OFF >

Max Water Usage per Instance
Alert you when the maximum continuous water usage during a single session reaches...
0 CCF >

Max Water Usage Duration per Instance
Alert you when the maximum time of water used during a single session reaches...
0 minutes >

Alarm Strategy
Tap to edit the sensor's Alarm Strategy

Continuous Alarm
Tap to disable or set the alert repeat time

Water Meter Equivalent
This needs to be set initially. It is the unit for one complete revolution of the dial under the sensor

Leak Threshold
Set a threshold to detect leak and trigger an alert when the Leak Detection Schedule is set to ON.

Leak Detection Schedule
The time period for leak detection, set to ON or OFF.

Max Water Usage per Instance
Alert you when the maximum continuous water usage during a single session reaches your preset limit.

Max Water Usage Duration per Instance
Alert you when the maximum time of water used during a single session reaches your preset limit.



App Functions: Smart - Automation

The FlowSmart Meter can be set up as a condition in automation.

The screenshot shows the 'Automation' settings screen. At the top is a green header bar with a back arrow, the title 'Automation', and a checkmark icon. Below this is the 'Name' field, currently set to 'Unusual Water Usage Close Valve'. The 'When' section shows a condition: 'YoLink Water Meter' with the value 'Water usage warning'. The 'Then' section shows a behavior: 'YoLink Valve' with the action 'Close'. The 'Working Time' section is set to 'Always Working'. At the bottom is the 'Advanced Settings' section. Callouts with arrows point to various icons and text on the screen:

- Tap to save the settings**: Points to the checkmark icon in the top right of the green header.
- Edit the name of the automation**: Points to the 'Name' field.
- Tap to set a schedule for the automation**: Points to the 'When' section.
- Add behavior**: Points to the plus icon in the 'Then' section.
- Tap to add a behavior**: Points to the plus icon in the 'Then' section.
- Delete the behavior**: Points to the trash can icon in the 'Then' section.
- Tap to sort behaviors**: Points to the sort icon in the 'Then' section.
- Always Working**: Points to the 'Always Working' text in the 'Working Time' section.
- Tap to set when the automation can be activated**: Points to the 'Always Working' text in the 'Working Time' section.
- Advanced Settings**: Points to the 'Advanced Settings' section.
- Tap to edit advanced automation and logging settings**: Points to the 'Advanced Settings' section.

The Automation settings are saved in the cloud.

You can edit the Advanced Settings, including save the log, retry if action fails, notify if action fails, etc.



Factory Reset

Factory reset will erase device settings and restore it to factory default settings. Doing a factory reset will not remove the device from your account and it will not harm the device, or lose any data or require you to redo your automations, etc.

Instructions:

Hold the SET button down for 20-30 seconds, until the LED blinks red and green alternately. Then, release the button. (Holding the button down longer than 30 seconds will abort the factory reset operation)

Factory reset will be complete when the LED stops blinking.



Only deleting a device from the app will remove it from your account. Factory reset will not delete the device from the app.

Firmware Update

Your YoLink products are constantly being improved, with new features added. It is periodically necessary to make changes to your device's firmware. For optimal performance of your system, and to give you access to all available features for your devices, these firmware updates should be installed when they become available.

In the Detail screen of each device, at the bottom, you will see the Firmware section, as shown in the image below. A firmware update is available for your device if it says "#### ready now"


Tap in this area to start the update.

The device will update automatically, indicating progress by percentage-complete. You may use your device during the update, as the update is performed "in the background". The LED will slowly blink green during the update, and the update may continue for several minutes beyond the LED turning off.




Battery Replacement

Tools Required :

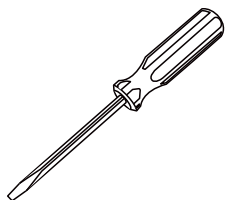


Small Flathead/
Slotted Screwdriver

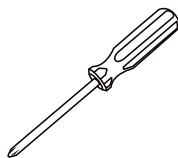


Small Phillips Screwdriver

- 1 Use a flathead screwdriver to gently twist open the sensor's battery cover at the notch on the side.

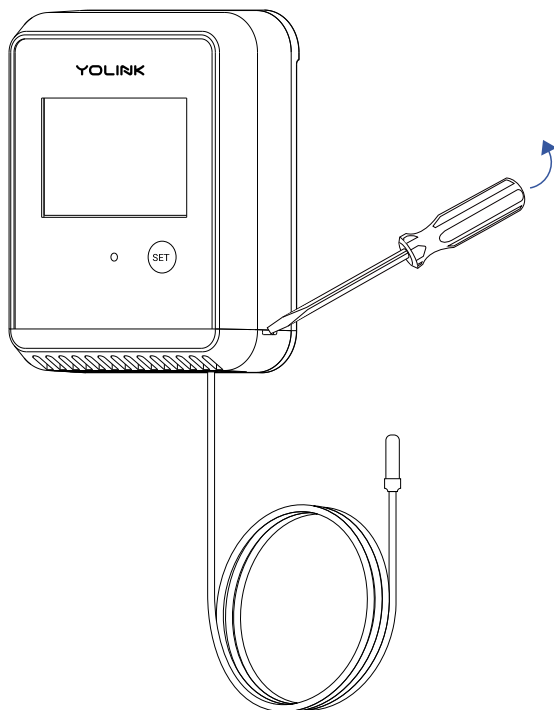


Q Battery Replacement, Continued

- 2 Loosen the two screws on the battery compartment cover with a small Phillips screwdriver. You don't need to remove them completely.

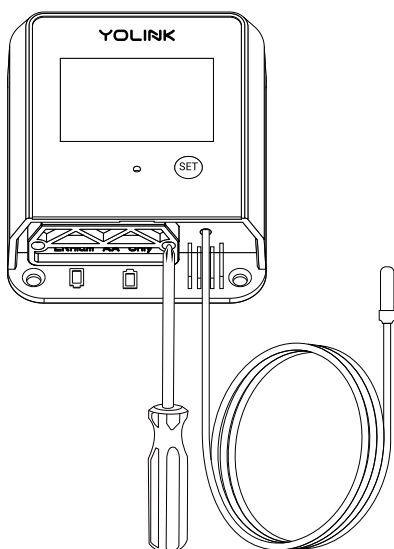


- 3 Take out the old batteries.

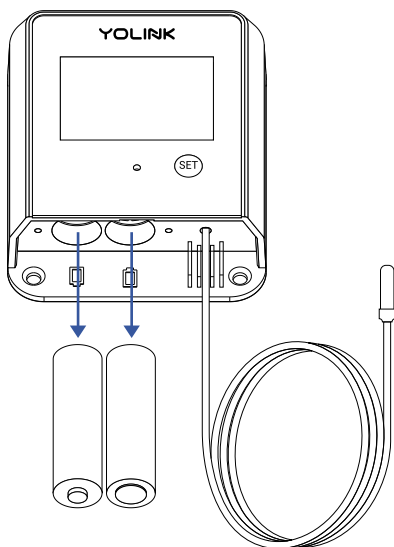


Q Battery Replacement, Continued

- 4 Put in two new lithium AA batteries, making sure they match the + and - signs inside.

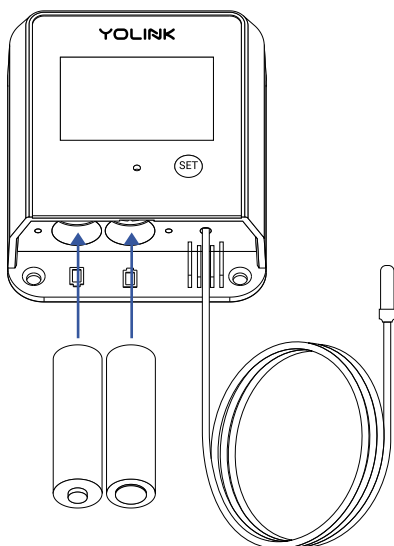


- 5 Put the cover back and tighten the screws.

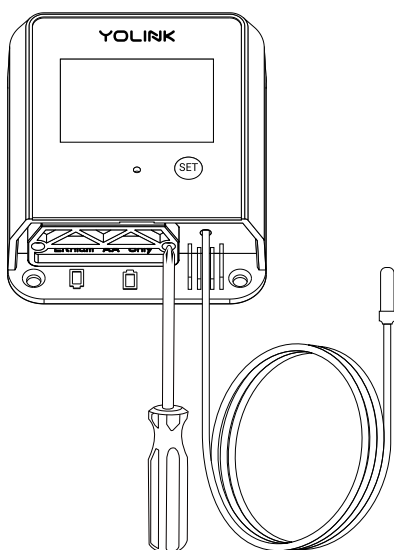

Q Battery Replacement, Continued

- 6 Snap the battery cover back into place securely.

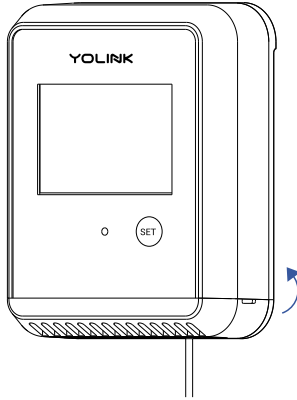



Specifications

Power Supply:	2-AA Lithium Battery 1.5V (non-rechargeable AA batteries)
---------------	---

IP Rating :	IP67
-------------	------

Dimensions :	3.54 × 2.95 × 1.06 inches (90 × 75 × 27 millimeters, L×W×D)
--------------	---

Standby Current (LCD OFF):	7uA
-------------------------------	-----

Standby Current LCD ON):	15uA
-----------------------------	------

Wireless:	LoRa 915MHz
-----------	-------------

Battery Life standby:	10 Years
-----------------------	----------

Environment :	Working Temperature : -13°F - 140°F (-25°C - 60°C) Working Humidity : ≤90%RH
---------------	--

Problem:

The FlowSmart Meter is offline

Possible Solutions:

- a) Ensure the FlowSmart Meter is on. Repeat the Power Up section steps, if needed
- b) Batteries are dead if no LED behaviors when press the SET button. Replace the batteries. See page 35 for instructions.

If this does not resolve the issue, please contact our customer support department (see the contact info on the last page of this guide).

T Warnings

- Please install, operate and maintain the FlowSmart Meter (and Water Meter) only as outlined in this manual. Improper installation or use may damage the unit and/or void the warranty.
- Do not install or use the device outside of the temperature and humidity range listed in the environmental specifications.
- If used outdoors, for the maximum life of the device, provide overhead cover or a protective enclosure. This can protect it from the damaging effects of intense direct sunlight and/or rain over a period of years.
- Do not immerse or allow the devices to be immersed or submerged in water.
- Avoid placing the devices in extremely dirty or dusty environments.
- If the device does get dirty, please clean it by wiping it down with a clean dry cloth. Do not use strong chemicals or detergents, which may damage or discolor the exterior and/or damage the electronics, voiding the warranty.
- Do not install the device where it may be subjected to vandalism, abuse, physical impacts or strong vibrations. Physical damage is not covered by the warranty.

T Warnings, Continued

- Power the FlowSmart Meter only with new AA alkaline or lithium-ion batteries. Do not use rechargeable batteries, do not use other type batteries (e.g. zinc blend). Do not mix old and new batteries.
- If storing the FlowSmart Meter for extended periods, remove the batteries.
- Please contact Customer Support before attempting to repair, disassemble or modify the device, any of which can permanently damage the device and void the warranty.



1 Year Limited Mechanical Device Warranty

2 Year Limited Electrical Device Warranty

YoSmart warrants to the original user of this product that it will be free from defects in materials and manufacturing workmanship, under normal use, for 1 year from the date of purchase for the Water Meter and for 2 years from the date of purchase for the FlowSmart Meter.

The warranty does not cover abuse or misused products, nor does this warranty apply to products that have been improperly installed, were modified, or put to a use other than designed. This warranty does not cover products subjected to acts of God (such as floods, lightning strike or electrical surge, or earthquakes, etc.).

This warranty is limited to repair or replacement of the product only at YoSmart's sole discretion. YoSmart will NOT be liable for any costs associated with removing or reinstalling the product. YoSmart will NOT be liable for direct or indirect or consequential damages to persons or property resulting from the use of this product.

The warranty only covers the cost of replacement products or parts. It does not cover shipping and handling charges or fees.

To implement this warranty, please refer to the Contact Us section of this guide.



FCC Statement

This device complies with part 15 of the FCC Rules. Operation is subject to the following two conditions: (1) This device may not cause harmful interference, and (2) this device must accept any interference received, including interference that may cause undesired operation.

Any Changes or modifications not expressly approved by the party responsible for compliance could void the user's authority to operate the equipment.

Note: This equipment has been tested and found to comply with the limits for a Class B digital device, pursuant to part 15 of the FCC Rules. These limits are designed to provide reasonable protection against harmful interference in a residential installation. This equipment generates uses and can radiate radio frequency energy and, if not installed and used in accordance with the instructions, may cause harmful interference to radio communications. However, there is no guarantee that interference will not occur in a particular installation. If this equipment does cause harmful interference to radio or television reception, which can be determined by turning the equipment off and on, the user is encouraged to try to correct the interference by one or more of the following measures:

- Reorient or relocate the receiving antenna.
- Increase the separation between the equipment and receiver.



FCC Statement, Continued

- Connect the equipment into an outlet on a circuit different from that to which the receiver is connected.
- Consult the dealer or an experienced radio/TV technician for help.

The device has been evaluated to meet general RF exposure requirement. The device can be used in portable exposure condition without restriction.

PRODUCT NAME:
FLOWSMART METER

PARTY:
YOSMART, INC.

TELEPHONE:
831-292-4831

MODEL NUMBER:
YS5007-UC

ADDRESS:
25172 ARCTIC OCEAN DRIVE, SUITE 106
LAKE FOREST, CA 92630 USA

EMAIL:
SERVICE@YOSMART.COM



Contact Us

We are here for you, if you ever need any assistance installing, setting up or using a YoLink app or product!

Need help? For fastest service, please email us 24/7 at service@yosmart.com

Or call us at **831-292-4831** (US phone support hours: **Monday - Friday, 9AM to 5PM** Pacific)

You can also find additional support and ways to contact us at:

www.yosmart.com/support-and-service

Or scan the QR code:



Support Home Page

Finally, if you have any feedback or suggestions for us, please email us at feedback@yosmart.com

Thank you for trusting YoLink!

YoLink Customer Support

YOLINK

25172 Arctic Ocean Drive, Suite 106 Lake Forest, CA 92630
© 2026 YOSMART INC. CALIFORNIA, USA