


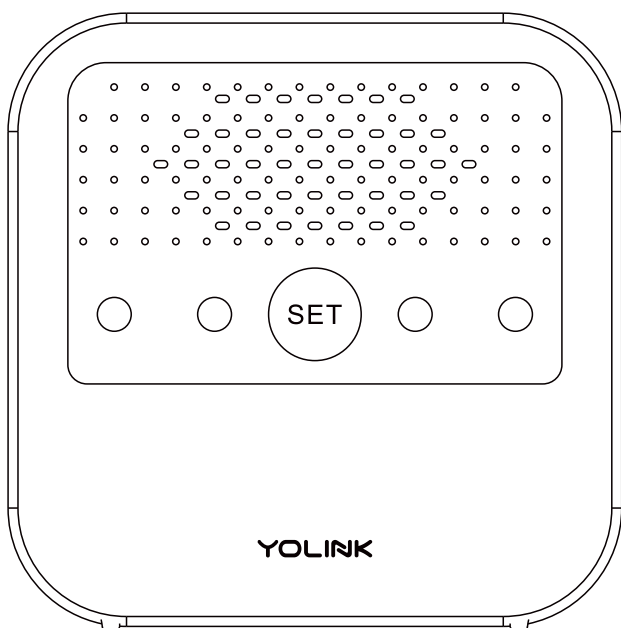

Siren Alarm

YS7103-UC



Installation & User Guide

Revision Jun. 11, 2026

TABLE OF CONTENTS

A . Welcome	01
B . Before You Begin	02
C . In the Box	03
D . Required Items	04
E . Get to Know Your Siren Alarm	05
F . Install the App	07
G . Add Your Siren Alarm to the App	08
H . Power Up	10
I . Installation	11
J . App Functions: Device Screen	15
K . App Functions: Mute & Alarm Duration	16
L . App Functions: Device Details Screen	18
M . App Functions: Schedule	20
N . App Functions: Smart – Scene	21
O . App Functions: Smart – Automation	22
P . App Functions: Alarm Strategy Screen	23
Q . Control-D2D	25
R . App & 3rd-Party Services	29
S . Replacing the Batteries	30
T . Factory Reset	32
U . Firmware Update	33
V . Specifications	34
W . Troubleshooting	36
X . Warnings	38
Y . Warranty	40
Z . FCC Statement	41
AA. Contact Us	43



Welcome!

Thank you for purchasing YoLink products! We appreciate you trusting YoLink for your smart home & automation needs. Your 100% satisfaction is our goal. If you experience any problems with your installation, with our products or if you have any questions that this manual does not answer, please contact us right away. See the Contact Us section for more info.

Thank you!

YoLink Customer Support

User Guide Conventions

The following icons are used in this guide to convey specific types of information:



Very important information
(can save you time!)



Good to know info but may not
apply to you

B Before You Begin

Visit our Siren Alarm support page on our website, for the latest installation guides, additional resources, information and videos by visiting:

<https://www.yosmart.com/support/YS7103-UC>

Or by scanning the QR code:



Download the most current version of the user guide by scanning the QR code:



B Before You Begin, Continued




Your Siren Alarm connects to the internet via a YoLink hub, and it does not connect directly to your WiFi or local network. In order for remote access to the device from the app, and for full functionality, a hub is required. This guide assumes the YoLink app has been installed on your smartphone, and a YoLink hub is installed and online (or your location, apartment, condo, etcetera, is already served by a YoLink wireless network).


C In the Box




Siren Alarm

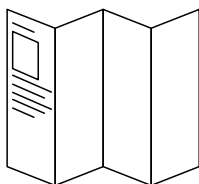

Quick Start Guide

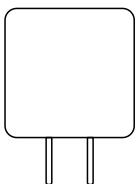


AC/DC Power Supply Adapter

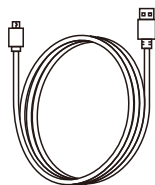

USB Cable (Micro B)


D Required Items

 The following items will be required:




2 x AA Batteries


The following items will be required:

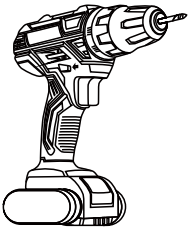


Drill with Drill Bits

 

Nail or Screw & Anchor

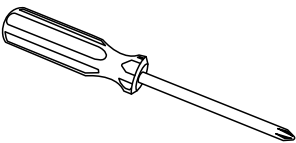



Phillips Screwdriver

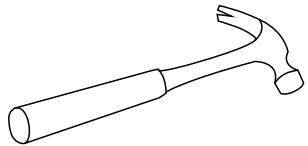

Hammer

E

Get to Know Your Siren Alarm

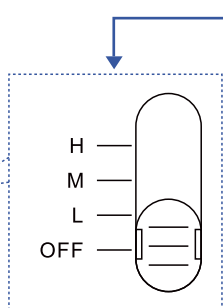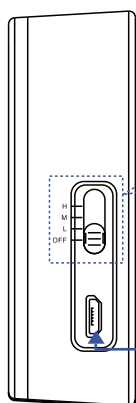

Power/Sound Level Switch

Adjust alarm sound level:


(H)-High;

(M)-Medium;

(L)-Low

OFF: Power off the device

Micro USB Port

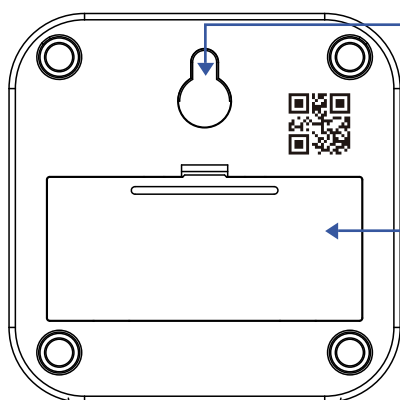


Mounting Slot

Hang the siren on the wall with a screw or nail

Battery Compartment

Houses two AA non-rechargeable batteries (not included)

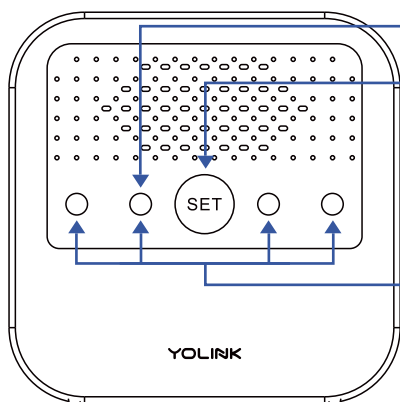

Status LED

SET Button

Alarm LED

YOLINK



Get to Know Your Siren Alarm, Continued

LED Behaviors



Blinking Red Once, Then Green Once
Device Start-Up



Blinking Red And Green Alternately
Restoring to Factory Defaults



Blinking Green
Connecting to Cloud



Slow Blinking Green
Updating



Fast Blinking Green
Control-D2D Pairing in Progress



Fast Blinking Red
Control-D2D Unpairing in Progress

Alarm LED



Blinking Red
Warning



or



Fast Blinking Red Every 30 Seconds or Fast Blinking Red 5 Times when pressing the SET Button
Batteries are Low,
Please Replace the Batteries

Alarm Tones

- HI-LO Tone Once
Device Power-up
- HI-LO for 5 Seconds
Sound Level Settings Adjusted
- HI-LO (For Alarm Duration per Settings - Default is 30 Seconds)
Warning



Install the App

If you are new to YoLink, please install the app on your phone or tablet, if you have not already. Otherwise, please proceed to the next section.

Scan the appropriate QR code below or find the “YoLink app” on the appropriate app store.



Apple phone/tablet
iOS 9.0 or higher



Android phone/tablet
6.0 or higher

Open the app and tap **Sign up for an account**. You will be required to provide a username and a password. Follow the instructions, to set up a new account. Allow notifications, when prompted.

You will immediately receive a welcome email from no-reply@yosmart.com with some helpful information. Please mark the yosmart.com domain as safe, to ensure you receive important messages in the future.


Log in to the app using your new username and password.

The app opens to the **Favorite** screen. This is where your favorite devices and scenes will be shown. You can organize your devices by room, in the **Rooms** screen, later.





Add Your Siren Alarm to the App

1. Tap **Add Device** (if shown) or tap the scanner icon:

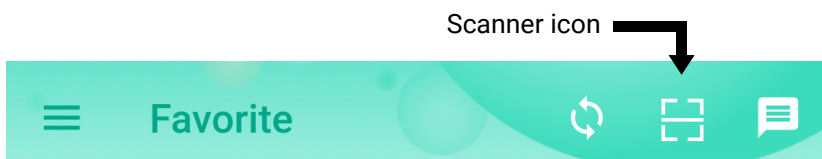

2. Approve access to your phone's camera, if requested. A viewfinder will be shown on the app.

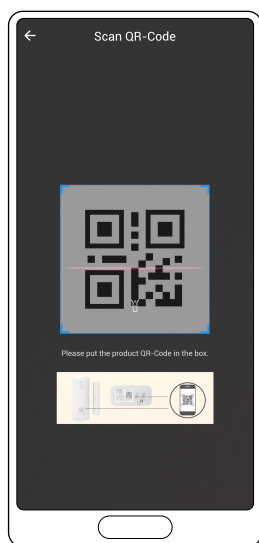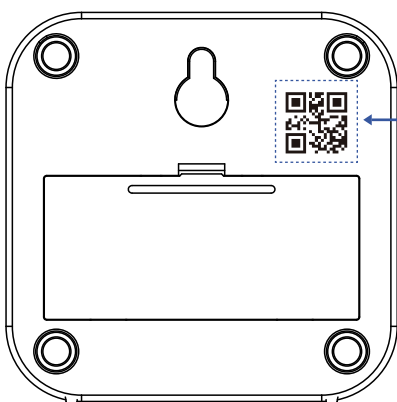


3. Hold the phone over the QR code so that the code appears in the viewfinder. If successful, the **Add Device** screen will be displayed.



Add Your Siren Alarm to the App, Continued

4. You can change the device name and assign it to a room later. Tap **Bind device**.

5. If successful, the screen will appear as shown. Tap **Done**.

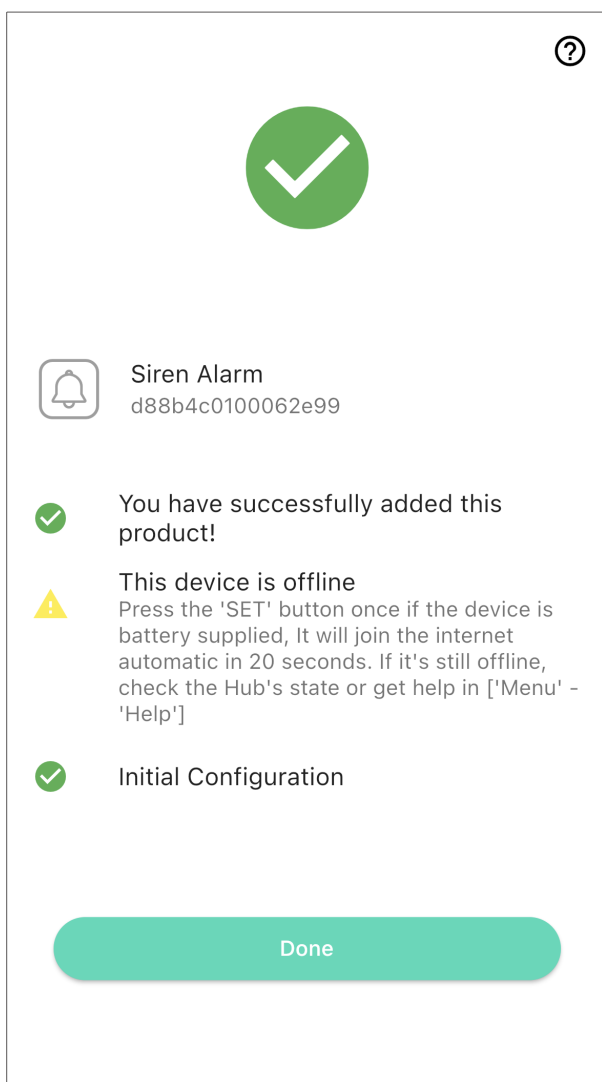



Power Up

1. To power up the Siren Alarm for the first time, first install the batteries. Ensure the switch is in the OFF position. Remove the battery compartment cover by gently prying it open at the notch.
2. Observing the polarity markings on the Siren Alarm, install two new alkaline or lithium, non-rechargeable, batteries.
3. Insert and snap the battery compartment cover back in place.
4. Upon power-up, the siren alarm will briefly activate. You can cover the opening on the front of the Siren Alarm if you wish to muffle this sound and/or you can first slide the switch to the low ("L") position, allow it to activate briefly, then put the switch on the desired high or medium sound level setting.



You can press the SET button to activate the siren if it is off, or to deactivate it if it is on.



Installation

Location Considerations:

The Siren Alarm is intended for indoor use. Consider one of our outdoor alarm controllers with siren, for outdoor applications. Place or install your Siren Alarm at an indoor location that is clean and dry, with temperature and humidity conditions within the limits of the product environmental specifications (refer to the product listing or product support page on our website).

The Siren Alarm can be wall-mounted, using the mounting slot on the rear of the device, hanging it from a nail or screw. The Siren Alarm can be placed on any stable level surface, like a shelf or countertop. It is important to securely mount the Siren Alarm and/or protect it from being knocked down—physical damage to the device is not covered by the warranty.

Avoid locating the Siren Alarm near head height or at locations where people may be close nearby when it activates.

Place or install your Siren Alarm at a location with an available AC outlet (for the plug-in power adapter) or with an available USB power outlet. Please note: while the Siren Alarm has batteries, they are only capable of powering it for limited power outages. Your Siren Alarm, on good batteries, should be capable of activating for no less than 5 minutes after being on battery power for 24 hours.



Installation, Continued

The Siren Alarm is not vandal- or tamper-resistant. If using the Siren Alarm where it may be subjected to tampering, consider mounting it elsewhere. Mounting the Siren Alarm higher on the wall may deter tampering.

When considering where in your home or business to place the Siren Alarm, consider first the requirements and the application. For personal notification, such as for a water leak detection application, locate the Siren Alarm closer to your expected locations in the home or building. For example, if you are concerned about sleeping through a phone push notification or SMS/text message, consider placing the Siren Alarm in or near your bedroom. If you are using the Siren Alarm for security purposes, and want it to scare off an intruder, place it closer to areas where an intrusion is expected, keeping in mind that the intruder should not have easy access to the Siren Alarm (to silence or disable it). If it is required that the siren sound is heard outside of your home or business, consider one of our outdoor alarm controllers and sirens.


We recommend testing the Siren Alarm at the proposed location before installing it. If needed, additional Siren Alarms can be easily added to your system, and they can be configured to activate and deactivate in unison. This may be required for larger homes and businesses, and where ambient sound levels are higher and/or where sound does not carry well between areas.




Installation, Continued

Install the Siren Alarm:

1. If you are not wall-mounting the Siren Alarm, you can place it where desired, then proceed to the next section, Test Your Siren Alarm.
2. If hanging the Siren Alarm from a nail, hammer the nail into the wall at the desired location, leaving approximately 1/8" or 3 mm space on the end of the nail. Proceed to step 4.
3. If hanging the Siren Alarm from a screw, insert the screw in the wall, at the desired location. If using a wall anchor, install the anchor per the manufacturer's instructions. Insert the screw with a screwdriver, leaving approximately 1/8" or 3 mm space on the end.

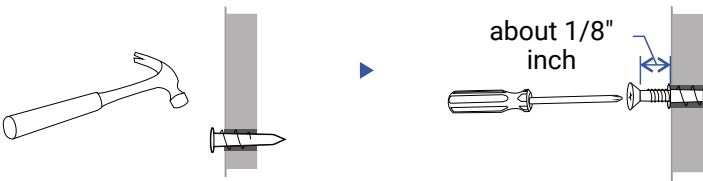

4. Hang the Siren Alarm on the nail or screw. Gently tug down on the Siren Alarm, to ensure it is secure.

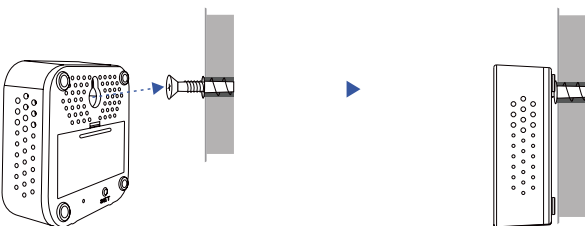



Installation, Continued


Test Your Siren Alarm:

You should test the Siren Alarm for basic functionality (e.g. works when you activate it) and to ensure it can be heard remotely, as needed. You can use the SET button to turn the siren sound on and off. Use the Start Alarm button in the app to remotely test the Siren Alarm. If the Siren Alarm is not loud enough throughout all required areas of your home or building, you can change the setting to high ("H"), you can relocate it, or you can add additional Siren Alarms.



App Functions: Device Screen

In the app, tap on your Siren Alarm icon. Your main screen should be similar to the one shown below.

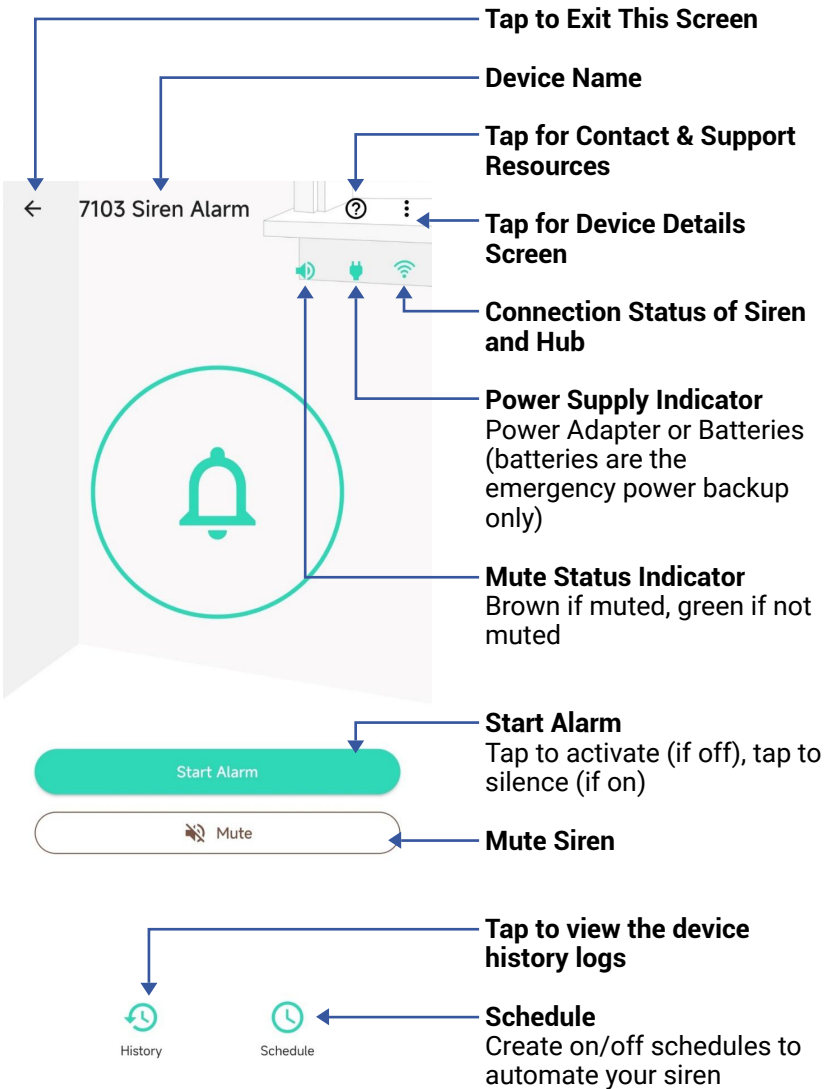



App Functions: Mute & Alarm Duration

About the Mute Feature:

The Mute feature allows you to disable or prevent your siren (or connected device) from operating while muted. The Mute feature has a Mute Duration setting. This duration determines how long the siren will be muted, until it automatically unmutes (returns to normal operation). The default for this setting is two hours. It can be set between 5 minutes to 24 hours.

A related setting is the Alarm Duration setting. The Alarm Duration setting determines how long your siren will stay on, before automatically silencing/deactivating. This duration has a default setting of 30 seconds, which can be changed to between 5 seconds and 4 hours. Or, it can be set to "Forever", in which case it will not automatically silence. The Alarm Duration is beneficial for conserving the batteries by automatically turning off after your defined duration (after which the purpose of the alarm should have been accomplished, such as scaring off an intruder, notifying you of a water leak, etc.), and to avoid it becoming a nuisance alarm to others. The siren will not activate the siren/output while muted, regardless of the activation method (pressing Start Alarm in the app, activating it from a fob, Control-D2D-paired device activation, Alexa and so on), but it is important to be aware that if your Alarm Duration is longer than your Mute Duration, the siren/output will activate after the



App Functions: Mute & Alarm Duration, Continued

Mute Duration expires.

And, if the siren has been activated while Muted, and you unmute it before pressing Stop Alarm, the siren will sound (the output will activate).

You can use the Mute feature to essentially “arm” or “disarm” security devices that have been paired to your siren. If you have, for example, paired motion and vibration sensors in your vehicle, RV, boat, etcetera, then you can mute the siren(s) while you are using the vehicle, and unmute them while it is not in use.



If you use a SirenFob with your Siren, the unlocked padlock button mutes the controller, while the locked padlock button acts as the Unmute button.



App Functions: Device Details Screen

Tap the three dots (in the upper right corner) to open the Siren **Details** screen. Your Siren's screen should be similar to the one shown below.

← Details ?

TypeSiren Alarm

Name7103 Siren Alarm >

RoomOffice >

Favorite

Will show in favorite screen

♥

History

Get device logs

>

Volume Level

Low

Alarm Duration

30 seconds >

Mute Duration

2 hours >

Time

1/25 23:27:36 (GMT-7)

Sync With Mobile >

State

Online

Other

Model

YS7103-UC

Device EUI

d88b4c010004915a

...

Device Type

Device Name
(Tap to Edit)

Room
(Tap to Edit)

Favorite
(Red if Favorite, Tap to Edit)

Device alarm history
Tap to view device history

Volume Level
Physically adjust the volume level on the siren

Alarm Duration
Siren will automatically silence after this duration, the default is 30 seconds

Mute Duration
Siren can not activate during this period, the default is 2 hours

Time
Tap to sync with mobile

State



App Functions: Device Details Screen, Continued

←

Details

?

History

Get device logs

>

Volume Level

Low

Alarm Duration

30 seconds

>

Mute Duration

2 hours

>

Time

1/25 23:27:38 (GMT-7)

Sync With Mobile >

State

Online

Other

Model

YS7103-UC

Device EUI

d88b4c010004915a

SN

D2EE7FBF9C



>

Signal Intensity

Strong (-3 dBm)

>

Firmware

033B

Delete

Model Number

Device EUI
Unique Identifier Number

Device Serial Number


Signal Intensity
(From YoLink Hub)

Firmware Revision
(Refer to page 33)

Remove Device From Current Account
Tap to delete the device from your YoLink account



App Functions: Schedule

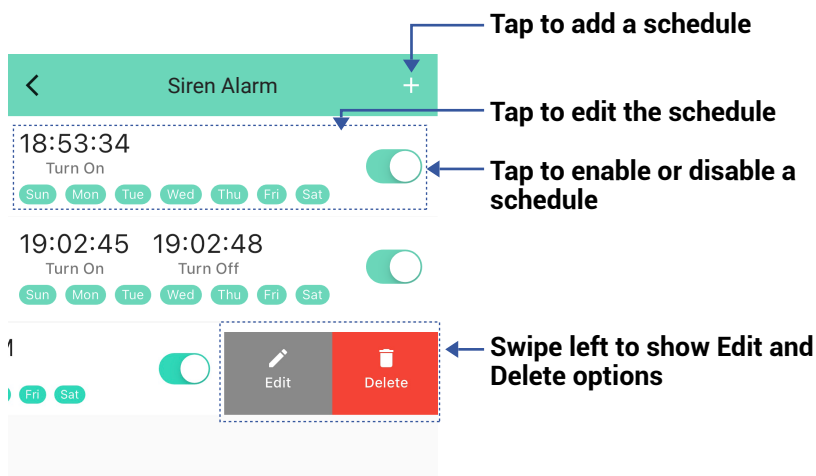

You can have a maximum 6 schedules at one time.

The schedule runs on the device (no internet connection required).

You can add more schedules in Automation settings. Automation settings are saved in the cloud.



App Functions: Smart - Scene

Tap to view the scene history

Tap to save the settings

Name
Tap to edit the scene name

Icon
Tap to select a scene icon

Favorite
Tap to make it a favorite scene

Assign the scene to a scene group

Delete the behavior

Add Siren behavior
Tap to add a behavior

Tap to sort behavior



The Scene settings are saved in the cloud.

If you have two or more alternating scenes, such as "Armed" and "Disarmed" or "Day Mode" and "Night Mode", you can place them into a custom scene Group. As only one scene in a Group can be active, when you activate the Night Mode scene, the Day Mode scene will be indicated as inactive. This is only a visual indicator; in this example, any specific required actions for the Day Mode (such as device actions, etc.) must be accomplished by separate automation settings.



App Functions: Smart - Automation

The Siren Alarm can be set up as an action in automation.

The screenshot shows the 'Automation' app interface. At the top is a green header bar with a back arrow, the text 'Automation', and a checkmark icon. Below this is the 'Name' field, which contains 'Leak Alarm' and a '10/64' character count. The 'When' section shows a 'Leak Sensor' icon and the text 'Water Leak Alert'. The 'Then' section shows a 'Behavior' list with a '7103 Siren Alarm Start Alarm' item. Below the 'Behavior' list is the 'Working Time' section, which is currently set to 'Always Working'. At the bottom is the 'Advanced Settings' section. Annotations with arrows point to various elements: 'Tap to save the settings' points to the checkmark icon; 'Edit the name of the automation' points to the 'Name' field; 'Tap to set a schedule for the automation' points to the 'When' section; 'Add behavior' points to the plus icon; 'Delete the behavior' points to the trash can icon; 'Tap to sort behaviors' points to the sort icon; 'Always Working' points to the 'Always Working' text; and 'Advanced Settings' points to the 'Advanced Settings' section.

Automation

Name
Leak Alarm

10/64

When
Leak Sensor
Water Leak Alert

Then
Behavior
7103 Siren Alarm
Start Alarm

Working Time
Always Working

Advanced Settings

Tap to save the settings

Edit the name of the automation

Tap to set a schedule for the automation

Add behavior
Tap to add a behavior

Delete the behavior

Tap to sort behaviors

Always Working
Tap to set when the automation can be activated

Advanced Settings
Tap to edit advanced automation and logging settings


The Automation settings are saved in the cloud.

You can edit the Advanced Settings, including save the log, retry if action fails, notify if action fails, etc.



App Functions: Alarm Strategy Screen

You can set up notifications in Alarm Strategy settings, make sure you have enabled App, Email, SMS notification from the app->Menu->Settings->Account Settings->Advanced Settings, and verified your email address and added your phone number in the app. The siren can be triggered when the device sends an alert.

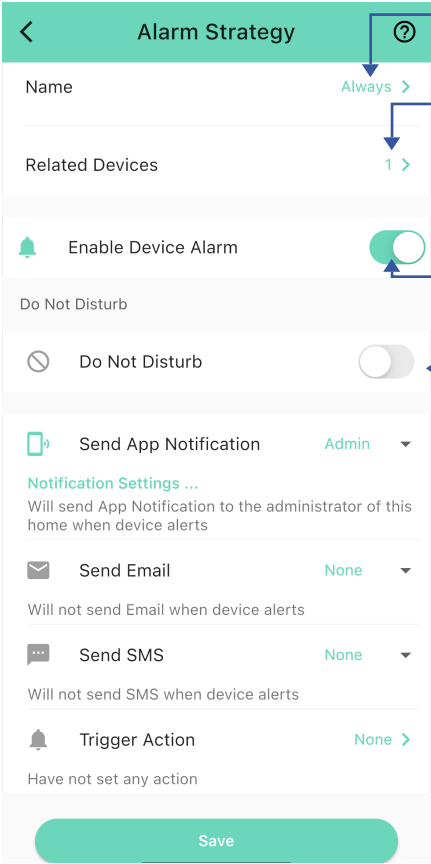

Strategy Name
Tap to edit the name

Related Devices
Tap to add more devices (that can alert) to this strategy, a device can be related to only one strategy

Tap to Enable or Disable The Strategy

Tap to Set Up Dnd (Do Not Disturb)



App Functions: Alarm Strategy Screen, Continued

The screenshot shows the 'Alarm Strategy' screen with a teal header. Below the header are several settings sections. The 'Name' section has a value of 'Always' with a right arrow. The 'Related Devices' section has a value of '1' with a right arrow. The 'Enable Device Alarm' section has a toggle switch that is turned on. The 'Do Not Disturb' section has a toggle switch that is turned off. The 'Send App Notification' section has a dropdown menu set to 'Admin'. Below this is a link for 'Notification Settings ...' with a description: 'Will send App Notification to the administrator of this home when device alerts'. The 'Send Email' section has a dropdown menu set to 'None' and a description: 'Will not send Email when device alerts'. The 'Send SMS' section has a dropdown menu set to 'None' and a description: 'Will not send SMS when device alerts'. The 'Trigger Action' section has a dropdown menu set to 'None' and a description: 'Have not set any action'. At the bottom is a large teal 'Save' button. Blue arrows point from the text callouts on the right to the corresponding settings on the screen.

Send App Notification

Tap to select Admin to enable App push, select All, if desired for all members

Notification Settings (iOS only)

Tap to change notification tone, if desired

Send Email

Tap to select Admin to enable email notification, select All, if desired to send to all members

Send SMS

Tap to select Admin to enable limited text messages, select All (subscribe required-starter or standard plan), if desired to send to all members

Trigger Action

Tap to choose trigger actions (YoLink sirens, YoLink SpeakerHubs, scene)

Q Control D2D

YoLink Control-D2D (device-to-device) pairing is a feature unique to YoLink products. One device can be paired to one (or more) devices. When two or more devices are paired, a link is created, “locking-in” the behavior, so that the device(s) will carry out their paired behavior when required, regardless of a connection to the internet or cloud, and even without AC power (in the case of battery-powered or battery backed-up devices). For example, a Door Sensor can be paired to a Siren Alarm, so that when the door is opened, the siren is activated.

Several important points:


- The use of Control-D2D is entirely optional. It is more common to use the app’s automation and scene settings to create desired behaviors, such as motion sensors turning on the lights automatically. Your application may require functionality during the loss of internet/WiFi, in which case Control-D2D pairing may be preferred.
- A device that controls another device is referred to as a Controller. The device that is controlled is referred to as a Responder.

Q Control D2D, Continued

- While online, any paired behaviors as well as automation and scene settings (desired siren behaviors set in advance by you, such as the door sensor/siren example) will both be carried out. Paired behaviors and app settings can coexist, but use care to not create conflicting actions between the two, as the device may not operate as desired.
- A device can have up to 128 pairings.


The following instructions use pairing your Door Sensor with a YoLink Siren as an example, when door is open, start siren alarm.

1. To configure your Door Sensor as a controller, open the door, press and hold the SET button for 5-10 seconds until the LED quickly blinks green, then, release the button.

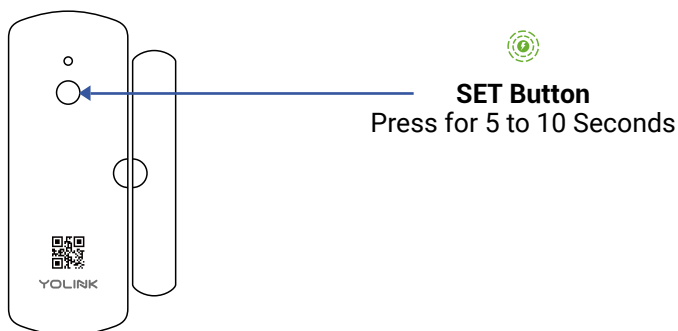

Q Control D2D, Continued

2. To configure a YoLink Siren as the responder, press and hold the SET button for 5-10 seconds until the LED quickly blinks green, then, release the button.

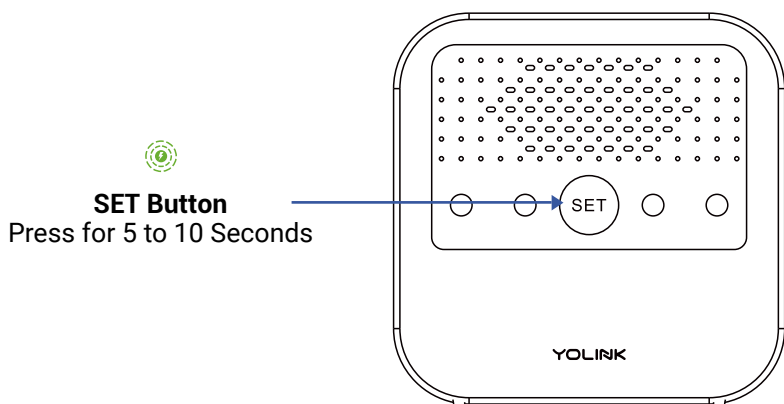

3. Upon pairing, the LED will stop blinking (this may happen after only blinking two or three times).

When the door sensor is opened, the siren will start alarm.



Control D2D, Continued

Unpair your Siren Alarm:

1. On the Door Sensor, press the hold the SET button for 10 to 15 seconds, until the LED quickly blinks red, then release the button.
2. On the Siren Alarm, press and hold the SET button for 10 to 15 seconds, until the LED quickly blinks red, then release the button.



The LED will flash green prior to the 10 second mark, going into pairing mode, but keep pressing until the LED flashes red. The Controller's pairing is now removed. This door sensor will no longer control the siren.



App & 3rd-Party Services

The YoLink Siren Alarm works with several voice assistants, including Alexa and Google, and it works with other automation platforms such as IFTTT and Home Assistant.

To set up 3rd-party integrations (Alexa, Google and IFTTT), in the app, go to Settings, Third-Party Services, and follow the instructions.


Refer to the Home Assistant website and the YoLink integration page for instructions.

<https://www.home-assistant.io/integrations/yolink/>


S Replacing the Batteries

To replace the batteries, have two new AA alkaline on hand and follow these instructions:

1. Remove the battery cover by gently prying with your fingertip or tool at the edge as shown.

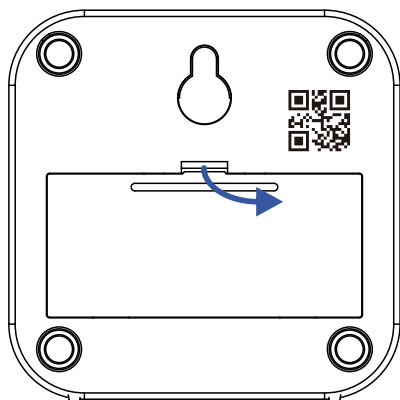

2. Install (or replace) two new AA batteries and close the cover.

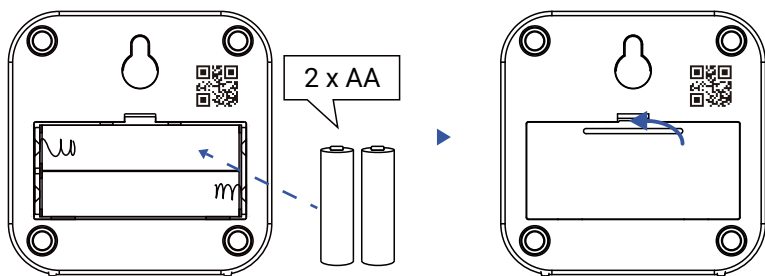



Replacing the Batteries, Continued



- 1.** Batteries are optional, but are recommended as your device can continue to function during extended power outages.
- 2.** To avoid sudden loss of operation, please replace the batteries as soon as possible when they are indicated as low.
- 3.** The power adapter is required to power-up the device.
- 4.** Do not mix a new battery with an old one.



Factory Reset

Factory reset will erase device settings and restore it to factory default settings. Doing a factory reset will not remove the device from your account and it will not harm the device, or lose any data or require you to redo your automations, etc.

Instructions:

Hold the SET button down for 20-30 seconds, until the LED blinks red and green alternately. Then, release the button. (Holding the button down longer than 30 seconds will abort the factory reset operation)

Factory reset will be complete when the LED stops blinking.




PLEASE NOTE: Only deleting a device from the app will remove it from your account. Factory reset will not delete the device from the app.



Firmware Update

Your YoLink products are constantly being improved, with new features added. It is periodically necessary to make changes to your device's firmware. For optimal performance of your system, and to give you access to all available features for your devices, these firmware updates should be installed when they become available.

In the Detail screen of each device, at the bottom, you will see the Firmware section, as shown in the image below. A firmware update is available for your device if it says “#### ready now”

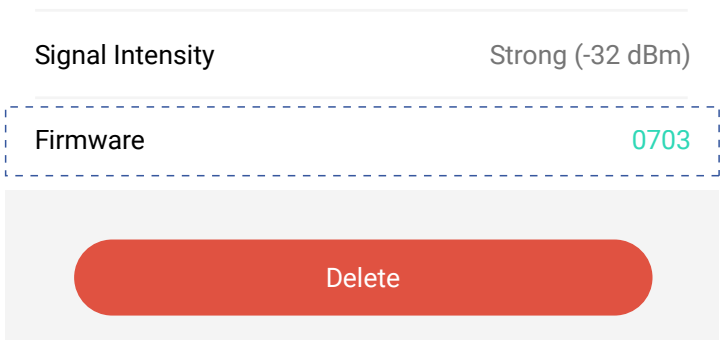

Tap in this area to start the update.

The device will update automatically, indicating progress by percentage-complete. You may use your device during the update, as the update is performed "in the background". The LED will slowly blink green during the update, and the update may continue for several minutes beyond the LED turning off.



Specifications

Voltage:	DC5V/1A (Micro USB)/ DC 3V (2-AA Batteries)
----------	--

Back-up Battery Life:	Roughly 3 days
-----------------------	----------------

Siren Volume:	High(H): 110dB Medium(M): 104d BLow(L): 100dB
---------------	---


Dimensions, Imperial (L x W x D):	3.15 x 3.15 x 1.02 inches
--------------------------------------	------------------------------

Dimensions, Metric (L x W x D):	80 x 80 x 26 mm
------------------------------------	-----------------


Environment:	Temperature: 32°F-122°F (0°C-50°C) Humidity: ≤ 90% non-condensing
--------------	--




Specifications, Continued

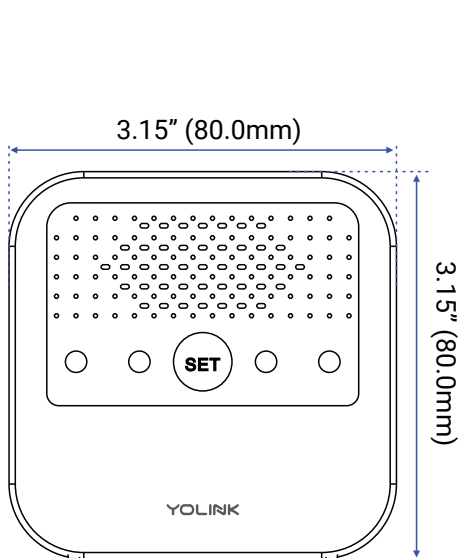

FRONT

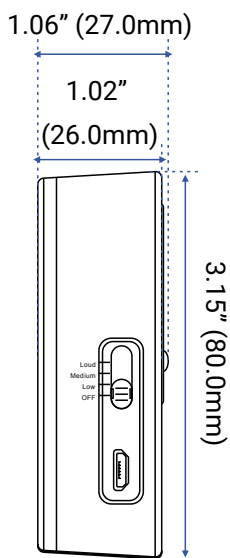

SIDE

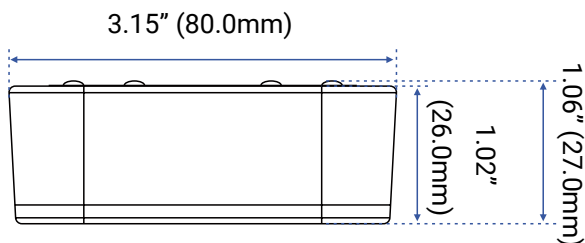

TOP

These troubleshooting suggestions assume the device has been successfully added to the app. If the device is not working correctly and it is not in the app, return to the Add the Siren Alarm to the App section and double-check or re-do these steps.

A. Device can not be operated at all, and can not be operated manually via the SET button:

- 1) Ensure the device is turned on (See Power Up section, if needed).
- 2) Check batteries, verify proper installation.
- 3) Replace the batteries.

B. Device can be operated manually, but it is offline

- 1) Ensure the device is connected to the cloud, by pressing the SET button until the LED illuminates briefly.
- 2) Ensure the device is within range of the hub. If you are installing the device remotely from the hub, first place it near the hub to ensure it connects to the cloud via the hub. (Press the SET button briefly to force the device to attempt to reconnect with the cloud). If it is now online, the original location was out of range of the hub. Relocating the device, the hub, or adding an additional hub may be solutions. Contact us as needed for additional guidance.



C. If a Control-D2D-paired functionality is not working:

- 1) Review and re-do the pairing steps, as needed. You can unpair the devices and re-pair them.

D. Performing a factory reset can clear up some issues. Refer to page 32 for instructions. If the device remains non-operational, it may be defective. **Please contact us for assistance with replacing your YoLink product.**

E. Other issues, please contact us via the info on the last page of this guide.

Warnings

- The Siren Alarm's sounder can be extremely loud! To avoid uncomfortable sound levels, do not place the siren at locations close to you or others. Utilize a lower sound level and consider farther away, to avoid surprising or harsh sound levels.
- Please install, operate and maintain the Siren Alarm only as outlined in this manual. Improper use may damage the unit and/or void the warranty.
- Use only the supplied power supply. Other voltages(120v, etc.) will damage the device and power supplies other than the supplied unit may damage the device. Such damage is not covered by the warranty (applicable only to products with power supplies).
- Do not install or use this device outside of the temperature and humidity range listed in the Environmental section in Specifications, on page 34.
- Do not install or use this device where it will be subjected to high temperatures and/or open flame.

X Warnings, Continued

- This device is not waterproof and is designed and intended only for indoor use. Subjecting this device to outdoor environment conditions such as direct sunlight, extreme hot or cold temperatures, rain, water and/or condensation can damage the device and will void the warranty.

Install or use this device only in clean

- environments. Dusty or dirty environments may prevent the proper operation of this device, and will void the warranty.

If your Siren Alarm does get dirty, please

- clean it by wiping it down with a clean, dry cloth. Do not use strong chemicals or detergents, which may discolor or damage the exterior and/or damage the electronics, voiding the warranty.

1 Year Limited Electrical Warranty

YoSmart Inc. warrants to the original user (“customer”) of this product that it will be free from defects in materials and workmanship, under normal use, for 1 year from the date of purchase. This warranty does not apply to devices that have been improperly installed, modified, put to a use other than designed, or subjected to acts of God (such as floods, lightning, earthquakes, etc.). This warranty does not cover neglected or abused products. This warranty is limited to the repair or replacement of the device, only, at YoSmart's sole discretion. YoSmart will NOT be liable for the cost of installing, removing, nor reinstalling this product, nor direct, indirect, or consequential damages to persons or property resulting from the use of this product. This warranty only covers the cost of replacement parts or replacement units, it does not cover shipping & handling fees. The customer must provide proof of purchase, in the form of the original purchase invoice or order number. The purchase must have been made from an authorized seller.

To implement this warranty please contact us by one of the methods listed on the Contact Us page of this user guide.

Z FCC Statement

This device complies with part 15 of the FCC Rules. Operation is subject to the following two conditions: (1) This device may not cause harmful interference, and (2) this device must accept any interference received, including interference that may cause undesired operation. Any Changes or modifications not expressly approved by the party responsible for compliance could void the user's authority to operate the equipment.

Note: This equipment has been tested and found to comply with the limits for a Class B digital device, pursuant to part 15 of the FCC Rules. These limits are designed to provide reasonable protection against harmful interference in a residential installation. This equipment generates uses and can radiate radio frequency energy and, if not installed and used in accordance with the instructions, may cause harmful interference to radio communications. However, there is no guarantee that interference will not occur in a particular installation. If this equipment does cause harmful interference to radio or television reception, which can be determined by turning the equipment off and on, the user is encouraged to try to correct the interference by one or more of the following measures:

- Reorient or relocate the receiving antenna.
- Increase the separation between the equipment and receiver.
- Connect the equipment into an outlet on a circuit different from that to which the receiver is connected.

Z FCC Statement, Continued

- Consult the dealer or an experienced radio/TV technician for help.

The device has been evaluated to meet general RF exposure requirement. The device can be used in portable exposure condition without restriction.

PRODUCT NAME:
SIREN ALARM

PARTY:
YOSMART, INC.

TELEPHONE:
831-292-4831

MODEL NUMBER:
YS7103-UC

ADDRESS:
25172 ARCTIC OCEAN DRIVE, SUITE 106, LAKE
FOREST, CA 92630 USA

EMAIL:
SERVICE@YOSMART.COM



Contact Us

We are here for you, if you ever need any assistance installing, setting up or using a YoLink app or product!

Need help? For fastest service, please email us 24/7 at service@yosmart.com

Or call us at **831-292-4831** (US phone support hours: **Monday - Friday, 9AM to 5PM** Pacific)

You can also find additional support and ways to contact us at:

www.yosmart.com/support-and-service

Or scan the QR code:



Support Home Page

Finally, if you have any feedback or suggestions for us, please email us at feedback@yosmart.com

Thank you for trusting YoLink!

YoLink Customer Support

YOLINK

25172 Arctic Ocean Drive, Suite 106 Lake Forest, CA 92630
© 2026 YOSMART INC. CALIFORNIA, USA