


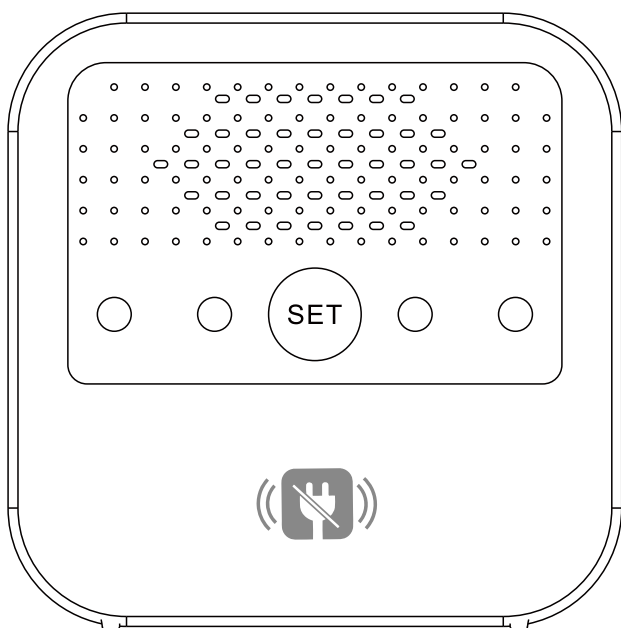

Power Fail Alarm

YS7106-UC



Installation & User Guide

Revision Jun. 11, 2026

Contents

A . Welcome	01
B . Before You Begin	02
C . In the Box	04
D . Required Items	05
E . Get to Know Your Power Fail Alarm	06

F . Install the App	08
G . Add Your Power Fail Alarm to the App	09
H . Power Up & Testing	11
I . Installation	12
J . App Functions: Device Screen	16

K . App Functions: Device Details Screen	17
L . App Functions: Alarm Strategy Screen	19
M . App Functions: Smart – Automation	21
N . Control-D2D	22
O . App & 3rd-Party Services	25

P . Battery Replacement	26
Q . Factory Reset	28
R . Firmware Update	29
S . Specifications	30
T . Troubleshooting	32

U . Warnings	34
V . Warranty	37
W . FCC Statement	38
X . Contact Us	40

A Welcome

Thank you for purchasing YoLink products! We appreciate you trusting YoLink for your smart home & automation needs. Your 100% satisfaction is our goal. If you experience any problems with your installation, with our products or if you have any questions that this manual does not answer, please contact us right away. See the Contact Us section for more info.

Thank you!

YoLink Customer Support

User Guide Conventions

The following icons are used in this guide to convey specific types of information:



Very important information
(can save you time!)



Good to know info but may not
apply to you

B Before You Begin

Visit our Power Fail Alarm support page on our website, for the latest installation guides, additional resources, information and videos by visiting:

<https://www.yosmart.com/support/YS7706-UC>

Or by scanning the QR code:



Download the most current version of the user guide by scanning the QR code:



B Before You Begin, Continued




Your Power Fail Alarm connects to the internet via a YoLink hub, and it does not connect directly to your WiFi or local network. In order for remote access to the device from the app, and for full functionality, a hub is required. This guide assumes the YoLink app has been installed on your smartphone, and a YoLink hub is installed and online (or your location, apartment, condo, etcetera, is already served by a YoLink wireless network).




In the Box




Power Fail Alarm

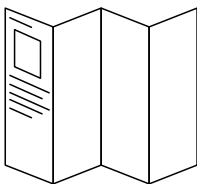


Quick Start Guide

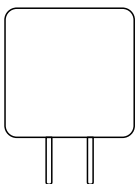

AC/DC Power Supply Adapter

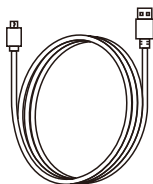


USB Cable (Micro B)

 


2 x AA Batteries (Installed)

D Required Items


The following items may be required:

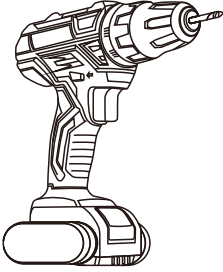


Drill with Drill Bits

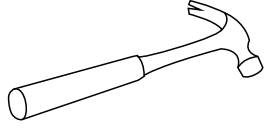

Hammer

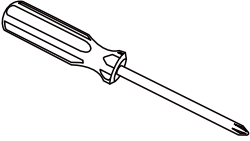


Phillips Screwdriver

 

Nail or Screw & Anchor

E

Get to Know Your Power Fail Alarm, Continued

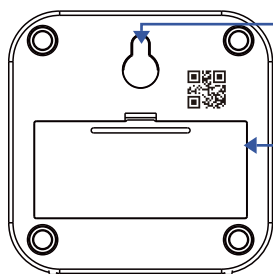


Mounting Slot

Hang the device on a wall with a screw or nail

Battery Compartment


Houses two AA non-rechargeable batteries

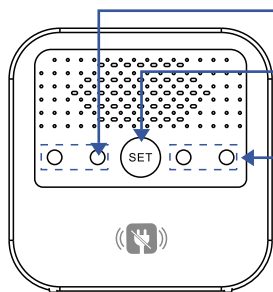

Status LED

SET Button

Alarm LED

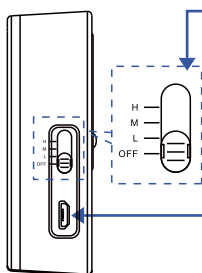

Power/Sound Level Switch

Adjust alarm sound level:

(H)-High;

(M)-Medium;

(L)-Low

OFF: Power off the device

Micro USB Port



Get to Know Your Power Fail Alarm, Continued

LED Behaviors



Blinking Red Once, then Green Once
Device Start-Up



Blinking Red And Green Alternately
Restoring to Factory Defaults



Blinking Green
Connecting to Cloud



Slow Blinking Green
Updating



Fast Blinking Green
Control-D2D Pairing in Progress



Fast Blinking Red
Control-D2D Unpairing in Progress

Alarm LED



Blinking Red
Input Power Removed



Fast Blinking Red Every 30 Seconds or Fast Blinking Red 5 Times when pressing the SET Button
Batteries are Low, Please Replace the Batteries

Alarm Tones

- **HI-LO Tone Once**
Device power-up
- **HI-LO for 5 Seconds**
Sound level settings adjusted
- **HI-LO**
(For Alarm Duration per Settings - Default is 30 Seconds)
Input Power Removed



Install the App

If you are new to YoLink, please install the app on your phone or tablet, if you have not already. Otherwise, please proceed to the next section.

Scan the appropriate QR code below or find the “YoLink app” on the appropriate app store.



Apple phone/tablet
iOS 9.0 or higher



Android phone/tablet
6.0 or higher

Open the app and tap **Sign up for an account**. You will be required to provide a username and a password. Follow the instructions, to set up a new account. Allow notifications, when prompted.

You will immediately receive a welcome email from no-reply@yosmart.com with some helpful information. Please mark the yosmart.com domain as safe, to ensure you receive important messages in the future.


Log in to the app using your new username and password.

The app opens to the **Favorite** screen. This is where your favorite devices and scenes will be shown. You can organize your devices by room, in the **Rooms** screen, later.




Add Your Power Fail Alarm to the App

1. Tap **Add Device** (if shown) or tap the scanner icon:

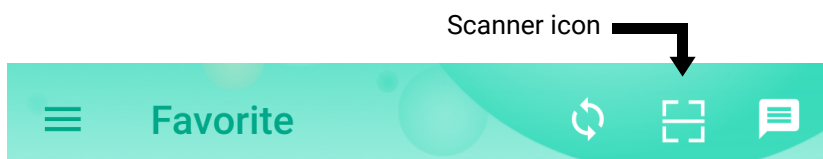

2. Approve access to your phone's camera, if requested. A viewfinder will be shown on the app.

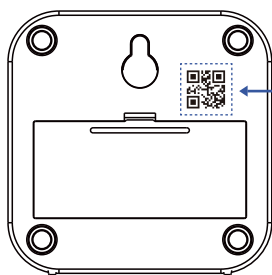


3. Hold the phone over the QR code so that the code appears in the viewfinder. If successful, the **Add Device** screen will be displayed.

G

Add Your Power Fail Alarm to the App, Continued

4. You can change the device name and assign it to a room later. Tap **Bind device**.

5. If successful, the screen will appear as shown. Tap **Done**.

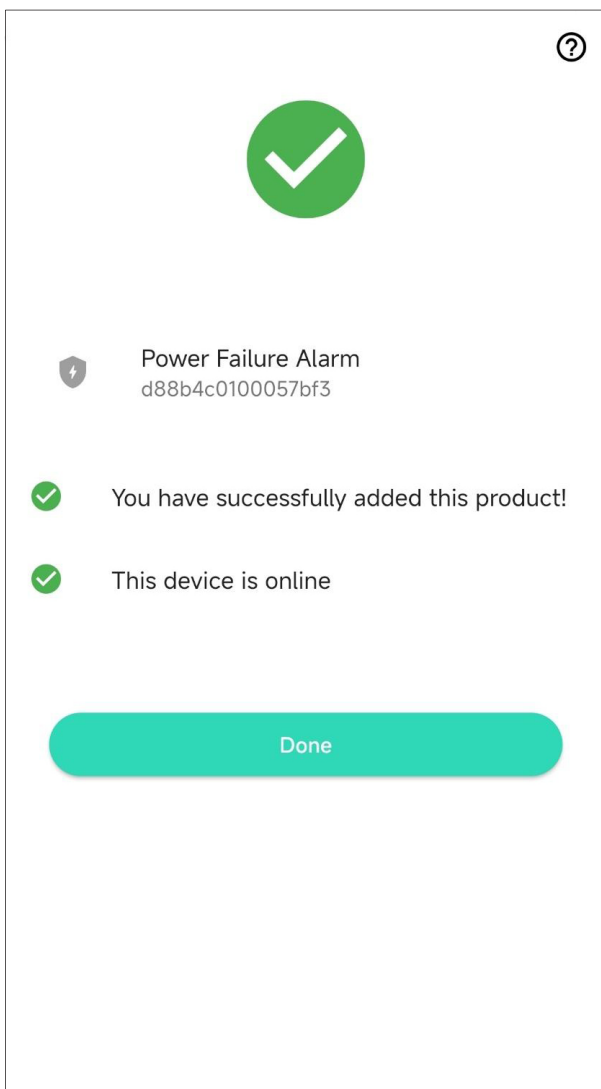



Power Up & Testing

- 1.** Using the supplied USB cable and plug-in USB adapter/power supply (or your own provided cable and/or USB adapter) connect the Power Fail Alarm to the monitored outlet.
- 2.** Turn on the Power Fail Alarm by sliding the sound level button from OFF to one of the (H/M/L) settings.
- 3.** Check that your Power Fail Alarm is now indicated as Online in the app.
- 4.** The Power Fail Alarm should be silent at this time, in normal status. Disconnect power to the Power Fail Alarm. It should immediately activate its LED lights and sounder. You can silence it by pressing the SET button. The Power Fail Alarm will indicate the power outage in the app.
- 5.** Restore power to the Power Fail Alarm. The Power Fail Alarm should return to normal status.



Installation

Pre-installation considerations:

Your Power Fail Alarm detects the loss of power to itself. It must have charged batteries installed, in order to function during the loss of power.

The Power Fail Alarm is a USB-powered device. Typically, this is supplied to the Power Fail Alarm via a plug-in USB power adapter, powered by your local AC mains power (120VAC, 220VAC, etc.). You can power the Power Fail Alarm from a USB outlet. This may be convenient if you have an outlet or power strip that lacks available AC outlets, but does have USB power. Or, your application may be supervising the status of USB power.

Upon the loss of power, the Power Fail Alarm can activate the built-in alarm LEDs and sounder. The sounder has three sound level settings, and it can be entirely muted in the app.

Upon the loss of power, the Power Fail Alarm reports the condition to the cloud server, which results in actions that can include various notifications and device actions. An example of a notification is an email message. An example of a device action is turning on a remote Siren Alarm.

The Power Fail Alarm is a supervised device, meaning it is monitored 24/7 by the cloud server. If the power outage should also interrupt the internet connection, you will be notified per your settings in the app.



Installation, Continued



Please note: the Power Fail Alarm does not charge the batteries. Battery level is indicated in the app, and you will be notified when it is time to replace the batteries.

Your YoLink hub is also a supervised device, and if the hub loses the connection to the cloud server, either due to loss of internet or due to the loss of AC power, you will be notified per your settings in the app.

The Power Fail Alarm is an indoor-rated device. Do not use in environments where it can get wet or where the temperature or humidity will fall outside of the ranges allowed in the device specifications (refer to the full user guide or online product support resources for additional information).

The Power Fail Alarm can be wall-mounted, hung from a screw or nail. It can be placed on any flat and stable surface. You may use alternative methods, such as two-sided mounting tape or Velcro.



Installation, Continued

Consider the need to access the battery compartment later, if you do use methods that require taping or gluing something to the rear of the device. Command hooks by 3M are another way to hang the sensor from the wall or other surface.

If you will rely on the built-in sounder at the primary notification, ensure the location of the Power Fail Alarm is optimized for this. Do not, for example, place the sensor behind an appliance or other large object which will dampen the sound transmission. You can use extension USB cables with the Power Fail Alarm, if you need to locate it remotely from the supervised outlet.

Before installing your Power Fail Alarm, verify the power cable length is sufficient for the location you have chosen.

Install the Power Fail Alarm:


Instructions to hang the sensor from a nail or screw are as follows:

1. If using a wall anchor with a screw, install the anchor in the wall, per the anchor manufacturer's instructions.



Installation, Continued

2. Hammer a nail in the wall or insert the screw in the anchor/wall, as is applicable. Leave approximately a 1/8" gap between the wall and the screw or nail head, as shown.

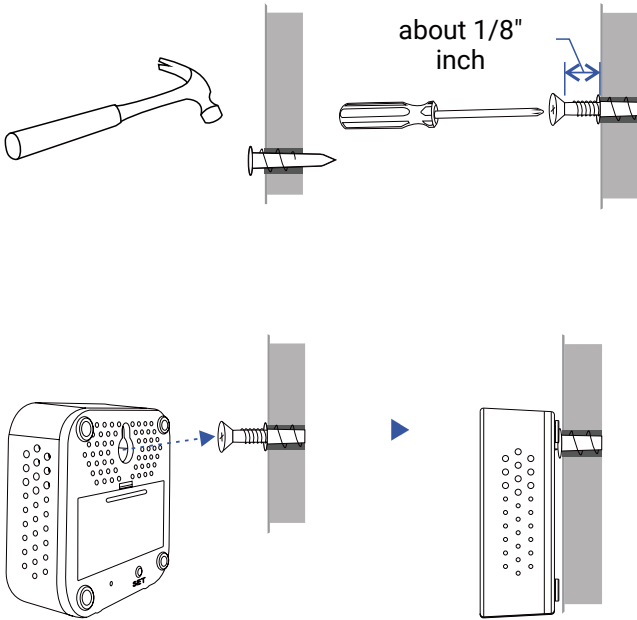


3. Hang the Power Fail Alarm from the screw or nail. Gently tug on it to ensure it will not fall down.



App Functions: Device Screen

In the app, tap on your Power Fail Alarm icon. Your Power Fail Alarm main screen should be similar to the one shown below.

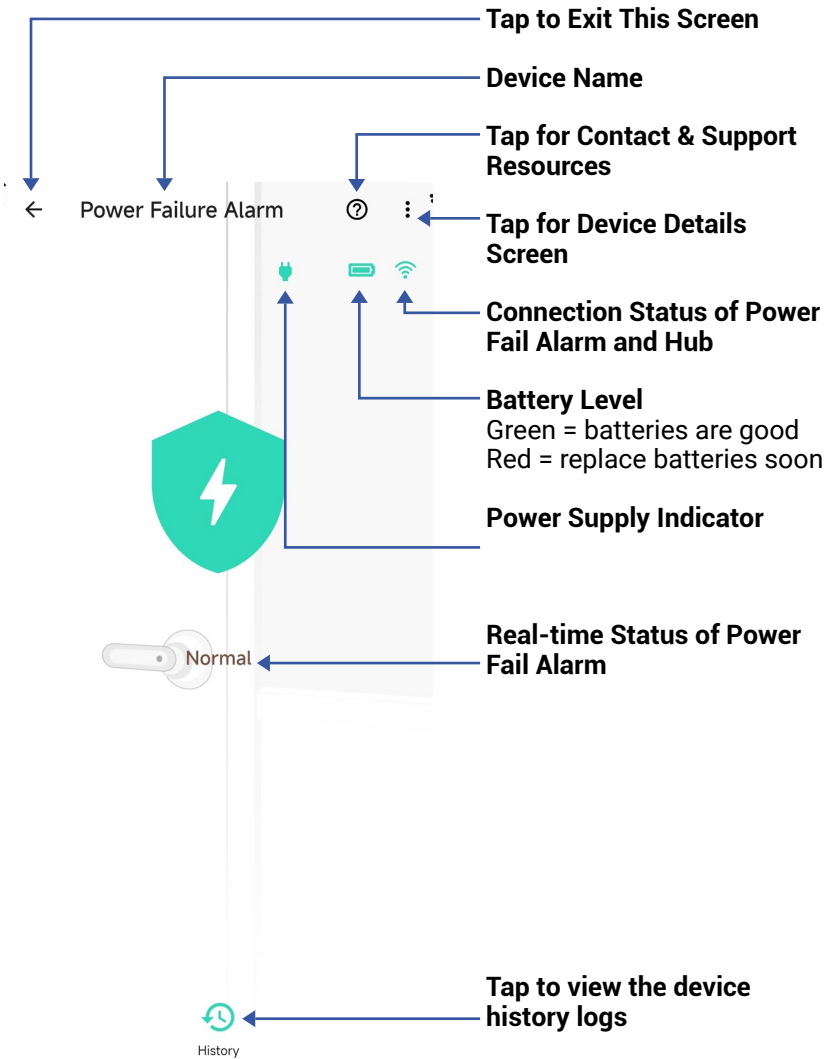



App Functions: Device Details Screen

Tap the three dots (in the upper right corner) to open the Power Fail Alarm **Details** screen. Your Power Fail Alarm's screen should be similar to the one shown below.

← Details ?

Type Power Failure Alarm

Name Power Failure Alarm >

Room 1.27 >

Favorite Will show in favorite screen

Volume Level Low

Alarm Duration 30 seconds ▾

Alert Interval 5 minutes ▾

Mute

History >

Alarm Strategy Default >

You will be notified according to selected alarm strategy when device alerts

[View your alarm strategies](#)

Notify me when power restore

State Normal

Device Type

Device Name
(Tap to Edit)

Room
(Tap to Edit)

Favorite
(Red if Favorite, Tap to Edit)

Volume Level
Physically adjust the volume level on the power fail alarm

Alarm Duration
Power fail alarm will automatically silence after this duration, the default is 30 seconds

Alert Interval
Choose how often you want to be reminded after an alarm

Mute
Tap to mute the alert sound

Device history
Tap to view device history


Alarm Strategy
Tap to edit the device's Alarm Strategy

Enable or disable the
notification when power is restored

State



App Functions: Device Details Screen, Continued

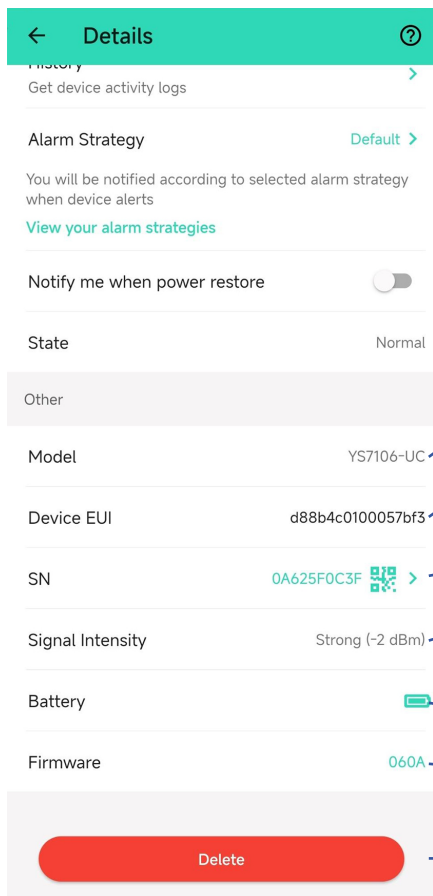

Model Number

Device EUI
Unique Identifier Number

Device Serial Number

Signal Intensity
(From YoLink Hub)

Battery

Firmware Revision
(Refer to page 29)

Remove Device from Current Account
Tap to delete the device from your YoLink account



App Functions: Alarm Strategy Screen

You can set up notifications in Alarm Strategy settings, make sure you have enabled App, Email, SMS notification from the app->Menu->Settings->Account Settings->Advanced Settings, and verified your email address and added your phone number in the app.

The screenshot shows the 'Alarm Strategy' settings screen. The header is green with a back arrow, the title 'Alarm Strategy', and a help icon. Below the header, there are several sections: 'Name' with the value 'Always' and a chevron; 'Related Devices' with the value '1' and a chevron; 'Enable Device Alarm' with a toggle switch that is turned on; 'Do Not Disturb' with a toggle switch that is turned off; 'Send App Notification' with a dropdown menu set to 'Admin'; 'Send Email' with a dropdown menu set to 'None'; 'Send SMS' with a dropdown menu set to 'None'; and 'Trigger Action' with a dropdown menu set to 'None'. At the bottom is a green 'Save' button. Annotations with arrows point to the help icon, the 'Always' value, the '1' value, the 'Enable Device Alarm' toggle, and the 'Do Not Disturb' toggle.

Strategy Name
Tap to edit the name

Related Devices
Tap to add more devices (that can alert) to this strategy, a device can be related to only one strategy

Tap to Enable or Disable The Strategy

Tap to Set Up Dnd (Do Not Disturb)



App Functions: Alarm Strategy Screen, Continued

The screenshot shows the 'Alarm Strategy' screen with a teal header. Below the header are several settings sections. The 'Name' section has a value of 'Always' with a right arrow. The 'Related Devices' section has a value of '1' with a right arrow. The 'Enable Device Alarm' section has a toggle switch that is turned on. The 'Do Not Disturb' section has a toggle switch that is turned off. The 'Send App Notification' section has a dropdown menu set to 'Admin'. Below this is a link for 'Notification Settings' with a description: 'Will send App Notification to the administrator of this home when device alerts'. The 'Send Email' section has a dropdown menu set to 'None' and a description: 'Will not send Email when device alerts'. The 'Send SMS' section has a dropdown menu set to 'None' and a description: 'Will not send SMS when device alerts'. The 'Trigger Action' section has a dropdown menu set to 'None' and a description: 'Have not set any action'. At the bottom is a large teal 'Save' button. Blue arrows point from the text callouts on the right to the corresponding settings on the screen.

Send App Notification

Tap to select Admin to enable App push, select All, if desired for all members

Notification Settings (iOS only)

Tap to change notification tone, if desired

Send Email

Tap to select Admin to enable email notification, select All, if desired to send to all members

Send SMS

Tap to select Admin to enable limited text messages, select All (subscribe required-starter or standard plan), if desired to send to all members

Trigger Action

Tap to choose trigger actions (YoLink sirens, YoLink SpeakerHubs, scene)



App Functions: Smart - Automation

The Power Fail Alarm can be set up as a condition in automation.

The screenshot shows the 'Automation' screen in an app. At the top is a green header bar with a back arrow, the title 'Automation', and a checkmark icon. Below this is the 'Name' field with the text 'barn power outage alarm'. To the right of the name is a '23/64' character count. Below the name is the 'When' section, which contains a 'Power Failure Alarm' condition with a green shield icon and a 'Power Failure' label. Below the 'When' section is the 'Then' section, which contains a 'Behavior' list. The first behavior is '1604 SpeakerHub' with the subtitle 'Play : Barn Power Outage!'. To the right of the behavior list are three icons: a list icon, a plus icon, and a delete icon. Below the behavior list is the 'Working Time' section, which is currently set to 'Always Working'. At the bottom is the 'Advanced Settings' section. Blue arrows point from text labels to specific UI elements: 'Tap to save the settings' points to the checkmark icon; 'Edit the name of the automation' points to the name field; 'Tap to set a condition for the automation' points to the 'Power Failure' label; 'Add behavior' points to the plus icon; 'Delete the behavior' points to the delete icon; 'Tap to sort behaviors' points to the list icon; 'Always Working' points to the 'Always Working' text; and 'Advanced Settings' points to the 'Advanced Settings' section.

Tap to save the settings

Edit the name of the automation

Tap to set a condition for the automation

Add behavior
Tap to add a behavior

Delete the behavior

Tap to sort behaviors

Always Working
Tap to set when the automation can be activated

Advanced Settings
Tap to edit advanced automation and logging settings

The Automation settings are saved in the cloud.

You can edit the Advanced Settings, including save the log, retry if action fails, notify if action fails, etc.

YoLink Control-D2D (device-to-device) pairing is a feature unique to YoLink products. One device can be paired to one (or more) devices. When two or more devices are paired, a link is created, “locking-in” the behavior, so that the device(s) will carry out their paired behavior when required, regardless of a connection to the internet or cloud, and even without AC power (in the case of battery-powered or battery backed-up devices). For example, a Door Sensor can be paired to a Siren Alarm, so that when the door is opened, the siren is activated.

Several important points:


- The use of Control-D2D is entirely optional. It is more common to use the app’s automation and scene settings to create desired behaviors, such as motion sensors turning on the lights automatically. Your application may require functionality during the loss of internet/WiFi, in which case Control-D2D pairing may be preferred.
- A device that controls another device is referred to as a Controller. The device that is controlled is referred to as a Responder.

N Control D2D, Continued

- While online, any paired behaviors as well as automation and scene settings (desired siren behaviors set in advance by you, such as the door sensor/siren example) will both be carried out. Paired behaviors and app settings can coexist, but use care to not create conflicting actions between the two, as the device may not operate as desired.
- A device can have up to 128 pairings.

The following instructions use pairing your Power Fail Alarm with a YoLink Outdoor Siren as an example, when power outage, the outdoor siren will start alarm.


1. To configure your Power Fail Alarm as a controller, press and hold the SET button for 5-10 seconds until the LED quickly blinks green, then, release the button.

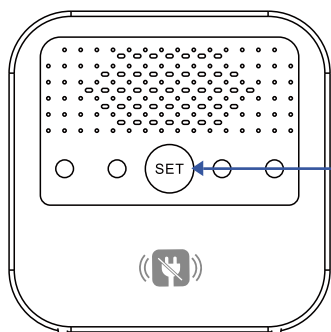

 **SET Button**
Press for 5 to 10 Seconds

N Control D2D, Continued

2. To configure a YoLink Outdoor Siren as the responder, press and hold the SET button for 5-10 seconds until the LED quickly blinks green, then, release the button.

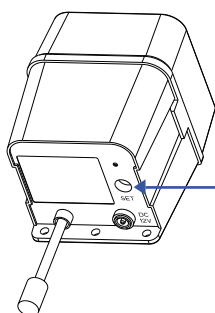


SET Button
Press for 5 to 10 Seconds

3. Upon pairing, the LED will stop blinking (this may happen after only blinking two or three times).

When power outage, the outdoor siren will start alarm.

Unpair your Power Fail Alarm:

1. On the Power Fail Alarm, press the hold the SET button for 10 to 15 seconds, until the LED quickly blinks red, then release the button.

2. On the YoLink Outdoor Siren, press and hold the SET button for 10 to 15 seconds, until the LED quickly blinks red, then release the button.



Control D2D, Continued



The LED will flash green prior to the 10 second mark, going into pairing mode, but keep pressing until the LED flashes red. The Controller's pairing is now removed. This power fail alarm will no longer control the siren.



App & 3rd-Party Services


The YoLink Power Fail Alarm works with Home Assistant.

Refer to the Home Assistant website and the YoLink integration page for instructions.


<https://www.home-assistant.io/integrations/yolink/>

P Battery Replacement

- 1 Remove the battery cover by gently prying with your fingertip or tool at the edge as shown.


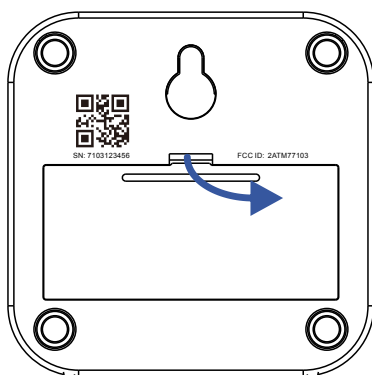


- 2 Remove the old batteries, and then press the SET button several times.

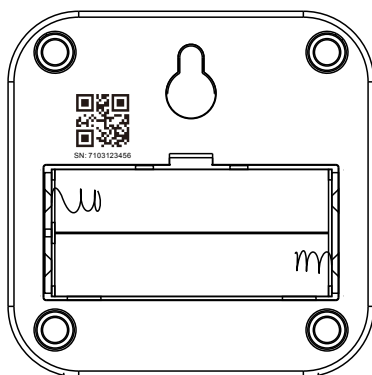

P Battery Replacement, Continued

- 3 Install two new alkaline non-rechargeable AA batteries, and then close the battery cover.

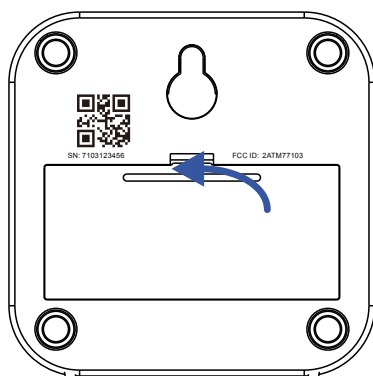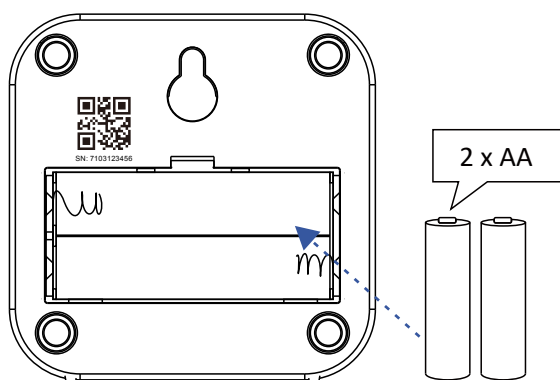

- 4 Using the app, verify there is no low-battery indicator.



Do not mix old and new batteries



Factory Reset

Factory reset will erase device settings and restore it to factory default settings. Doing a factory reset will not remove the device from your account and it will not harm the device, or lose any data or require you to redo your automations, etc.

Instructions:

Hold the SET button down for 20-30 seconds, until the LED blinks red and green alternately. Then, release the button. (Holding the button down longer than 30 seconds will abort the factory reset operation)

Factory reset will be complete when the LED stops blinking.




PLEASE NOTE: Only deleting a device from the app will remove it from your account. Factory reset will not delete the device from the app.

R Firmware Update

Your YoLink products are constantly being improved, with new features added. It is periodically necessary to make changes to your device's firmware. For optimal performance of your system, and to give you access to all available features for your devices, these firmware updates should be installed when they become available.

In the Detail screen of each device, at the bottom, you will see the Firmware section, as shown in the image below. A firmware update is available for your device if it says "#### ready now"

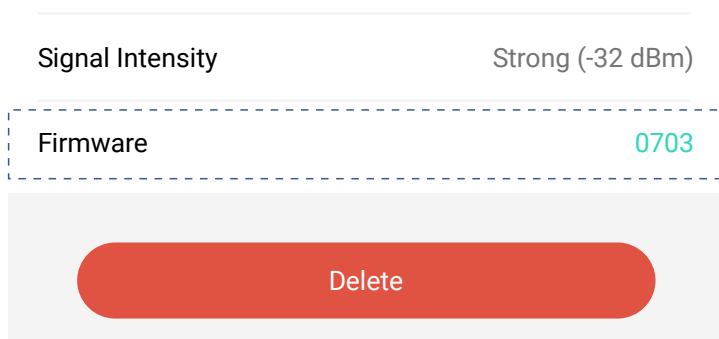

Tap in this area to start the update.

The device will update automatically, indicating progress by percentage-complete. You may use your device during the update, as the update is performed "in the background". The LED will slowly blink green during the update, and the update may continue for several minutes beyond the LED turning off.



Specifications

Voltage:	DC 5V/1A (Micro USB), DC 3V (2-AA Batteries)
----------	---

Standby Time:	5 Year
---------------	--------


Sounder Volume:	High (H): 110dB Medium (M): 104dB Low (L): 100dB
-----------------	--

Dimensions, Imperial (L x W x D):	3.15 x 3.15 x 0.99 inches
--------------------------------------	------------------------------


Dimensions, Metric (L x W x D):	80 x 80 x 25 mm
------------------------------------	-----------------

Environment:	Temperature: 32°F-122°F (0°C-50°C) Humidity: ≤ 90% non-condensing
--------------	--


S Specifications, Continued

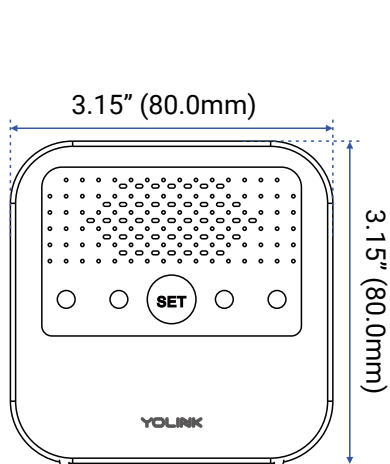

FRONT

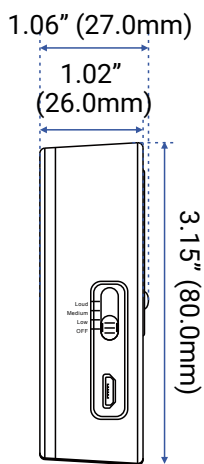

SIDE

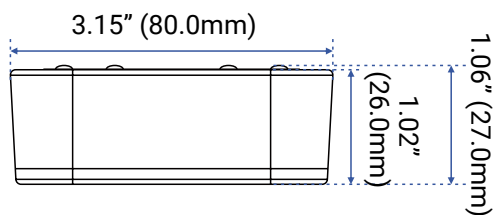

TOP

T Troubleshooting

These troubleshooting suggestions assume the device has been successfully added to the app. If the device is not working correctly and it is not in the app, return to the Add the Power Fail Alarm to the App section and double-check or re-do these steps.

A. Device can not be operated at all, and can not be operated manually via the SET button:

- 1) Check the USB cable connection.
- 2) Test with another power supply and USB cable.

B. Device can be operated manually, but it is offline

- 1) Ensure the device is connected to the cloud, by pressing the SET button until the LED illuminates briefly.
- 2) Ensure the device is within range of the hub. If you are installing the device remotely from the hub, first place it near the hub to ensure it connects to the cloud via the hub. (Press the SET button briefly to force the device to attempt to reconnect with the cloud). If it is now online, the original location was out of range of the hub. Relocating the device, the hub, or adding an additional hub may be solutions. Contact us as needed for additional guidance.



Troubleshooting, Continued

C. If a Control-D2D-paired functionality is not working:

- 1) Review and re-do the pairing steps, as needed. You can unpair the devices and re-pair them.

D. Performing a factory reset can clear up some issues. Refer to page 28 for instructions. If the device remains non-operational, it may be defective. **Please contact us for assistance with replacing your YoLink product.**

E. Other issues, please contact us via the info on the last page of this guide.



Warnings

- The Power Fail Alarm's sounder can be extremely loud! To avoid potentially permanent hearing damage, do not place the device where listeners may be very close to the device!
- Please install, operate and maintain the Power Fail Alarm only as outlined in this manual. Improper use may damage the unit and/or void the warranty
- Use only new, name brand, alkaline non-rechargeable AA batteries
- Do not use rechargeable batteries
- Do not use zinc blend batteries
- Do not mix new and old batteries
- Do not puncture or damage batteries. Leakage can cause harm on skin contact, and is toxic if ingested
- Do not dispose of batteries in fire as they may explode! Please follow local battery disposal procedures
- Do not install or use the device outside of the temperature and humidity range listed in the Environmental section in Specifications, on page 30



Warnings, Continued

- This device is not waterproof and is designed and intended only for indoor use. Subjecting this device to outdoor environment conditions such as direct sunlight, extreme hot or cold temperatures, rain, water and/or condensation can damage the device and will void the warranty

Install or use this device only in clean

- environments. Extremely dusty or dirty environments may prevent the proper operation of this device, and will void the warranty

If your Power Fail Alarm gets dirty, please

- clean it by wiping it down with a clean, dry cloth. Do not use strong chemicals or detergents, which may discolor or damage the exterior and/or damage the electronics, voiding the warranty

Do not install or use this device where it will

- be subjected to high temperatures and/or open flame

Do not install or use this device where it will

- be subjected to physical impacts and/or strong vibration. Physical damage is not covered by the warranty

To avoid damaging the device, if storing the

- device for an extended period, remove the batteries



Warnings, Continued

- Please contact Customer Service before attempting to repair, disassemble or modify the device, any of which can void the warranty and permanently damage the device

2 Year Limited Electrical Warranty

YoSmart Inc. warrants to the original user (“customer”) of this product that it will be free from defects in materials and workmanship, under normal use, for 2 years from the date of purchase. This warranty does not apply to devices that have been improperly installed, modified, put to a use other than designed, or subjected to acts of God (such as floods, lightning, earthquakes, etc.). This warranty does not cover neglected or abused products. This warranty is limited to the repair or replacement of the device, only, at YoSmart's sole discretion. YoSmart will NOT be liable for the cost of installing, removing, nor reinstalling this product, nor direct, indirect, or consequential damages to persons or property resulting from the use of this product. This warranty only covers the cost of replacement parts or replacement units, it does not cover shipping & handling fees. The customer must provide proof of purchase, in the form of the original purchase invoice or order number. The purchase must have been made from an authorized seller.

To implement this warranty please contact us by one of the methods listed on the Contact Us page of this user guide.

FCC Statement

This device complies with part 15 of the FCC Rules. Operation is subject to the following two conditions: (1) This device may not cause harmful interference, and (2) this device must accept any interference received, including interference that may cause undesired operation. Any Changes or modifications not expressly approved by the party responsible for compliance could void the user's authority to operate the equipment.

Note: This equipment has been tested and found to comply with the limits for a Class B digital device, pursuant to part 15 of the FCC Rules. These limits are designed to provide reasonable protection against harmful interference in a residential installation. This equipment generates uses and can radiate radio frequency energy and, if not installed and used in accordance with the instructions, may cause harmful interference to radio communications. However, there is no guarantee that interference will not occur in a particular installation. If this equipment does cause harmful interference to radio or television reception, which can be determined by turning the equipment off and on, the user is encouraged to try to correct the interference by one or more of the following measures:

- Reorient or relocate the receiving antenna.
- Increase the separation between the equipment and receiver.
- Connect the equipment into an outlet on a circuit different from that to which the receiver is connected.



FCC Statement, Continued

- Consult the dealer or an experienced radio/TV technician for help.

The device has been evaluated to meet general RF exposure requirement. The device can be used in portable exposure condition without restriction.

PRODUCT NAME:
POWER FAIL ALARM

PARTY:
YOSMART, INC.

TELEPHONE:
831-292-4831

MODEL NUMBER:
YS7106-UC

ADDRESS:
25172 ARCTIC OCEAN DRIVE, SUITE 106, LAKE
FOREST, CA 92630 USA

EMAIL:
SERVICE@YOSMART.COM



Contact Us

We are here for you, if you ever need any assistance installing, setting up or using a YoLink app or product!

Need help? For fastest service, please email us 24/7 at service@yosmart.com

Or call us at **831-292-4831** (US phone support hours: **Monday - Friday, 9AM to 5PM** Pacific)

You can also find additional support and ways to contact us at:

www.yosmart.com/support-and-service

Or scan the QR code:



Support Home Page

Finally, if you have any feedback or suggestions for us, please email us at feedback@yosmart.com

Thank you for trusting YoLink!

YoLink Customer Support



25172 Arctic Ocean Drive, Suite 106 Lake Forest, CA 92630
© 2026 YOSMART INC. CALIFORNIA, USA