




## Dimmer Switch

YS5707-UC

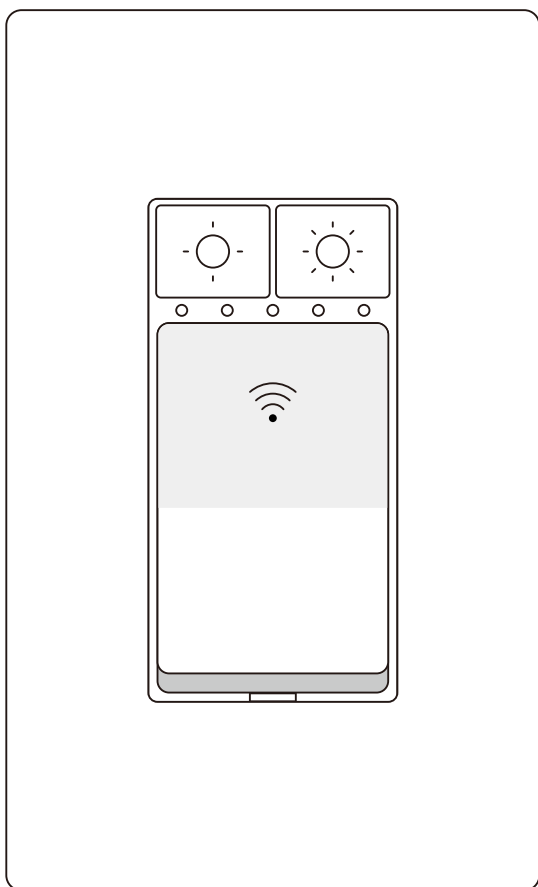

Installation & User Guide

Revision Jun. 02, 2026

# Contents

|                                    |    |
|------------------------------------|----|
| A . Welcome!                       | 01 |
| B . Before You Begin               | 02 |
| C . In the Box                     | 04 |
| D . Required Items                 | 05 |
| E . Get to Know Your Dimmer Switch | 06 |

---

|                                          |    |
|------------------------------------------|----|
| F . Install the App                      | 07 |
| G . Add Your Dimmer Switch to the App    | 08 |
| H . Installation                         | 10 |
| I . App Functions: Device Screen         | 16 |
| J . App Functions: Device Details Screen | 17 |

---

|                                       |    |
|---------------------------------------|----|
| K . App Functions: Schedule           | 19 |
| L . App Functions: Timer              | 20 |
| M . App Functions: Smart - Scene      | 21 |
| N . App Functions: Smart - Automation | 22 |
| O . Control-D2D                       | 23 |

---

|                                        |    |
|----------------------------------------|----|
| P . Using the App & 3rd-Party Services | 27 |
| Q . Factory Reset                      | 28 |
| R . Firmware Update                    | 29 |
| S . Specifications                     | 30 |
| T . Troubleshooting                    | 32 |

---

|                   |    |
|-------------------|----|
| U . Warnings      | 33 |
| V . Warranty      | 35 |
| W . FCC Statement | 36 |
| X . Contact Us    | 38 |



## Welcome!

Thank you for purchasing YoLink products! We appreciate you trusting YoLink for your smart home & automation needs. Your 100% satisfaction is our goal. If you experience any problems with your installation, with our products or if you have any questions that this manual does not answer, please contact us right away. See the Contact Us section for more info.

Thank you!

YoLink Customer Support

---

## User Guide Conventions

The following icons are used in this guide to convey specific types of information:



Very important information  
(can save you time!)



Good to know info but may not  
apply to you

## B Before You Begin

Visit our Smart Dimmer Switch support page on our website, for the latest installation guides, additional resources, information and videos by visiting:

<https://www.yosmart.com/support/YS5707-UC>

Or by scanning the QR code:



Download the most current version of the user guide by scanning the QR code:



The Dimmer Switch is generally compatible with the following light bulb types, at their respective maximum loads:



LED  
150 Watts



Fluorescent/CFL  
150 Watts



Halogen  
450 Watts



Incandescent  
450 Watts

## B Before You Begin, Continued



Your Dimmer Switch connects to the internet via a YoLink hub, and it does not connect directly to your WiFi or local network. In order for remote access to the device from the app, and for full functionality, a hub is required.

This guide assumes the YoLink app has been installed on your smartphone, and a YoLink hub is installed and online (or your location, apartment, condo, etcetera, is already served by a YoLink wireless network).

Do NOT overload or use your dimmer switch to control receptacles, motor-driven appliances, or transformer-supplied appliances.

Do review the environmental limitations of the Dimmer Switch prior to installation. The Dimmer Switch is intended for indoor locations, only!

Do familiarize yourself with this user guide prior to beginning installation.

Do ensure that you are comfortable working with electricity and handling the associated tools, or hire a qualified electrician to install your Dimmer Switch!

## B Before You Begin, Continued


The Dimmer Switch requires a neutral wire! It will not function without a neutral wire. As explained in the Installation section, you must identify the neutral wire in the switch's electrical box. If a neutral wire is not present, one must be installed. Consult with or hire a qualified and properly licensed electrician, as required.




The Dimmer Switch is not compatible with 3-way switches or 3-way style wiring, but 3-way operation functionality can be accomplished using two YoLink Dimmer Switches, wired as standard switches, and paired using Control-D2D pairing. This pairing process is explained in the Control-D2D pairing section of this user guide.

Refer to the Before You Begin section for additional important information prior to installing your Dimmer Switch.


## C In the Box

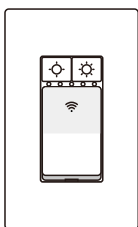

Dimmer Switch

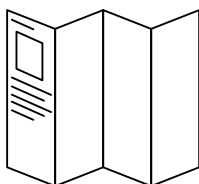

Quick Start Guide




Faceplate Screws (2)  
& Electrical Box Screws (2)




Wire Connectors (4)  
("Wire Nuts")

## D Required Items

Tools you will need:

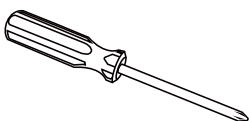


Medium Phillips Screwdriver



Small Slotted Screwdriver

Tools you may need:

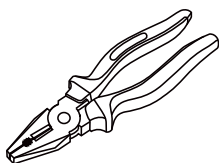


Wire Strippers or Cutters



Multimeter

# E

## Get to Know Your Smart Dimmer Switch

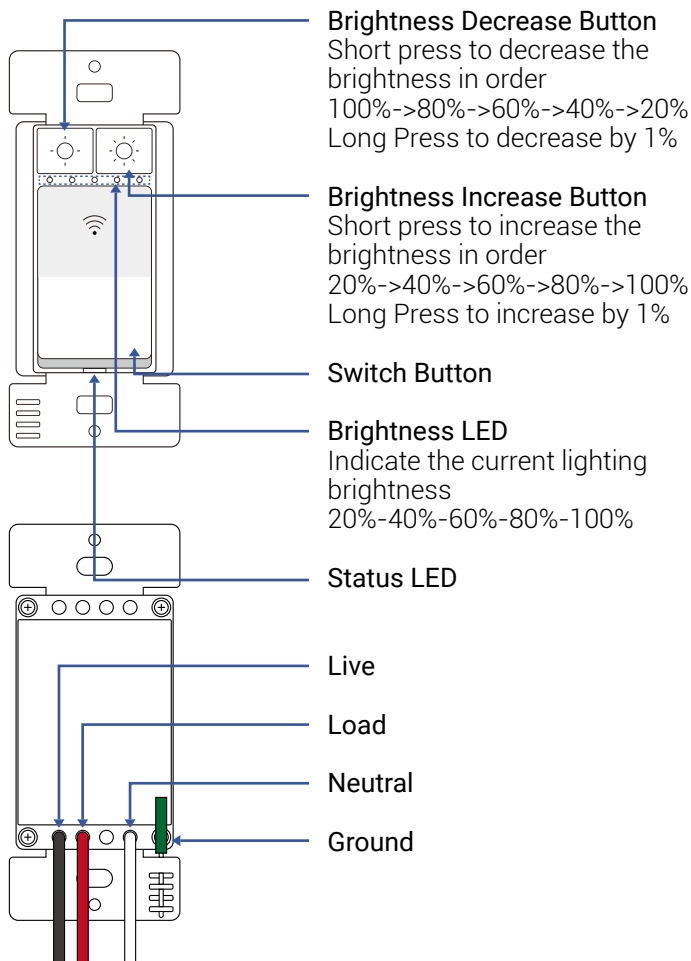

## LED Behaviors



**Blinking Red Once, then Green Once**  
Device Start-up



**Blinking Red And Green Alternately**  
Restoring to Factory Defaults



**Red**  
Dimmer is off



**Green**  
Dimmer is on



**Blinking Green**  
Connecting to Cloud



**Slow Blinking Green**  
Updating



**Fast Blinking Green**  
Control-D2D Pairing in Progress



**Fast Blinking Red**  
Control-D2D Unpairing in Progress



## Install the App

If you are new to YoLink, please install the app on your phone or tablet, if you have not already. Otherwise, please proceed to the next section.

Scan the appropriate QR code below or find the “YoLink app” on the appropriate app store.



Apple phone/tablet  
iOS 9.0 or higher



Android phone/tablet  
6.0 or higher

Open the app and tap **Sign up for an account**. You will be required to provide a username and a password. Follow the instructions, to set up a new account. Allow notifications, when prompted.

You will immediately receive a welcome email from [no-reply@yosmart.com](mailto:no-reply@yosmart.com) with some helpful information. Please mark the [yosmart.com](https://yosmart.com) domain as safe, to ensure you receive important messages in the future.


Log in to the app using your new username and password.

The app opens to the **Favorite** screen. This is where your favorite devices and scenes will be shown. You can organize your devices by room, in the **Rooms** screen, later.




## Add Your Dimmer Switch to the App

1. Tap **Add Device** (if shown) or tap the scanner icon:

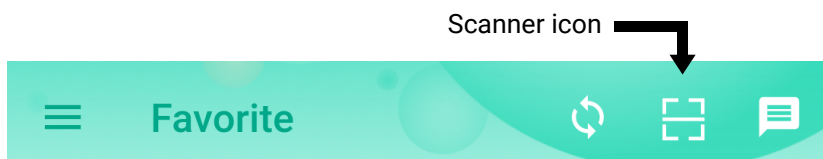

2. Approve access to your phone's camera, if requested. A viewfinder will be shown on the app.

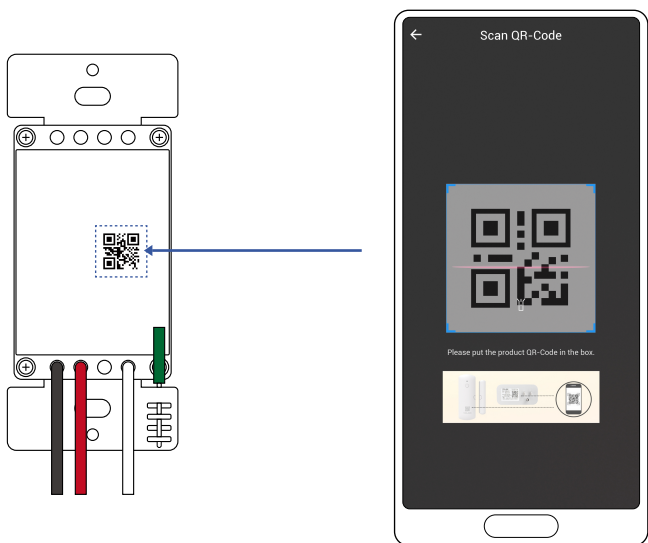


3. Hold the phone over the QR code so that the code appears in the viewfinder. If successful, the **Add Device** screen will be displayed.

G

## Add Your Dimmer Switch to the App, Continued


4. You can change the device name and assign it to a room later. Tap **Bind device**.

5. If successful, the screen will appear as shown. Tap **Done**.

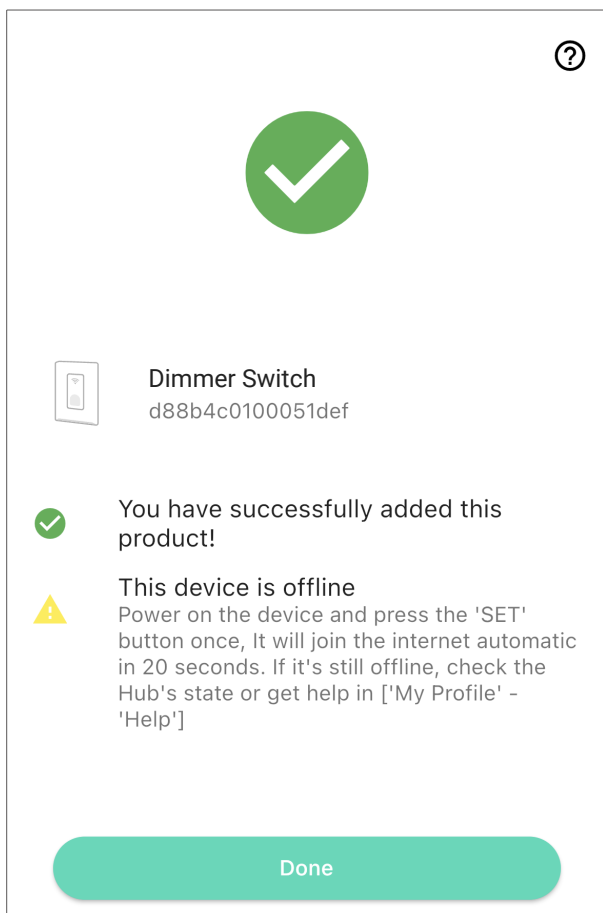

## H Installation

**1.** Turn off the circuit that serves the switch at the circuit breaker panel (or other means of disconnecting the AC power to the circuit). Do NOT work on “hot” electrical wiring! Verify that power has been removed to the switch, by testing the switch, and by using a multimeter or other type of voltage tester before removing any wires from the switch.

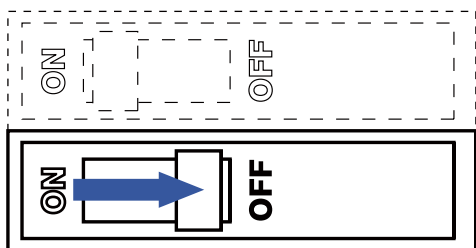

If replacing an existing switch, proceed to the next step. For new installations, skip ahead to step 6

**2.** Using a slotted screwdriver, remove the switch faceplate, then using a slotted or Phillips screwdriver, remove the switch and pull it away from the wall. Retain the screws; do not discard.

**3.** Before removing any wiring from the switch, identify the wires on the switch and in the electrical box:



## Installation, Continued

**Ground wire:** this wire is typically a bare copper wire, but it may have a green jacket (insulation), or it may have another color insulation with green tape identifying it as a ground. Additional means of identification are the wire is terminated on (connected to) a green screw on the switch, and/or the screw or wire connection has a designation such as “GND” and/or includes the universal earth ground icon:



**Line/Live or Hot Wire:** this wire is typically black, but can be red or another color, but if not it may be marked as the hot wire with black or red tape. One of the wires on the existing light switch should be the hot wire. Another way of identifying this wire is that it may be connected to other wires in the box. If the box contains multiple switches, for example, there will typically be a hot wire that connects to each switch. Observe each of the non-ground wires on the switch, looking for connections to other black (or red) wires under a “wire nut” or similar wire connector.



## Installation, Continued

**4.** Prepare to terminate (connect) the wires to the Dimmer Switch. Refer to Figure 1 on the next page. The following wires should have been removed from the existing switch, ready to terminate on the new switch:

- Ground wire
- Load/switch leg wire (to light/lights)
- Hot/Line/Live wire


If there are multiple neutral wires in the box, as shown in Figure 1, you may need to furnish a jumper wire, to connect the neutral wires to the Dimmer Switch. If you do not have wire on hand, if there is enough spare length or slack in the wires, you may be able to cut off a short section, to make a jumper wire.

**5.** Each wire must have the end stripped (insulation removed) approximately  $\frac{1}{2}$  inch, and straight. Straighten or trim off any bare wire loops that were used on the existing switch.



## H Installation, Continued

**6.** Connect the wiring to the Dimmer Switch. Place the switch's live (black) wire, and the live wire(s) in the box under one wire nut, twisting the wire nut until tight. "Connect" the remaining wires together, as shown in Figure 1.

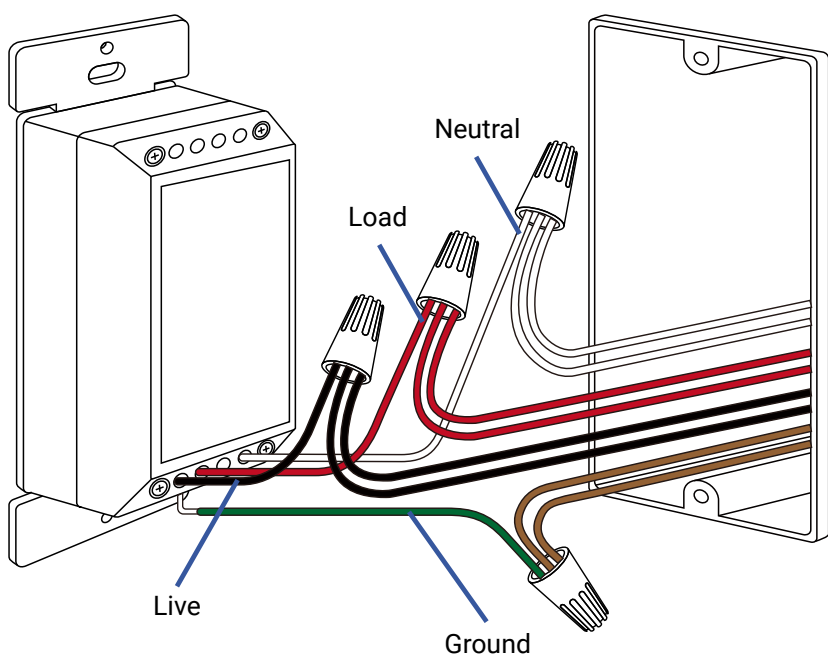


**Figure 1**

**7.** Check each wire nut connection by gently tugging on each wire, ensuring it does not pull out of the wire nut. Redo any connections that do not pass this test.


## H Installation, Continued

**8.** Gently push the wiring and the switch into the electrical box. Then, using the original or included screws, secure the Dimmer Switch to the box, as shown in Figure 2A.

**9.** The Dimmer Switch is shipped with a matching decorative trim plate ("faceplate") and accompanying base plate. If installing the Dimmer Switch in a new or existing multi-gang box, save or discard these plates, as they will not be used. After installing your own switch faceplate/trim, proceed to step 13. Otherwise, secure the base plate to the Dimmer Switch, using the two included faceplate screws, as shown in Figure 2B.

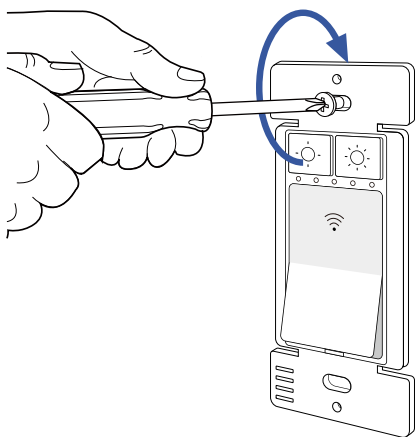


**Figure 2A**

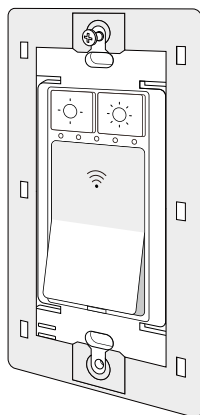


**Figure 2B**

## H Installation, Continued

**10.** Snap the (outer) faceplate to the base plate, as shown.

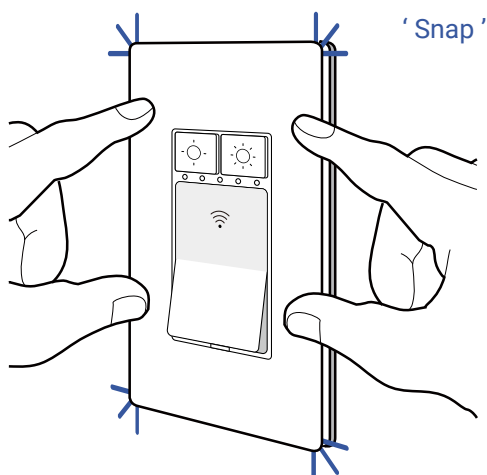

**11.** Turn on power to the circuit by returning the circuit breaker to the on position (or reconnect power per your applicable circuit disconnection method).

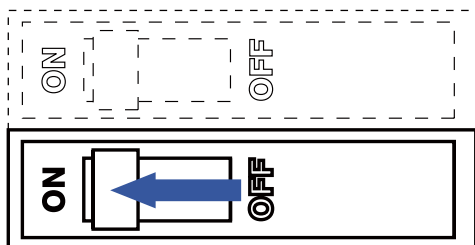


**12.** Test the switch by turning it off and on and verifying the lights turn off and on with it.

**13.** Check the status of the switch in the app. It should be indicated as online.



# App Functions: Device Screen

In the app, tap on your Dimmer Switch icon. Your main screen should be similar to the one shown below.

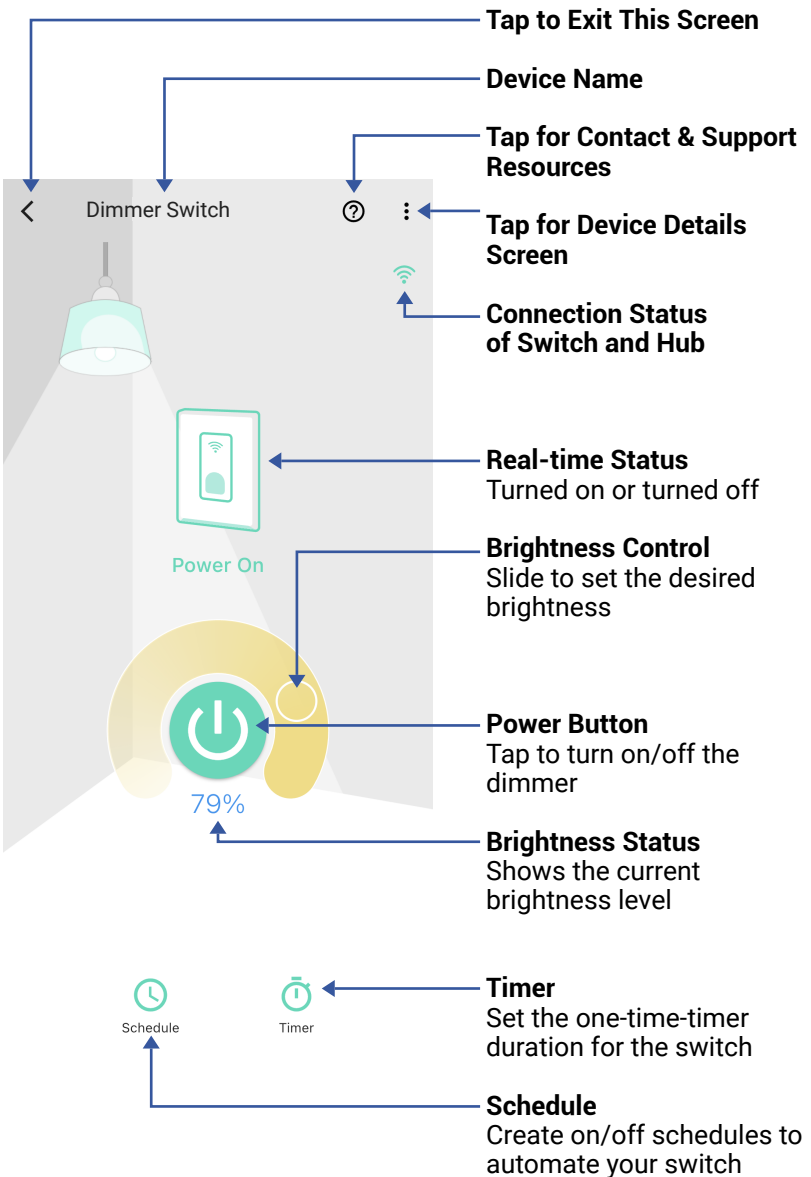



# App Functions: Device Details Screen

Tap the three dots (in the upper right corner) to open the **Details** screen. Your screen should be similar to the one shown below.

<

Details

?

Type

YoLink Dimmer

Name

YoLink Dimmer >

Room

Not Set >

Favorite

Will show in favorite screen

♥

History

Get device logs

>

State

On

Time

11/1 21:51:03 (GMT-4)

Sync With Mobile >

Settings

Status LED

☒

Brightness LED

☒

Gentle ON

2 seconds >

Gentle OFF

2 seconds >

Dimming Calibration ( 0.0 )

Device Type

Device Name

(Tap to Edit)

Room

(Tap to Edit)

Favorite

(Red if Favorite, Tap to Edit)

Device on/off history

Tap to view device history

Connection status of switch and Hub

Time

Tap to sync with mobile

Status LED

Tap to enable or disable switch status LED

Device Brightness LED

Tap to enable or disable the device brightness LED

Gentle On

The ramp-up duration (turning on)

Gentle Off

The ramp-down duration (turning off)

Dimming Calibration

Set the dimming range to find the proper minimum level of brightness by dimming up/down the brightness and checking if the light flickers.



# App Functions: Device Details Screen, Continued

<

Details

?

Settings

Status LED

Brightness LED

Gentle ON

2 seconds >

Gentle OFF

2 seconds >

Dimming Calibration ( 0.0 )

Other

Power On Status

Off

Model

YS5707-UC

Device EUI

d88b4c0100051d58

SN

1AF7C5107C

>

Signal Intensity

Strong (~45 dBm)

Firmware

0701

Delete

## Power On Status

Power on status after firmware update or power loss, choose Last State, On or Off. Default is set to Last State

## Model Number

## Device EUI

Unique Identifier Number

## Device Serial Number

## Signal Intensity

(From YoLink Hub)

## Firmware Revision

(Refer to page 28)

## Remove Device From Current Account

Tap to delete the device from your YoLink account



# App Functions: Schedule

**Dimmer Switch**

- Tap to add a schedule (+)
- Tap to enable or disable a schedule (toggle switch)
- Tap to edit the schedule (toggle switch)
- Swipe left to show Edit and Delete options (Edit/Delete buttons)

**YoLink Dimmer**

- Tap to save the settings (checkmark)
- Set the preferred state "on", "off", or "on and off". (Turn On/Turn Off toggles)
- Set the schedule time (Time slots: 18:00, 19:00, 20:00, 21:00, 22:00, 23:00)
- Apply special brightness (Special Brightness slider, 60%)
- Set repeating frequency (Repeat On days: Sun, Mon, Tue, Wed, Thu, Fri, Sat)



You can have a maximum 6 schedules at one time.

The schedule runs on the device (no internet connection required).

You can add more schedules in Automation settings. Automation settings are saved in the cloud.



## App Functions: Timer

YoLink Dimmer

Turn On After ☒

Turn Off After ☒

Hours Minutes Hours Minutes

0 : 30 1 : 30

Special Brightness (60%) ☒

Tap to save the settings

Tap to choose action "on", "off", or "on and off"

Set the timer duration

Apply special brightness

The timer starts when the settings are saved (by tapping the checkmark at the upper right of the screen).

You can add more timers in Automation settings. Automation settings are saved in the cloud.




The timer will run only once. You can set a new timer after the timer has already run once or after you cancel it.

The timer runs on the device (no internet connection required).



# App Functions: Smart - Scene

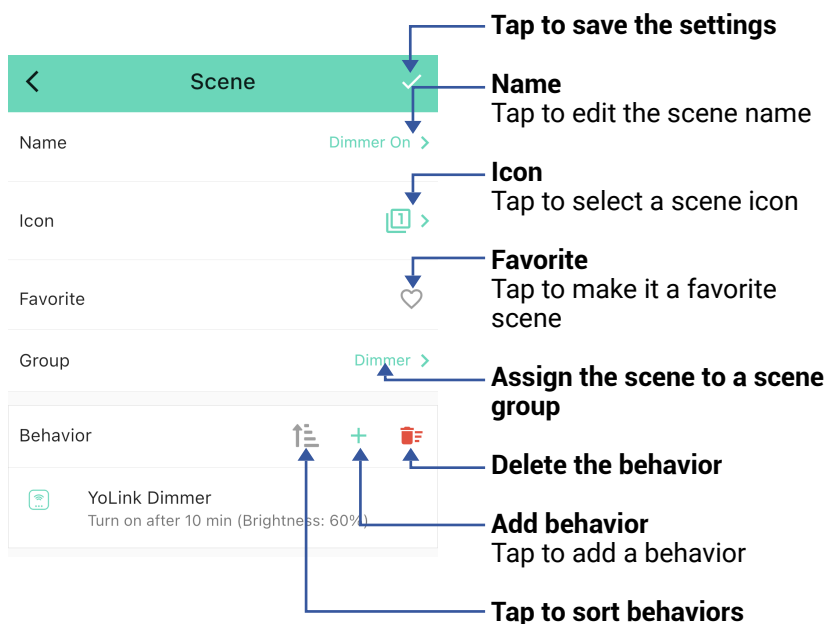

The Scene settings are saved in the cloud.

One Scene group only shows one active scene, for example, in Home scene group, if you execute the Home scene, it will show the Home scene activated, if you execute Away scene next, the Away scene will revert the Home scene's active status to off.



# App Functions: Smart - Automation

The Dimmer Switch can be set up as a condition or action in automation.

The screenshot shows the 'Automation' app interface with several annotations:

- Automation**: The title of the app, located at the top center.
- Tap to save the settings**: An arrow pointing to a checkmark icon in the top right corner.
- Edit the name of the automation**: An arrow pointing to the text 'Name switch' below the title.
- Tap to set a schedule for the automation**: An arrow pointing to the 'When' section, which shows a clock icon and the text 'When 12:00 AM Every Tue,Wed,Thu'.
- Add behavior**: An arrow pointing to a plus sign icon in the 'Behavior' section.
- Delete the behavior**: An arrow pointing to a trash can icon in the 'Behavior' section.
- Tap to sort behaviors**: An arrow pointing to a list icon in the 'Behavior' section.
- Always Working**: An arrow pointing to the text 'Always Working' in the 'Working Time' section.
- Advanced Settings**: An arrow pointing to the text 'Advanced Settings' at the bottom of the screen.

The Automation settings are saved in the cloud.

You can edit the Advanced Settings, including save the log, retry if action fails, notify if action fails, etc.



## Control D2D

YoLink Control-D2D (device-to-device) pairing is a feature unique to YoLink products. One device can be paired to one (or more) devices. When two or more devices are paired, a link is created, “locking-in” the behavior, so that the device(s) will carry out their paired behavior when required, regardless of a connection to the internet or cloud, and even without AC power (in the case of battery-powered or battery backed-up devices). For example, a Door Sensor can be paired to a Siren Alarm, so that when the door is opened, the siren is activated.

### **Several important points:**

- The use of Control-D2D is entirely optional. It is more common to use the app’s automation and scene settings to create desired behaviors, such as motion sensors turning on the lights automatically. Your application may require functionality during the loss of internet/WiFi, in which case Control-D2D pairing may be preferred.
- The Dimmer Switch buttons will operate for on, off and dimming settings regardless of it being online or connected to the cloud.



## Control D2D, Continued

- While online, any paired behaviors as well as automation and scene settings (desired switch behaviors set in advance by you, such as the motion sensor/light switch example) will both be carried out. Paired behaviors and app settings can coexist, but use care to not create conflicting actions between the two, as the device may not operate as desired.
- A device can have up to 128 pairings.
- During D2D pairing, both the controller and the responder must be in the correct operational state corresponding to their intended behavior. For example, if the controller (door sensor) is meant to turn on a plug when the door opens, the door sensor should be in the open state and the plug should be on during pairing.
- A device that controls another device is referred to as a Controller. The device that is controlled is referred to as a Responder.



### How to Pair Two Devices:

In this example, two Dimmer Switches will be paired to each other, to provide 3-way functionality.

- 1.** Start with both switches off. Choose one switch to act as a Controller. Turn on the Controller, then press the power button for 5 to 10 seconds until the green LED flashes.
- 2.** At the other switch (the Responder), turn the switch on. Press the power button for 5 to 10 seconds until the green LED flashes. After a moment, the LEDs will turn off.
- 3.** Test your pairing by turning off both lights, then turning the Controller light on. The Responder light should then turn on (the switch will go to the last brightness level set). If not, repeat the pairing. If still not successful, follow the How to Unpair Devices section on the next page.
- 4.** For 3-way type operation between these two switches, repeat steps 1 and 2, but for the switch that was originally the Responder. This switch will now act as a Controller.
- 5.** Test your pairing, from both switches. Turning one switch on should result in both switches turning on. Turning either of the switches off results in both light switches turning off.



### How to Unpair Two Devices:

1. Start with both switches off. Turn on the Controller device (in this case, either one of the lights that are now in a 3-way type pairing). Press the power button for 10 to 15 seconds, until the LED flashes orange. Note: the LED will flash green prior to the 10 second mark, going into pairing mode, but keep pressing until the LED flashes orange. The Controller's pairing is now removed. This switch will no longer control the other switch, but the other switch's pairing is unchanged.
2. To remove the other switch's paired behavior, repeat the steps just used for the first switch. Test both switches to ensure that they no longer control or respond to the opposite switch.



If replacing existing 3-way switches with Dimmer Switches, the wiring may not immediately be compatible with the Dimmer Switch. The "traveler" wire will not be connected to either Dimmer Switch, but it may need to be changed to another function (such as to a neutral wire), so that each switch has a hot, neutral, ground, and at least one switch leg wire going to the controlled light(s).



## Control D2D, Continued



These instructions can be applied to other devices, but the LED color and flash behaviors can vary between models.

Generally, when pairing, the Responder should begin in the state (on/off or opened/closed or locked/unlocked) that it should change to when the Controller is activated.



## Using the App & 3rd-Party Services

The YoLink Dimmer Switch works with several voice assistants, including Alexa and Google, and it works with other automation platforms such as IFTTT and Home Assistant.

To set up 3rd-party integrations (Alexa, Google and IFTTT), in the app, go to Settings, Third-Party Services, and follow the instructions.

Refer to the Home Assistant website and the YoLink integration page for instructions.

<https://www.home-assistant.io/integrations/yolink/>



## Factory Reset

Factory reset will erase device settings and restore it to factory default settings. Doing a factory reset will not remove the device from your account and it will not harm the device, or lose any data or require you to redo your automations, etc.

### Instructions:

Hold the Switch button down for 20-30 seconds, until the LED blinks red and green alternately. Then, release the button. (Holding the button down longer than 30 seconds will abort the factory reset operation)

Factory reset will be complete when the LED stops blinking.




Only deleting a device from the app will remove it from your account. Factory reset will not delete the device from the app.

## R Firmware Update

Your YoLink products are constantly being improved, with new features added. It is periodically necessary to make changes to your device's firmware. For optimal performance of your system, and to give you access to all available features for your devices, these firmware updates should be installed when they become available.

In the Detail screen of each device, at the bottom, you will see the Firmware section, as shown in the image below. A firmware update is available for your device if it says "#### ready now"

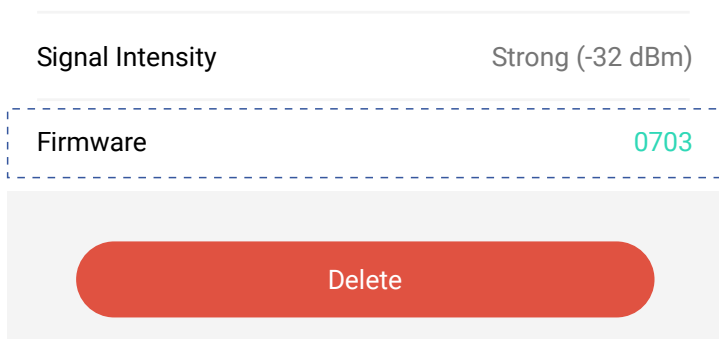

Tap in this area to start the update.

The device will update automatically, indicating progress by percentage-complete. You may use your device during the update, as the update is performed "in the background". The LED will slowly blink green during the update, and the update may continue for several minutes beyond the LED turning off.



## Specifications

|             |                                                                                   |
|-------------|-----------------------------------------------------------------------------------|
| Controller: | Semtech® LoRa® RF<br>Module YL09<br>microcontroller with<br>32-Bit RISC processor |
|-------------|-----------------------------------------------------------------------------------|

|           |                     |
|-----------|---------------------|
| Listings: | ETL-Listing Pending |
|-----------|---------------------|

|        |       |
|--------|-------|
| Color: | White |
|--------|-------|

|                 |              |
|-----------------|--------------|
| AC Input Power: | AC120V, 60Hz |
|-----------------|--------------|

|                          |  |
|--------------------------|--|
| Maximum Load<br>(Watts): |  |
|--------------------------|--|


|                       |     |
|-----------------------|-----|
| Incandescent/Halogen: | 450 |
| LED:                  | 150 |

|                                 |  |
|---------------------------------|--|
| Operating Temperature<br>Range: |  |
|---------------------------------|--|


|             |               |
|-------------|---------------|
| Fahrenheit: | -22°F – 113°F |
| Celsius:    | -30°C – 45°C  |

|                              |                          |
|------------------------------|--------------------------|
| Operating Humidity<br>Range: | ≤85%RH<br>Non-Condensing |
|------------------------------|--------------------------|


|                              |              |
|------------------------------|--------------|
| Application<br>Environments: | Indoor, Only |
|------------------------------|--------------|

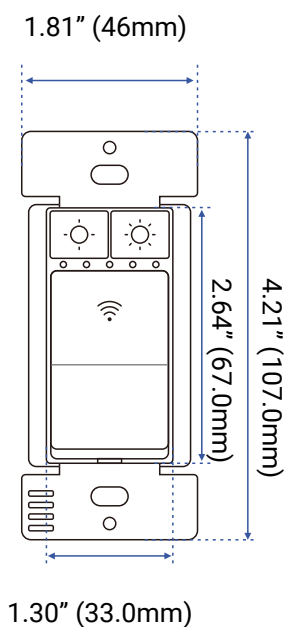

FRONT


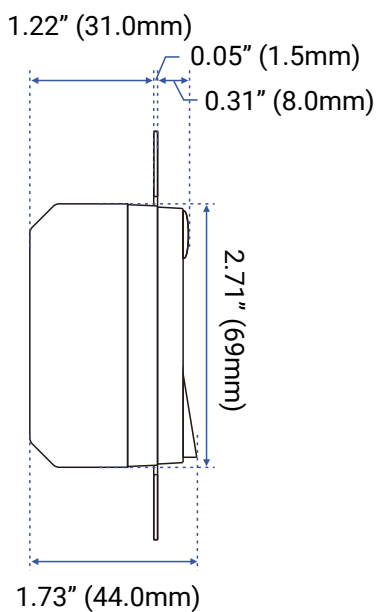


SIDE

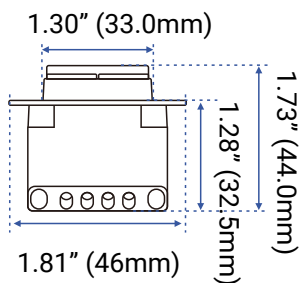

TOP

## S Specifications, Continued

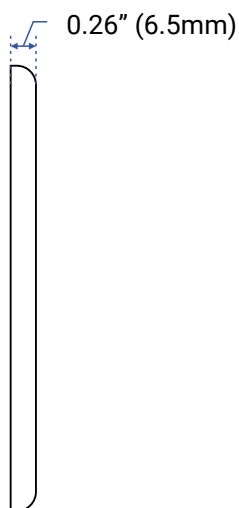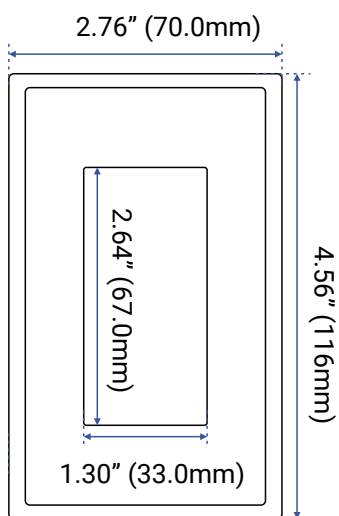

FACEPLATE (FRONT)

FACEPLATE (SIDE)

### **Malfunction:**

#### **Device is offline :**

##### **Possible solution**

- If switch is not connected to the cloud, press the switch button on switch once
- If Hub is offline, reconnect the Hub to the Internet and press the switch button on switch once
- If Hub is not on, power on the Hub again and press the switch button on switch once
- If switch is out of range with Hub, relocating the Hub may be required
- If switch is not turned on, turn on the device

#### **Timer does not run :**

##### **Possible solution**

- Power outages (before or during) can prevent the timer from executing. Press the switch button once to turn on/off the switch, also you can turn on/off the switch via YoLink app or set a new timer.

If this does not resolve the issue, please contact our customer support department (see the contact info on the last page of this guide).



We recommend checking for and performing any available firmware updates before contacting customer support.



## Warnings

- Please install, operate and maintain the Dimmer Switch only as outlined in this manual. Improper use may damage the unit and/or void the warranty.
- Always adhere to local, regional and national electrical codes, including any local ordinances regarding electrical installation or service work.
- Hire and/or consult a qualified electrician if you are not capable of installing this device safely and per all requirements.
- Use extreme care around electrical circuits and panels, as the electricity can burn and cause property damage, bodily harm or death!
- Use care when using any tools, as sharp edges and/or improper use can result in serious injuries.
- Refer to Specifications (page 30-31) for the device environmental limitations.
- Do not install or use this device where it will be subjected to high temperatures and/or open flame
- This device is not waterproof and is designed and intended only for indoor use.



## Warnings, Continued

- Subjecting this device to outdoor environment conditions such as direct sunlight, extreme hot, cold temperatures or extreme humid, rain, water and/or condensation can damage the device and will void the warranty
- Install or use this device only in clean environments. Dusty or dirty environments may prevent the proper operation of this device, and will void the warranty  
If your Dimmer Switch does get dirty, please clean it by wiping it down with a clean, dry cloth.
- Do not use strong chemicals or detergents, which may discolor or damage the exterior and/or damage the electronics, voiding the warranty
- Do not install or use this device where it will be subjected to physical impacts and/or strong vibration. Physical damage is not covered by the warranty
- Please contact Customer Service before attempting to repair disassemble or modify the device, any of which can void the warranty and permanently damage the device



### **1 Year Limited Electrical Warranty**

YoSmart Inc. warrants to the original user ("customer") of this product that it will be free from defects in materials and workmanship, under normal use, for 1 year from the date of purchase. This warranty does not apply to devices that have been improperly installed, modified, put to a use other than designed, or subjected to acts of God (such as floods, lightning, earthquakes, etc.). This warranty does not cover neglected or abused products. This warranty is limited to the repair or replacement of the device, only, at YoSmart's sole discretion. YoSmart will NOT be liable for the cost of installing, removing, nor reinstalling this product, nor direct, indirect, or consequential damages to persons or property resulting from the use of this product. This warranty only covers the cost of replacement parts or replacement units, it does not cover shipping & handling fees. The customer must provide proof of purchase, in the form of the original purchase invoice or order number. The purchase must have been made from an authorized seller.

To implement this warranty please contact us by one of the methods listed on the Contact Us page of this user guide.

## FCC Statement

This device complies with part 15 of the FCC Rules. Operation is subject to the following two conditions: (1) this device may not cause harmful interference, and (2) this device must accept any interference received, including interference that may cause undesired operation.

Any changes or modifications not expressly approved by the party responsible for compliance could void the user's authority to operate the equipment.

**NOTE:** This equipment has been tested and found to comply with the limits for a Class B digital device, pursuant to Part 15 of the FCC Rules. These limits are designed to provide reasonable protection against harmful interference in a residential installation. This equipment generates, uses and can radiate radio frequency energy and, if not installed and used in accordance with the instructions, may cause harmful interference to radio communications. However, there is no guarantee that interference will not occur in a particular installation. If this equipment does cause harmful interference to radio or television reception, which can be determined by turning the equipment off and on, the user is encouraged to try to correct the interference by one or more of the following measures:

- Reorient or relocate the receiving antenna.
- Increase the separation between the equipment and receiver.



## FCC Statement, Continued

- Connect the equipment into an outlet on a circuit different from that to which the receiver is connected.
- Consult the dealer or an experienced radio/TV technician for help.

To maintain compliance with FCC's RF Exposure guidelines, This equipment should be installed and operated with minimum distance between 20cm the radiator your body: Use only the supplied antenna.

PRODUCT NAME:  
DIMMER SWITCH

---

PARTY:  
YOSMART, INC.

---

TELEPHONE:  
831-292-4831

---

MODEL NUMBER:  
YS5707-UC

---

ADDRESS:  
25172 ARCTIC OCEAN DRIVE, SUITE 106 LAKE  
FOREST, CA 92630 USA

---

EMAIL:  
SERVICE@YOSMART.COM

---



## Contact Us

We are here for you, if you ever need any assistance installing, setting up or using a YoLink app or product!

Need help? For fastest service, please email us 24/7 at [service@yosmart.com](mailto:service@yosmart.com)

Or call us at **831-292-4831** (US phone support hours: **Monday - Friday, 9AM to 5PM** Pacific)

You can also find additional support and ways to contact us at:

[www.yosmart.com/support-and-service](http://www.yosmart.com/support-and-service)

Or scan the QR code:



Support Home Page

Finally, if you have any feedback or suggestions for us, please email us at [feedback@yosmart.com](mailto:feedback@yosmart.com)

Thank you for trusting YoLink!

YoLink Customer Support

# YOLINK

25172 Arctic Ocean Drive, Suite 106 Lake Forest, CA 92630  
© 2026 YOSMART INC. CALIFORNIA, USA