




FlexSwitch

YS5709-UC

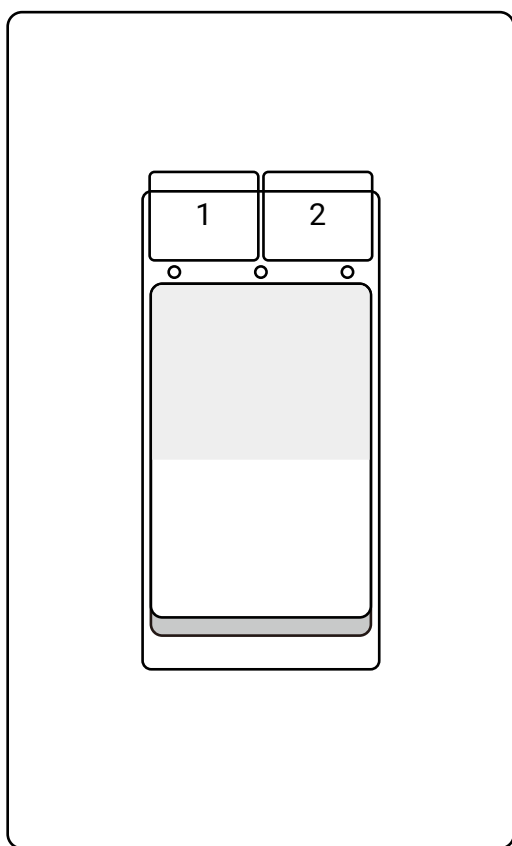

Installation & User Guide

Revision Jun. 02, 2026

TABLE OF CONTENTS

A . Welcome!	01
B . Before You Begin	02
C . In the Box	04
D . Required Items	05
E . Get to Know Your FlexSwitch	06
F . Install the App	07
G . Add Your FlexSwitch to the App	09
H . Pre-installation	10
I . Installation	12
J . App Functions: Device Screen	17
K . App Functions: Device Details Screen	18
L . App Functions: Programmable Buttons	19
M . App Functions: Schedule	21
N . App Functions: Timer	22
O . App Functions: Smart - Scene	23
P . App Functions: Smart - Automation	24
Q . Control-D2D	25
R . Using the App & 3rd-Party Services	28
S . Factory Reset	30
T . Firmware Update	31
U . Battery Replacement	32
V . Specifications	36
W . Troubleshooting	39
X . Warnings	40
Y . Warranty	41
Z . FCC Statement	43
AA. Contact Us	45



Welcome!

Thank you for purchasing YoLink products! We appreciate you trusting YoLink for your smart home & automation needs. Your 100% satisfaction is our goal. If you experience any problems with your installation, with our products or if you have any questions that this manual does not answer, please contact us right away. See the Contact Us section for more info.

Thank you!

YoLink Customer Support

User Guide Conventions

The following icons are used in this guide to convey specific types of information:



Very important information
(can save you time!)



Good to know info but may not
apply to you

B Before You Begin

Visit our FlexSwitch support page on our website, for the latest installation guides, additional resources, information and videos by visiting:

<https://www.yosmart.com/support/YS5709-UC>

Or by scanning the QR code:



Download the most current version of the user guide by scanning the QR code:



B Before You Begin, Continued



Your FlexSwitch connects to the internet via a YoLink hub, and it does not connect directly to your WiFi or local network. In order for remote access to the device from the app, and for full functionality, a hub is required.

This guide assumes the YoLink app has been installed on your smartphone, and a YoLink hub is installed and online (or your location, apartment, condo, etcetera, is already served by a YoLink wireless network).


Please...

- Review the environmental limitations of the FlexSwitch prior to installation. The FlexSwitch is intended for indoor locations, only!
- Familiarize yourself with this user guide prior to beginning installation.
- Ensure that you are comfortable working with electricity and handling the associated tools, or hire a qualified electrician to install your FlexSwitch!


The FlexSwitch is powered by two AA batteries, and it does not require a neutral wire!



In the Box

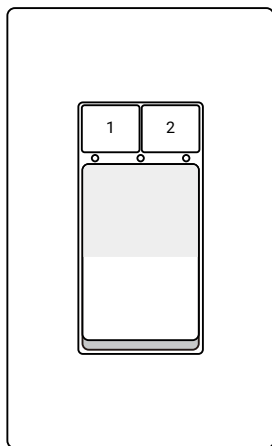


FlexSwitch

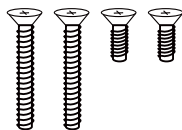


Faceplate Screws (2)
& Electrical Box Screws (2)



Wire Connectors (2)

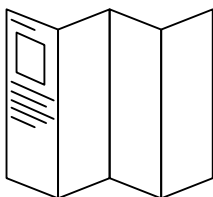


Quick Start Guide




2 x AA Batteries (Installed)

D Required Items

Tools you will need:

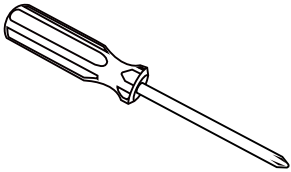


Medium Phillips Screwdriver

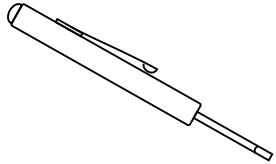


Small Slotted Screwdriver

Tools you may need:


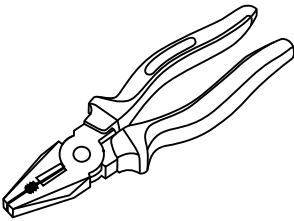


Wire Strippers or Cutters

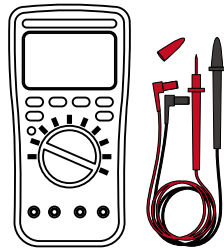

Multimeter

E Get to Know Your FlexSwitch

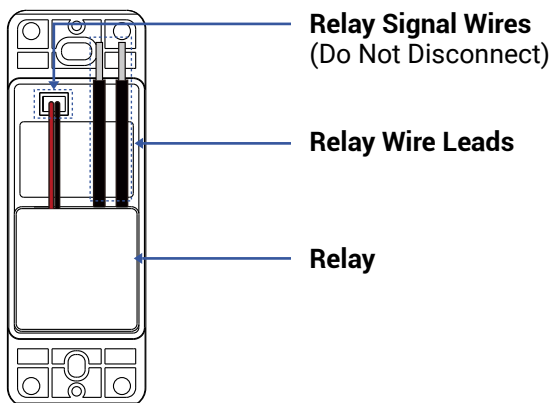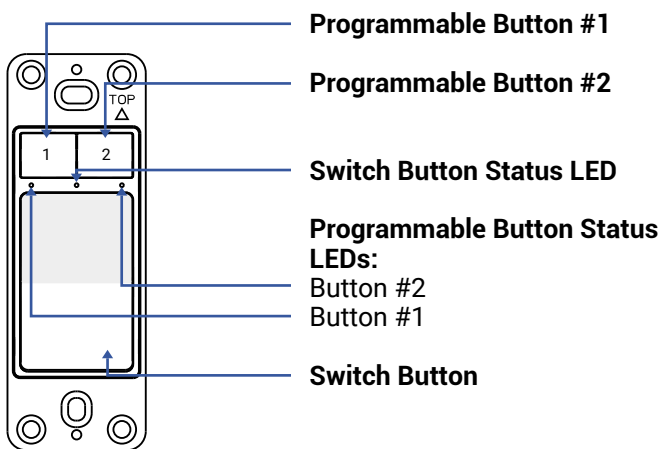

Status LED Behaviors

- | | |
|---|--|
|  Solid Green
Switch is On |  Solid Red
Switch is Off |
|  Blinking Green
Control-D2D Pairing in Progress |  Blinking Red
Control-D2D Unpairing in Progress |

Programmable Button LED Behaviors

- | | |
|--|--|
|  Blink Green Once
Button One Tap Activated |  Blink Red Once
Button Long Press Activated |
|--|--|



Install the App

If you are new to YoLink, please install the app on your phone or tablet, if you have not already. Otherwise, please proceed to the next section.

Scan the appropriate QR code below or find the “YoLink app” on the appropriate app store.



Apple phone/tablet
iOS 9.0 or higher



Android phone/tablet
6.0 or higher

Open the app and tap **Sign up for an account**. You will be required to provide a username and a password. Follow the instructions, to set up a new account. Allow notifications, when prompted.

You will immediately receive a welcome email from no-reply@yosmart.com with some helpful information. Please mark the yosmart.com domain as safe, to ensure you receive important messages in the future.


Log in to the app using your new username and password.

The app opens to the **Favorite** screen. This is where your favorite devices and scenes will be shown. You can organize your devices by room, in the **Rooms** screen, later.




Add Your FlexSwitch to the App

1. Tap **Add Device** (if shown) or tap the scanner icon:

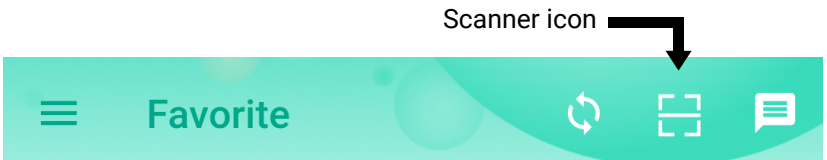

2. Approve access to your phone's camera, if requested. A viewfinder will be shown on the app.

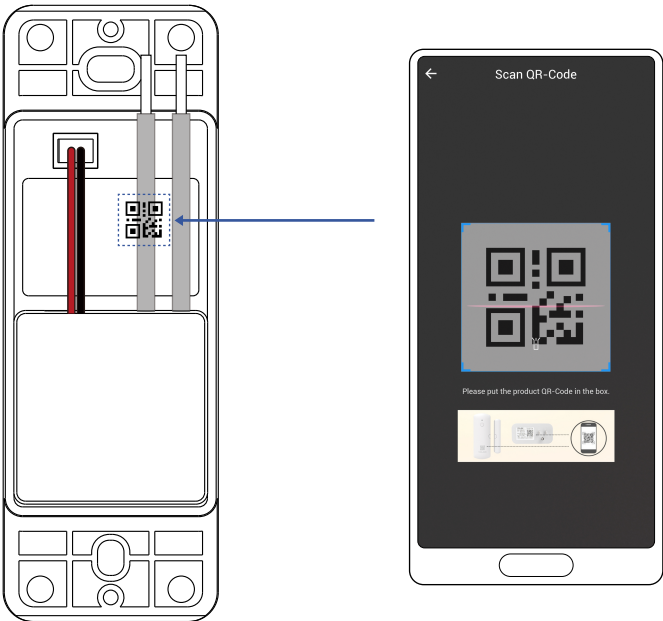


3. Hold the phone over the QR code so that the code appears in the viewfinder. If successful, the **Add Device** screen will be displayed.



Add Your FlexSwitch to the App, Continued

4. You can change the device name and assign it to a room later. Tap **Bind device**.

5. If successful, the screen will appear as shown. Tap **Done**.

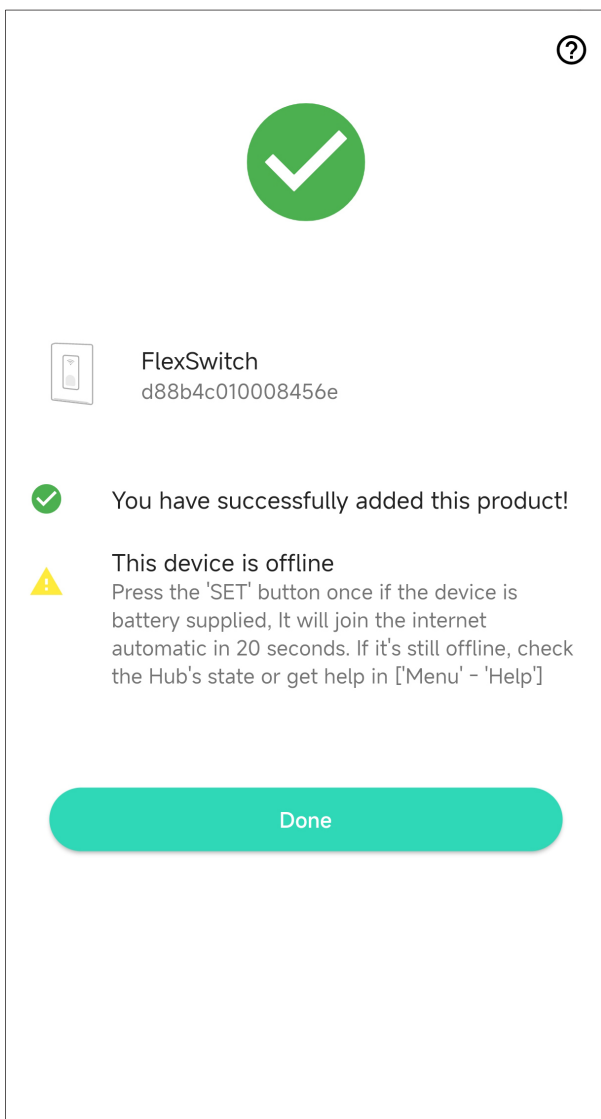

Pre-installation

Pre-installation considerations:

The FlexSwitch is a smart wireless switch, with a relay capable of controlling electrical loads including lights, heaters, fans, motors, and pumps. The relay is like a “Form A” type relay – a normally-open set of contacts, but since it is a mechanically-latching relay, it can remain in a closed state indefinitely, with no power applied. The “pigtail” leads of the relay are therefore not designated “common” and “normally-open” or “normally-closed”.

The FlexSwitch does not require a ground wire, or any wire to power it, as it is battery-powered.

The FlexSwitch is designed to be an easy replacement for an existing standard or smart light switch, in an existing North American one-gang electrical box, or on one gang of a multi-gang box.. If it is necessary to install the switch in a new box, plastic boxes are recommended over metal, to not effect the wireless range of the FlexSwitch.

The FlexSwitch relay can support loads up to 16 amps, resistive, at 250VAC. Use the FlexSwitch relay to control another relay (that is capable of handling the load) if your application might exceed these specifications.



Pre-installation, Continued

The FlexSwitch is designed and intended for indoor use. If using the FlexSwitch in outdoor environments, consider its environmental operating range of -4° to 185°F (-20° to 85° C) and ensure it does not get wet (water damage is not covered by the warranty). Consider the use of weatherproof protective covers or enclosures.



Installation



It is very important that you are comfortable working with electricity before beginning the installation of your FlexSwitch. If not, please hire or consult a proper (experienced, licensed, etc.) electrician.

It is not in the scope of this quick start guide to cover basic electrical concepts, installation or correct methods of handling electrical wiring, circuitry, tools, and devices. It is important that the installer can identify the wires at the FlexSwitch location (including but not limited to the “hot”, “load”, “neutral” and “ground” wires) and is capable of identifying the type of switch being replaced (e.g. 3-way vs. standard).


Prior to installation, disconnect the power source at the location of the new FlexSwitch. For example, turn off the associated circuit breaker, or remove the fuse. After doing so, it is recommended to test the circuit with a voltage tester or multimeter.

When connecting wires to the FlexSwitch, use “wire nut” type connectors or another method appropriate for the application and as required by any electrical codes that are applicable at your location.



Installation, Continued

1. The uses for the FlexSwitch are many and vary, depending on the equipment being controlled. When using your FlexSwitch to control equipment like a pump, motor, or other relay, please familiarize yourself with the FlexSwitch specifications and limitations prior to installation. If replacing a switch, relay, or button, remove the wiring from that device, and connect it to the FlexSwitch.

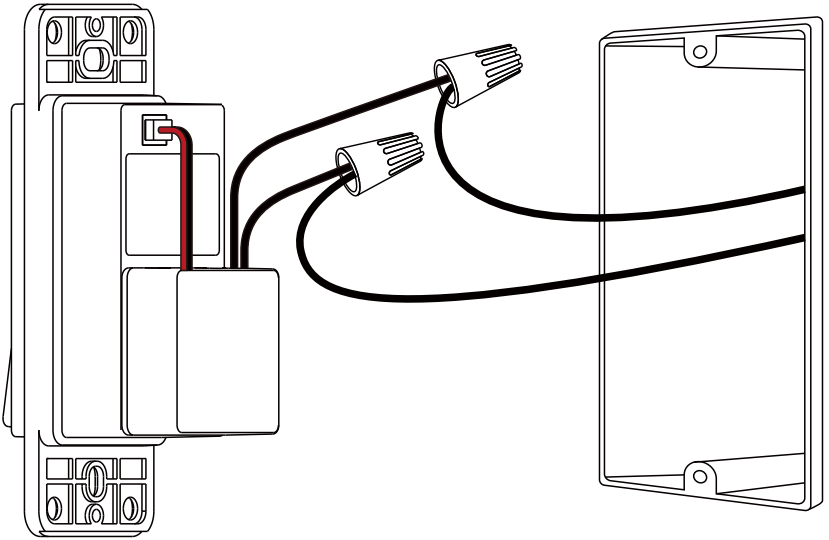



Installation, Continued

If your FlexSwitch is replacing an existing non-smart switch, remove the switch at this time. If replacing a standard light switch, the two wires connected to the existing switch can be transferred to the two wires of the FlexSwitch relay. Disconnect the hot or 120V wire from the switch and connect it to one wire of the FlexSwitch. Disconnect the other wire from the switch and connect it to the other wire of the FlexSwitch. If a ground wire is connected to the switch, remove it from the switch. It is not needed for the FlexSwitch. Push it back into the electrical box. If the ground wire is a “jumper” or “pigtail” wire, connected to one or more ground wires, you may elect to remove it entirely from the splice.

If your FlexSwitch is replacing a smart switch, the existing switch may have additional wires connected to it, such as a neutral wire. This wire is not needed for the FlexSwitch. Remove it from the existing switch, and then “cap” or insulate the end of the wire with a wire nut or electrical tape. If this wire is a “jumper” or “pigtail” wire, connected to one or more neutral wires in the box, you may elect to remove it entirely from the splice. Be careful to maintain the existing “splice” (connections) between other neutral wires in the box, otherwise other outlets, devices or equipment on the circuit will not function.



Installation, Continued

- 2.** Check each wiring connection by gently tugging on each conductor, ensuring it does not pull out of the wire-nut or appear loose. Re-do any that do not pass this test.
- 3.** Gently push the wiring and the switch into the electrical box, then secure the switch to the box using the included or existing screws (if more suitable for the box), as shown in Figure 2A.
- 4.** The FlexSwitch is shipped with a matching decorative trim plate ("faceplate") and accompanying base plate. If installing the FlexSwitch in a new or existing multi-gang box, save or discard these plates, as they will not be used. After installing your own switch faceplate/trim, proceed to step 6. Otherwise, secure the base plate to the FlexSwitch, using the two included faceplate screws, as shown in Figure 2B.

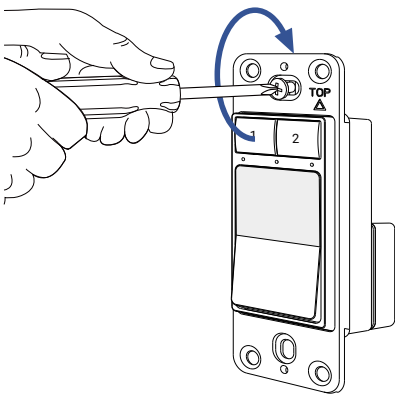


Figure 2A


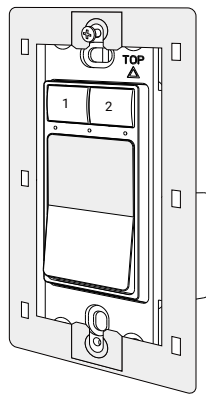


Figure 2B



Installation, Continued

5. Snap the (outer) faceplate to the base plate, as shown.

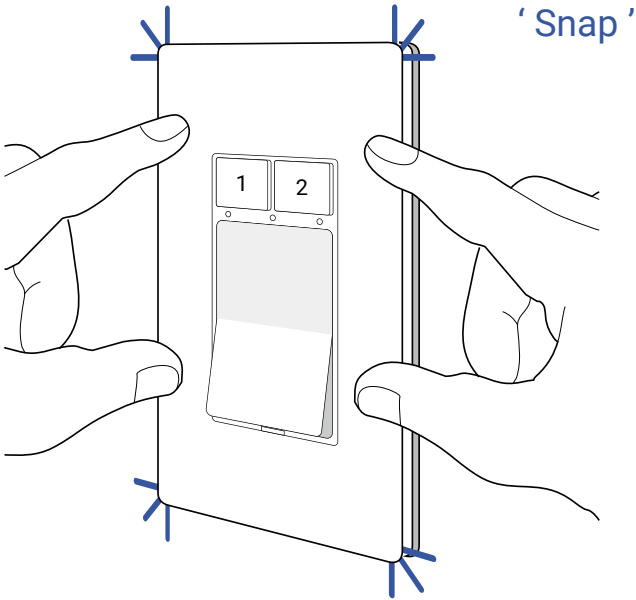


6. Restore power to the circuit that serves the FlexSwitch location.

7. Test the FlexSwitch operation by tapping the main switch button. Verify the controlled device or equipment responds correctly. Test both on and off actions. If it operates correctly, the physical installation is complete.



App Functions: Device Screen

In the app, tap on your FlexSwitch icon. Your main screen should be similar to the one shown below.

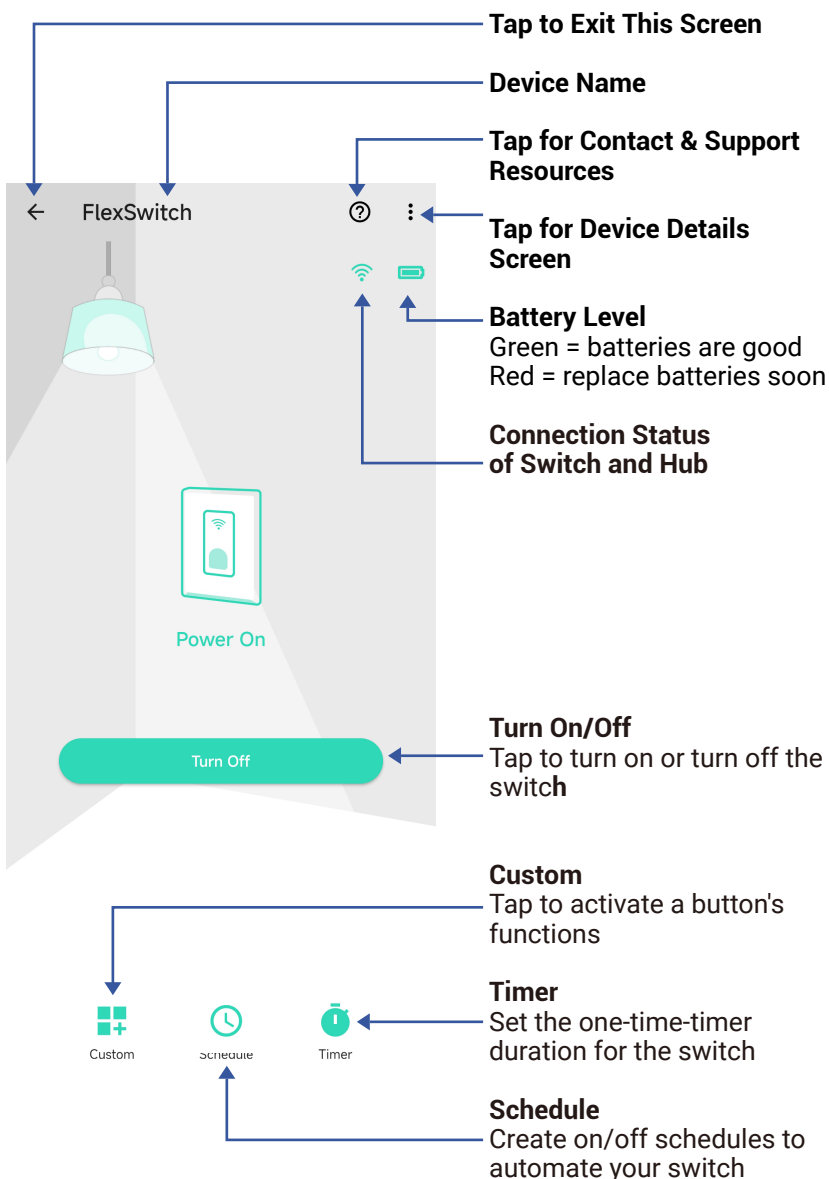



App Functions: Device Details Screen

Tap the three dots (in the upper right corner) to open the **Details** screen. Your screen should be similar to the one shown below.


The screenshot shows the 'Details' screen for a device. The header is teal with a back arrow, the title 'Details', and a help icon. The main content is a list of device attributes and actions. Annotations point to specific elements:

- Device Type**: Points to 'YoLink Switch'.
- Device Name (Tap to Edit)**: Points to 'FlexSwitch' with a chevron.
- Room (Tap to Edit)**: Points to 'Not Set' with a chevron.
- Favorite (Red if Favorite, Tap to Edit)**: Points to a red heart icon.
- History (Tap to view device history)**: Points to a chevron next to 'Get device logs'.
- State**: Points to 'On'.
- Time**: Points to 'Sync With Mobile' with a chevron.
- Model Number**: Points to 'YS5709-UC'.
- Device EUI (Unique Identifier Number (Unique))**: Points to 'd88b4c010008456e'.
- Device Serial Number**: Points to '86C5B14BDD' and a QR code.
- Signal Intensity (From YoLink Hub)**: Points to 'Strong (~23 dBm)'.
- Battery**: Points to a battery icon.
- Firmware Revision (Refer to page 31)**: Points to '0907'.
- Remove Device From Current Account (Tap to delete the device from your YoLink account)**: Points to a red 'Delete' button.

Other visible elements include a 'History' section with 'Get device logs' and an 'Other' section at the bottom.




App Functions: Programmable Buttons

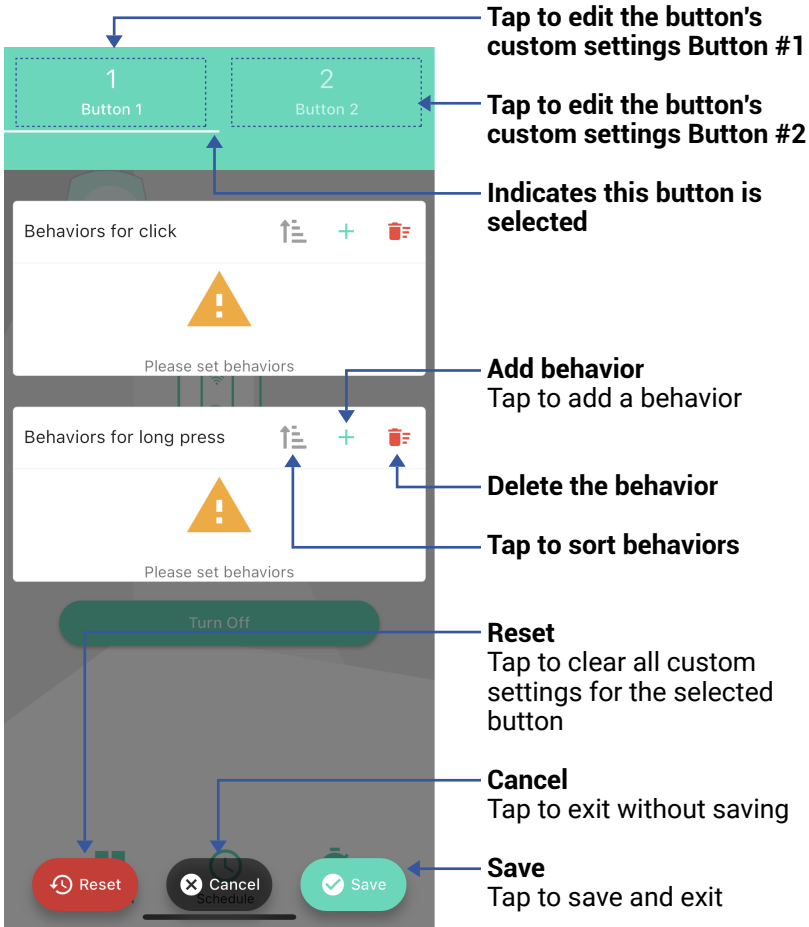



App Functions: Program Buttons-Behaviors


After tapping the + button to add a behavior, the **Choose a behavior** screen will be displayed.

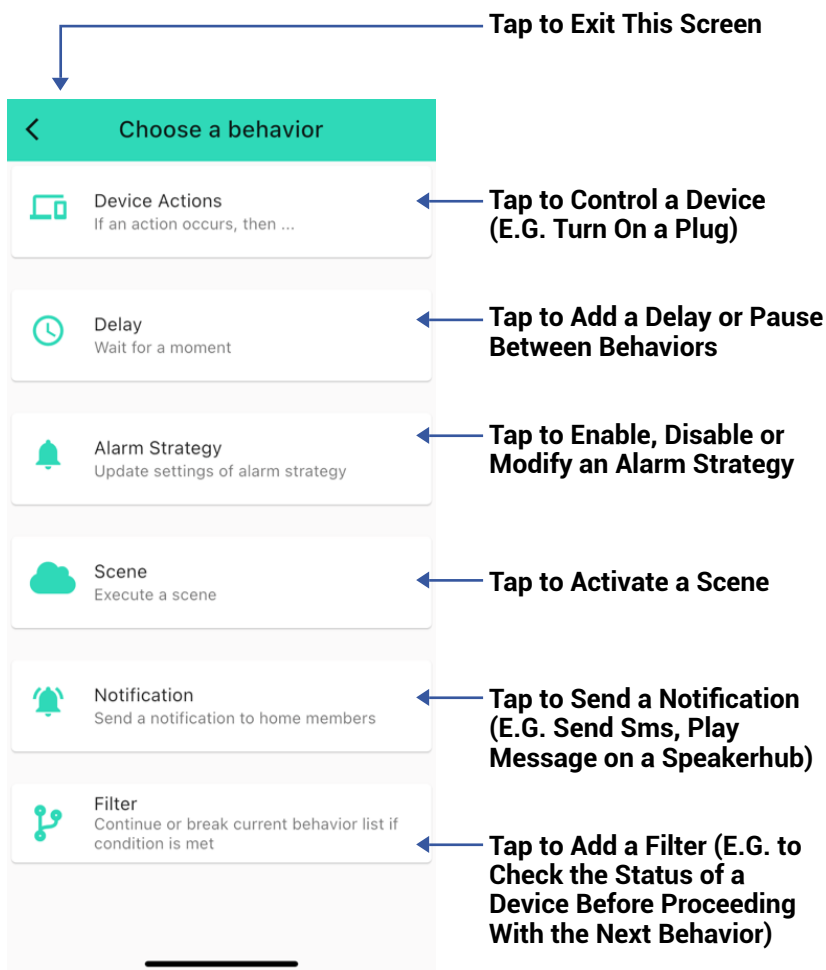

Refer to the subsequent sections for detailed instructions on using these behaviors.



App Functions: Schedule

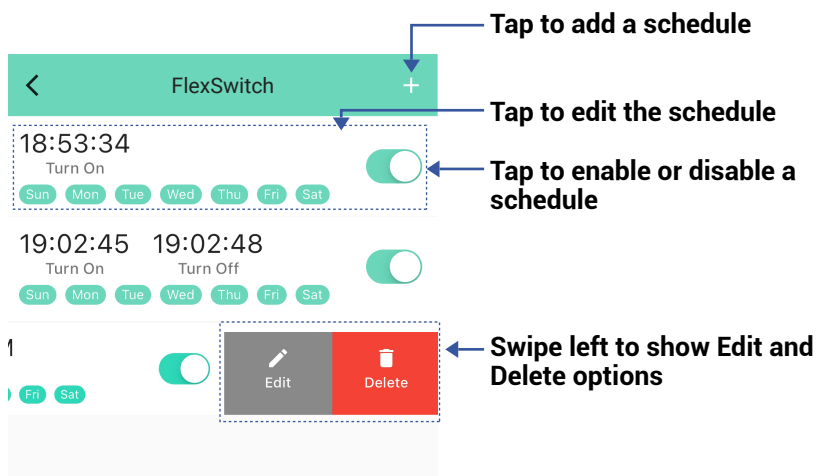

You can have a maximum 6 schedules at one time.

The schedule runs on the device (no internet connection required).

You can add more schedules in Automation settings. Automation settings are saved in the cloud.




App Functions: Timer




Turn On After switch
Slide to enable/disable



Set the duration
When enabled, the switch will turn on after this timer duration has elapsed



Turn Off After switch
Slide to enable/disable

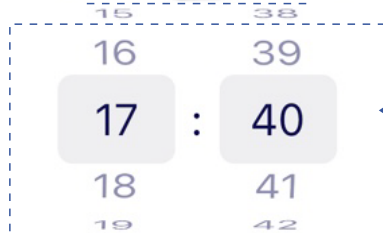

Set the duration
When enabled, the switch will turn off after this timer duration has elapsed

The timer starts when the settings are saved (by tapping the checkmark at the upper right of the screen).

You can add more timers in Automation settings. Automation settings are saved in the cloud.



The timer will run only once. You can set a new timer after the timer has already run once or after you cancel it.

The timer runs on the device (no internet connection required).



App Functions: Smart - Scene

Tap to view the scene history

Tap to save the settings

Name
Tap to edit the scene name

Icon
Tap to select a scene icon

Favorite
Tap to make it a favorite scene

Assign the scene to a scene group

Delete the behavior

Add behavior
Tap to add a behavior

Tap to sort behaviors

Scene

Name

Icon

Favorite

Group

Behavior

YoLink Switch
Turn OFF

Delete



The Scene settings are saved in the cloud.

If you have two or more alternating scenes, such as "Armed" and "Disarmed" or "Day Mode" and "Night Mode", you can place them into a custom scene Group. As only one scene in a Group can be active, when you activate the Night Mode scene, the Day Mode scene will be indicated as inactive. This is only a visual indicator; in this example, any specific required actions for the Day Mode (such as device actions, etc.) must be accomplished by separate automation settings.



App Functions: Smart - Automation

The FlexSwitch can be set up as a condition or action in automation.

The screenshot shows the 'Automation' settings interface. At the top is a teal header with a back arrow, the title 'Automation', and a checkmark icon. Below the header, the 'Name' is 'switch' and the page number '6/64' is visible. The 'When' section shows a clock icon and the schedule 'When 12:00 AM Every Tue,Wed,Thu'. The 'Then' section has a 'Behavior' list with a '+' icon to add, a trash icon to delete, and a sort icon. A single behavior is listed: 'YoLink Switch Turn ON' with a power icon. Below this is the 'Working Time' section, currently set to 'Always Working'. At the bottom is the 'Advanced Settings' section, which is collapsed. Blue arrows point from text labels to specific UI elements: the checkmark icon, the 'Name' field, the 'When' section, the '+' icon, the trash icon, the sort icon, the 'Always Working' text, and the 'Advanced Settings' section header.

Tap to save the settings

Edit the name of the automation

Tap to set a schedule for the automation

Add behavior
Tap to add a behavior

Delete the behavior

Tap to sort behaviors

Always Working
Tap to set when the automation can be activated

Advanced Settings
Tap to edit advanced automation and logging settings

The Automation settings are saved in the cloud.

You can edit the Advanced Settings, including save the log, retry if action fails, notify if action fails, etc.

Q Control D2D

YoLink Control-D2D (device-to-device) pairing is a feature unique to YoLink products. One device can be paired to one (or more) devices. When two or more devices are paired, a link is created, “locking-in” the behavior, so that the device(s) will carry out their paired behavior when required, regardless of a connection to the internet or cloud, and even without AC power (in the case of battery-powered or battery backed-up devices). For example, a Door Sensor can be paired to a Siren Alarm, so that when the door is opened, the siren is activated.

Several important points:

- The use of Control-D2D is entirely optional. It is more common to use the app’s automation and scene settings to create desired behaviors, such as motion sensors turning on the lights automatically. Your application may require functionality during the loss of internet/WiFi, in which case Control-D2D pairing may be preferred.
- A device that controls another device is referred to as a Controller. The device that is controlled is referred to as a Responder.

Q Control D2D, Continued

- The FlexSwitch switch on/off button will operate (and control the lights or connected equipment) regardless of an internet connection. The programmable buttons require an internet connection via the hub.
- While online, any paired behaviors as well as automation and scene settings (desired switch behaviors set in advance by you, such as the motion sensor/light switch example) will both be carried out. Paired behaviors and app settings can coexist, but use care to not create conflicting actions between the two, as the device may not operate as desired.
- A device can have up to 128 pairings.
- During D2D pairing, both the controller and the responder must be in the correct operational state corresponding to their intended behavior. For example, if the controller (door sensor) is meant to turn on a plug when the door opens, the door sensor should be in the open state and the plug should be on during pairing.



Control D2D, Continued

How to Pair Two Devices:

In this example, two FlexSwitches will be paired to each other, to provide 3-way functionality.

- 1.** Start with both switches off. Choose one switch to act as a Controller. Turn on the Controller, then press the switch button for 5 to 10 seconds until the green LED flashes.
- 2.** At the other switch (the Responder), turn the switch on. Press the switch button for 5 to 10 seconds until the green LED flashes. After a moment, the LEDs will turn off.
- 3.** Test your pairing by turning off both lights, then turning the Controller light on. The Responder light should then turn on. If not, repeat the pairing. If still not successful, follow the How to Unpair Devices section on the next page.
- 4.** For 3-way type operation between these two switches, repeat steps 1 and 2, but for the switch that was originally the Responder. This switch will now act as a Controller.
- 5.** Test your pairing, from both switches. Turning one switch on should result in both switches turning on. Turning either of the switches off results in both light switches turning off.



Control D2D, Continued

How to Unpair Two Devices:

1. Start with both switches off. Turn on the Controller device (in this case, either one of the lights that are now in a 3-way type pairing). Press the switch button for 10 to 15 seconds, until the LED flashes orange. Note: the LED will flash green prior to the 10 second mark, going into pairing mode, but keep pressing until the LED flashes orange, then press the power/switch/set button of the responder for 10 to 15 seconds, until the LED flashes orange. The Controller's pairing is now removed. This switch will no longer control the other switch, but the other switch's pairing is unchanged.

2. To remove the other switch's paired behavior, repeat the steps just used for the first switch. Test both switches to ensure that they no longer control or respond to the opposite switch.



These instructions can be applied to other devices, but the LED color and flash behaviors can vary between models.

Generally, when pairing, the Responder should begin in the state (on/off or opened/closed or locked/unlocked) that it should change to when the Controller is activated.



Using the App & 3rd-Party Services

The YoLink FlexSwitches (the switch function only) works with several voice assistants, including Alexa and Google, and it works with other automation platforms such as IFTTT and Home Assistant.

To set up 3rd-party integrations (Alexa, Google and IFTTT), in the app, go to Settings, Third-Party Services, and follow the instructions.

Refer to the Home Assistant website and the YoLink integration page for instructions.

<https://www.home-assistant.io/integrations/yolink/>



Factory Reset

Factory reset will erase device settings and restore it to factory default settings. Doing a factory reset will not remove the device from your account and it will not harm the device, or lose any data or require you to redo your automations, etc.

Instructions:

Hold the Switch button down for 20-30 seconds, until the LED blinks red and green alternately. Then, release the button. (Holding the button down longer than 30 seconds will abort the factory reset operation)

Factory reset will be complete when the LED stops blinking.




Only deleting a device from the app will remove it from your account. Factory reset will not delete the device from the app.

T Firmware Update

Your YoLink products are constantly being improved, with new features added. It is periodically necessary to make changes to your device's firmware. For optimal performance of your system, and to give you access to all available features for your devices, these firmware updates should be installed when they become available.

In the Detail screen of each device, at the bottom, you will see the Firmware section. A firmware update is available for your device if it says "#### ready now"

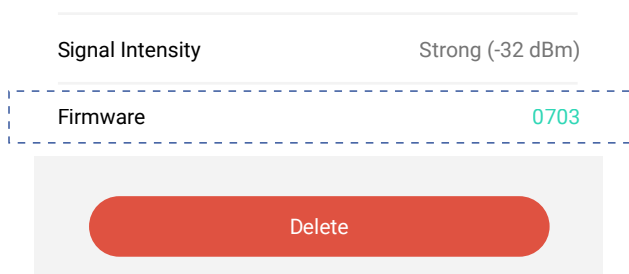


Tap in this area to start the update.

The device will update automatically, indicating progress by percentage-complete. You may use your device during the update, as the update is performed "in the background". The LED will slowly blink green during the update, and the update may continue for several minutes beyond the LED turning off.



Battery Replacement

Tools you will need:

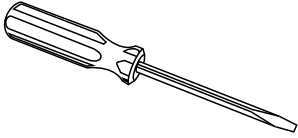

Extra Small Straight Screwdriver





1. Please use extreme care and follow the battery replacement instructions closely
2. Do not mix old and new batteries




Battery Replacement, Continued

- 1 Remove the wall plate.

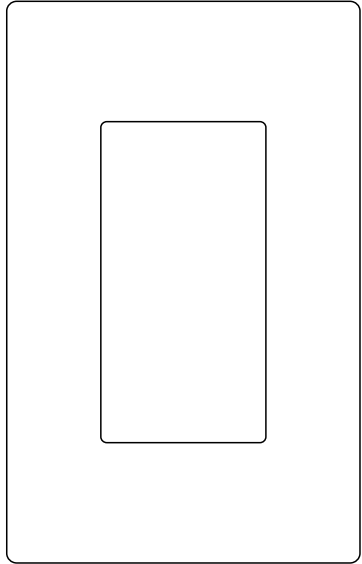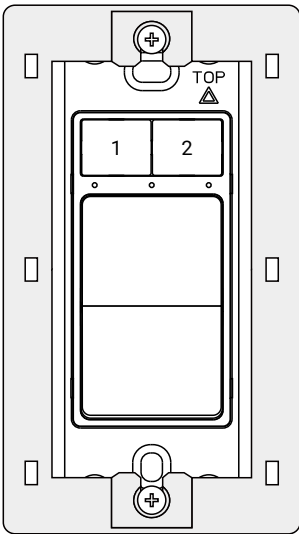


- 2 Gently insert a flat-head screwdriver to disengage the switch plate.

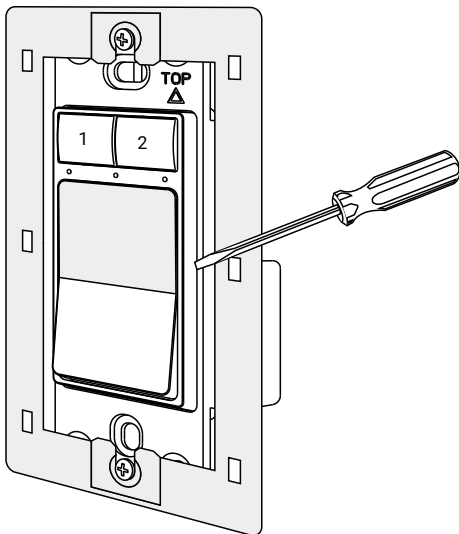




Battery Replacement, Continued

- 3 Carefully remove the switch plate and extract the old five battery.

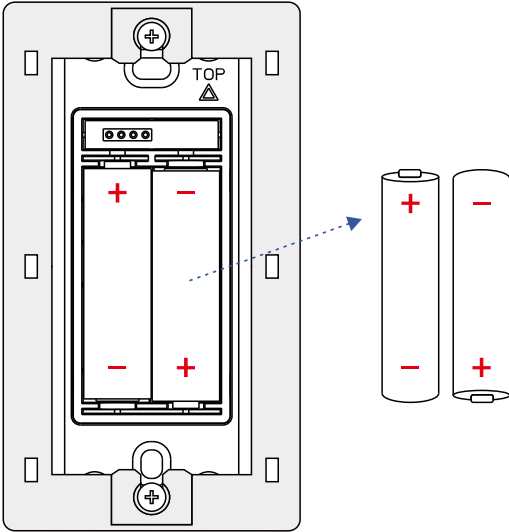


- 4 Insert two fresh AA batteries, ensuring correct orientation.

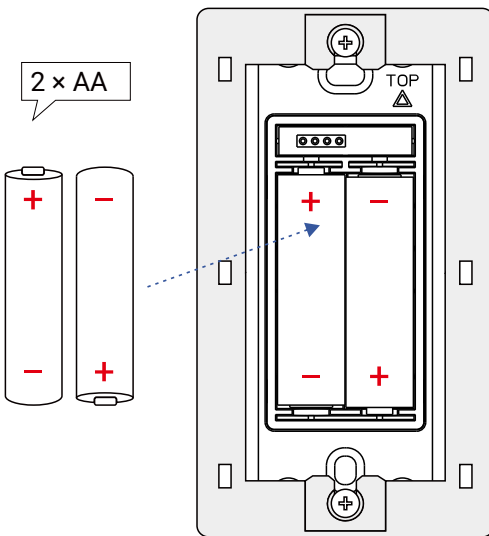




Battery Replacement, Continued

- 5 Pay close attention to the position of the metal firing pin (highlighted in the red box). Align it with the corresponding port on the back of the switch plate. Firmly reposition the switch plate back into its slot, ensure it is securely fastened.

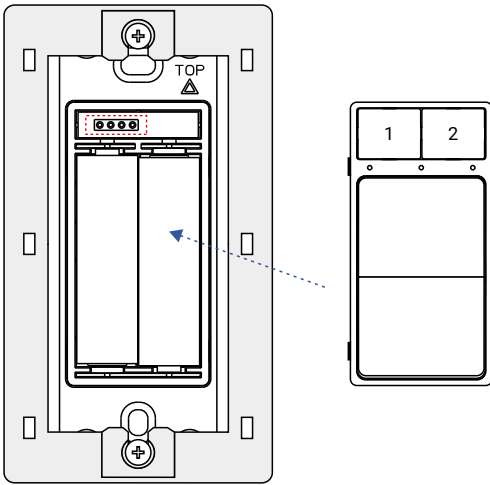

- 6 Carefully reattach the outer faceplate to the base plate.

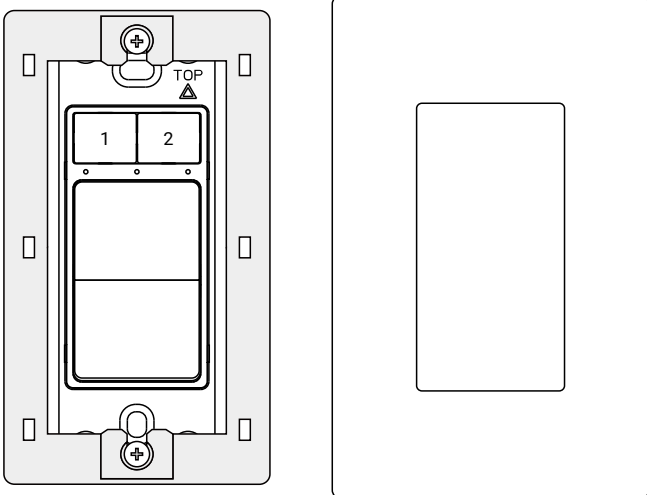



Specifications

Power Supply:	3V DC (2 x Alkaline Non-Rechargeable AA battery)
---------------	--

Control load (resistive):	120V AC 6A MAX
---------------------------	----------------


Electrical (room temperature):	50K TIMES (120V AC 6A)
--------------------------------	---------------------------

Environment:	Working Temperature: -4°F - 122°F (-20°C - 50°C)
--------------	--


	Working Humidity: 5%~90%RH
--	-------------------------------




Specifications, Continued

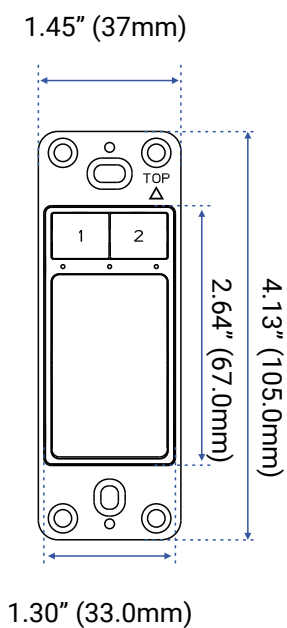

FRONT

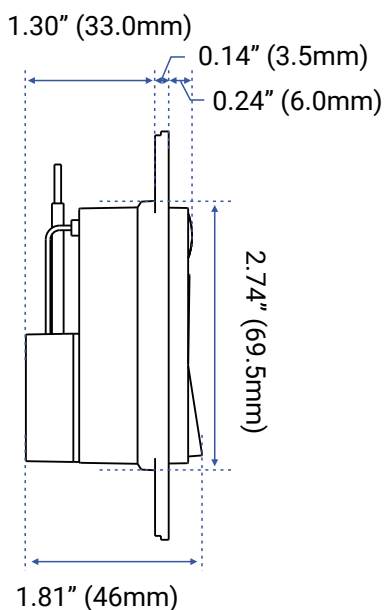



SIDE

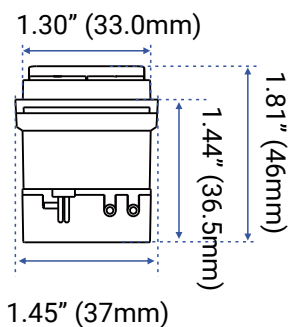

TOP



Specifications, Continued

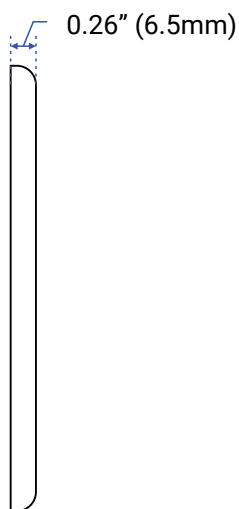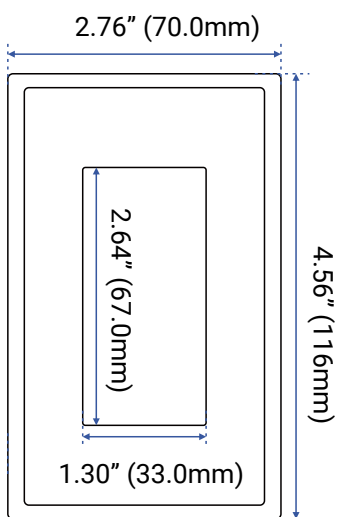

FACEPLATE (FRONT)

FACEPLATE (SIDE)

Malfunction:

Device is offline :

Possible solution

- If switch is not connected to the cloud, press the Switch button on switch once
- If Hub is offline, reconnect the Hub to the Internet and press the Switch button on switch once
- If Hub is not on, power on the Hub again and press the Switch button on switch once
- If switch is out of range with Hub, relocating the Hub may be required
- If switch is not turned on, turn on the device

If this does not resolve the issue, please contact our customer support department (see the contact info on the last page of this guide).



We recommend checking for and performing any available firmware updates before contacting customer support.



Warnings

Please install, operate and maintain the FlexSwitch only as outlined in this manual. Improper use may damage the unit and/or void the warranty

Do not overload the device. It is rated for 720W (120VAC/6A) watts, maximum. Exceeding this load will damage the device, which is not covered by the warranty.

Do not install or use this device outside of the temperature and humidity range listed in the Environmental section in Specifications, on page 36.

Do not install or use this device where it will be subjected to high temperatures and/or open flame.

This device is not waterproof and is designed and intended only for indoor use. Subjecting this device to outdoor environment conditions such as direct sunlight, extreme hot or cold temperatures, rain, water and/or condensation can damage the device and will void the warranty.

Install or use this device only in clean environments. Dusty or dirty environments may prevent the proper operation of this device, and will void the warranty.



Warnings, Continued

If your FlexSwitch does get dirty, please clean it by wiping it down with a clean, dry cloth. Do not use strong chemicals or detergents, which may discolor or damage the exterior and/or damage the electronics, voiding the warranty

Do not install or use this device where it will be subjected to physical impacts and/or strong vibration. Physical damage is not covered by the warranty.

Please contact Customer Service before attempting to repair disassemble or modify the device, any of which can void the warranty and permanently damage the device.



Warranty

2 Year Limited Electrical Warranty

YoSmart Inc. warrants to the original user ("customer") of this product that it will be free from defects in materials and workmanship, under normal use, for 2 years from the date of purchase. This warranty does not apply to devices that have been improperly installed, modified, put to a use other than designed, or subjected to acts of God (such as floods, lightning, earthquakes, etc.). This warranty does not cover neglected or abused products. This warranty is limited to the repair or replacement of the device, only, at YoSmart's sole discretion. YoSmart will NOT be liable for the cost of installing, removing, nor reinstalling this product, nor direct, indirect, or consequential damages to persons or property resulting from the use of this product. This warranty only covers the cost of replacement parts or replacement units, it does not cover shipping & handling fees. The customer must provide proof of purchase, in the form of the original purchase invoice or order number. The purchase must have been made from an authorized seller.

To implement this warranty please contact us by one of the methods listed on the Contact Us page of this user guide.

FCC Statement

This device complies with part 15 of the FCC Rules. Operation is subject to the following two conditions: (1) This device may not cause harmful interference, and (2) this device must accept any interference received, including interference that may cause undesired operation.

Any Changes or modifications not expressly approved by the party responsible for compliance could void the user's authority to operate the equipment.

Note: This equipment has been tested and found to comply with the limits for a Class B digital device, pursuant to part 15 of the FCC Rules. These limits are designed to provide reasonable protection against harmful interference in a residential installation. This equipment generates uses and can radiate radio frequency energy and, if not installed and used in accordance with the instructions, may cause harmful interference to radio communications. However, there is no guarantee that interference will not occur in a particular installation. If this equipment does cause harmful interference to radio or television reception, which can be determined by turning the equipment off and on, the user is encouraged to try to correct the interference by one or more of the following measures:

- Reorient or relocate the receiving antenna.
- Increase the separation between the equipment and receiver.

Z FCC Statement, Continued

- Connect the equipment into an outlet on a circuit different from that to which the receiver is connected.
- Consult the dealer or an experienced radio/TV technician for help.

The device has been evaluated to meet general RF exposure requirement. The device can be used in portable exposure condition without restriction.

PRODUCT NAME:
FLEXSWITCH

PARTY:
YOSMART, INC.

TELEPHONE:
831-292-4831

MODEL NUMBER:
YS5709-UC

ADDRESS:
15375 BARRANCA PKWY SUITE J-107, IRVINE,
CA 92618 USA

EMAIL:
SERVICE@YOSMART.COM



Contact Us

We are here for you, if you ever need any assistance installing, setting up or using a YoLink app or product!

Need help? For fastest service, please email us 24/7 at service@yosmart.com

Or call us at **831-292-4831** (US phone support hours: **Monday - Friday, 9AM to 5PM** Pacific)

You can also find additional support and ways to contact us at:

www.yosmart.com/support-and-service

Or scan the QR code:



Support Home Page

Finally, if you have any feedback or suggestions for us, please email us at feedback@yosmart.com

Thank you for trusting YoLink!

YoLink Customer Support

YOLINK