


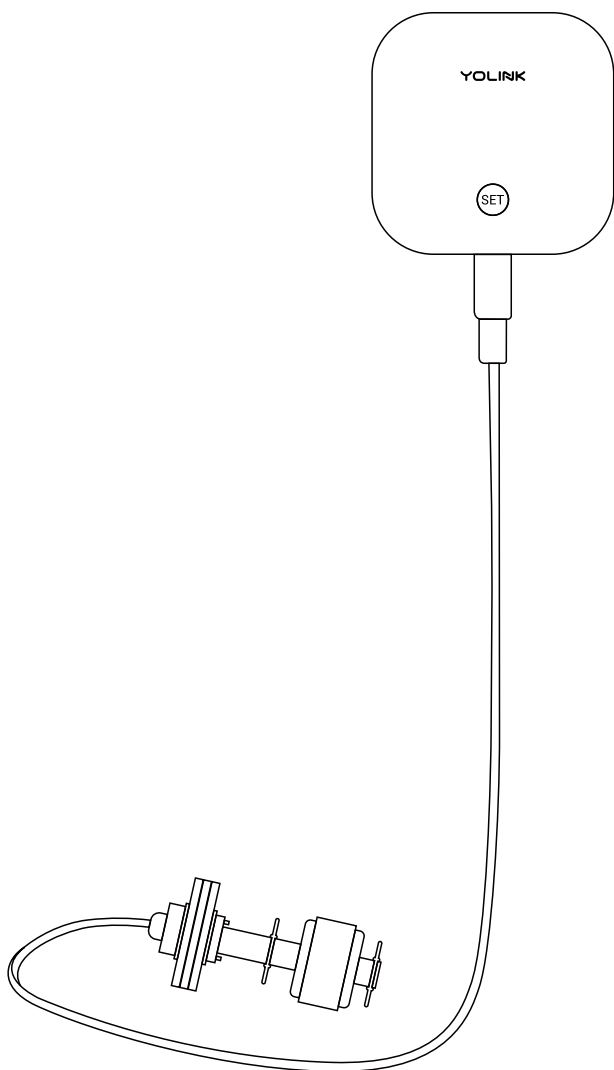

Water Level Monitoring Sensor

YS7904-UC



Installation & User Guide

Revision Jun. 11, 2026

Contents

A . Welcome	01
B . Before You Begin	02
C . In the Box	04
D . Get to Know Your Sensor	06
E . Power Up	08

F . Install the App	09
G . Add Your Sensor to the App	10
H . Installation	12
I . App Functions: Device Screen	19
J . App Functions: Device Details Screen	20

K . App Functions: Alert Settings Screen	22
L . App Functions: Alarm Strategy Screen	23
M . App Functions: Automation	25
N . Control D2D	26
O . 3rd Party Services	29

P . Battery Replacement	31
Q . Factory Reset	33
R . Firmware Updates	34
S . Specifications	36
T . Troubleshooting	38

U . Warnings	39
V . Warranty	40
W . FCC Statement	41
X . Contact Us	43



Welcome

Thank you for purchasing YoLink products! We appreciate you trusting YoLink for your smart home & automation needs. Your 100% satisfaction is our goal. If you experience any problems with your installation, with our products or if you have any questions that this manual does not answer, please contact us right away. See the Contact Us section for more info.

Thank you!

YoLink Customer Support

User Guide Conventions

The following icons are used in this guide to convey specific types of information:



Very important information
(can save you time!)



Good to know info but may not
apply to you

B Before You Begin

Visit our Water Level Monitoring Sensor support page on our website, for the latest installation guides, additional resources, information and videos by visiting:

<https://www.yosmart.com/support/YS7904-UC>

Or by scanning the QR code:



Download the most current version of the user guide by scanning the QR code:



B Before You Begin, Continued



Your Water Level Monitoring Sensor connects to the internet via a YoLink hub, and it does not connect directly to your WiFi or local network. In order for remote access to the device from the app, and for full functionality, a hub is required.


This guide assumes the YoLink app has been installed on your smartphone, and a YoLink hub is installed and online (or your location, apartment, condo, etcetera, is already served by a YoLink wireless network).




In the Box




Water Level Monitoring Sensor

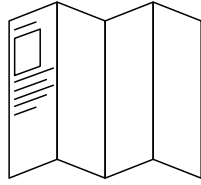


Quick Start Guide

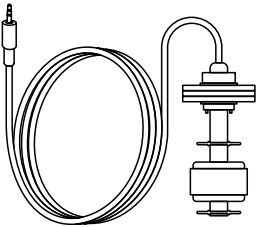


Float Switch

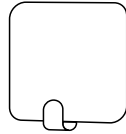


Mounting Hook

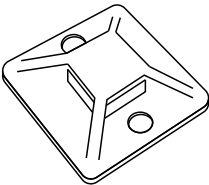

Cable Tie Mount

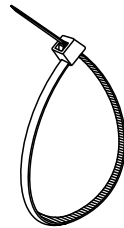

Cable Tie




2 x AAA Batteries (Installed)




In the Box

The following items may be required:

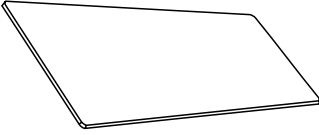


Double-Sided Mounting Tape

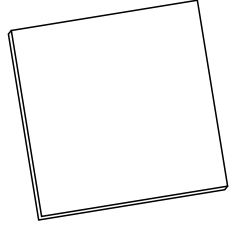

Rubbing Alcohol Pads


D

Get to Know Your Water Level Monitoring Sensor, Continued

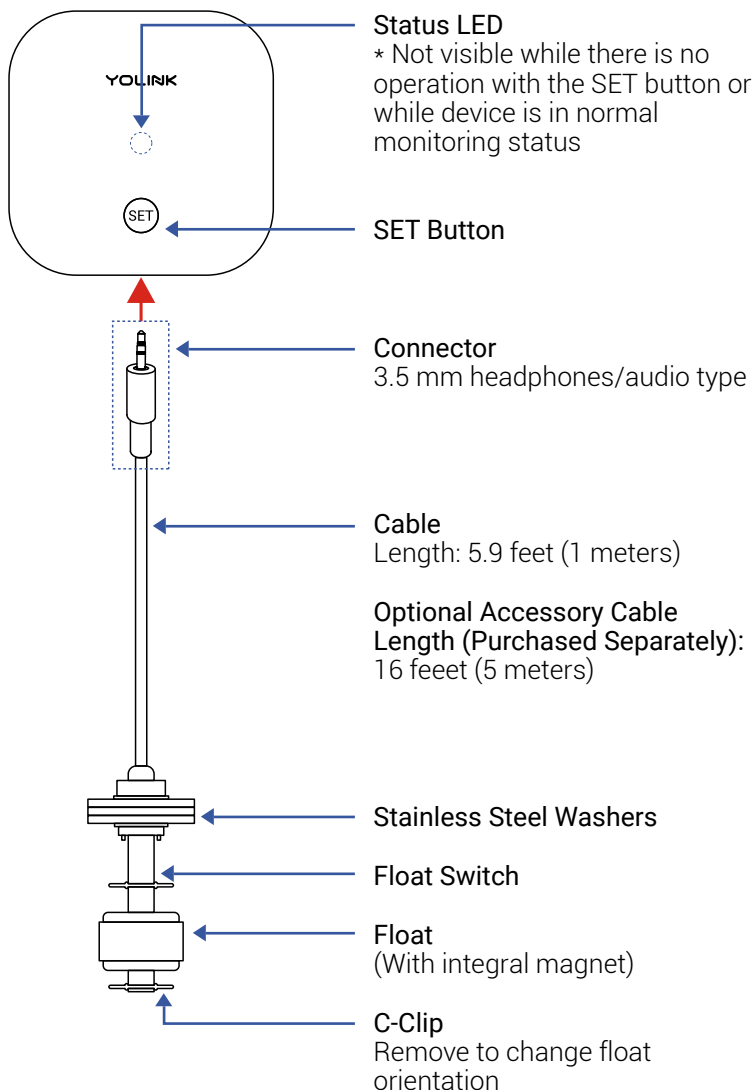


D

Get to Know Your Water Level Monitoring Sensor, Continued

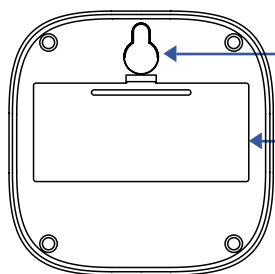

Wall-Mounting Slot

Battery Compartment

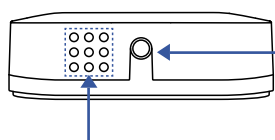

Phono Jack

Sounder

- **One Beep**

Device Power-Up/Button Pressed

- **Two Beeps**

Device Alert

(Two beeps every 1 second for the first minute.

Two beeps every 5 seconds for the next 10 minutes.

Sustaining two beeps once 10 minutes after 10 minutes.)

LED & Beep Behaviors



Blinking Red And Green Alternately

Restoring to Factory Defaults



Blinking Green

Connecting to Cloud



Slow Blinking Green

Updating



Fast Blinking Green

Control-D2D Pairing in Progress



Blinking Red Once

Water Alert
Water Detected or Water Not Detected
(Depending on Mode)



Fast Blinking Red

Control-D2D Unpairing in Progress




Fast Blinking Red Every 30 Seconds or Fast Blinking Red 5 Times when pressing the SET Button



Batteries are Low,
Please Replace the Batteries

E Power Up

Before you can use your Water Level Monitoring Sensor, it must be turned on. (Batteries have been pre-installed.) Press the SET button briefly, until the LED flashes red then green (which indicates it has turned on and connected to a hub and the cloud).

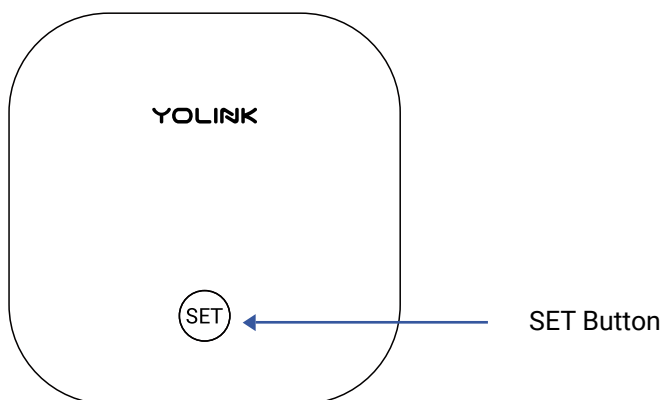



Install the App

If you are new to YoLink, please install the app on your phone or tablet, if you have not already. Otherwise, please proceed to the next section.

Scan the appropriate QR code below or find the “YoLink app” on the appropriate app store.



Apple phone/tablet
iOS 9.0 or higher



Android phone/tablet
6.0 or higher

Open the app and tap **Sign up for an account**. You will be required to provide a username and a password. Follow the instructions, to set up a new account. Allow notifications, when prompted.

You will immediately receive a welcome email from no-reply@yosmart.com with some helpful information. Please mark the yosmart.com domain as safe, to ensure you receive important messages in the future.


Log in to the app using your new username and password.

The app opens to the **Favorite** screen. This is where your favorite devices and scenes will be shown. You can organize your devices by room, in the **Rooms** screen, later.


G

Add Your Water Level Monitoring Sensor to the App

1. Tap **Add Device** (if shown) or tap the scanner icon:

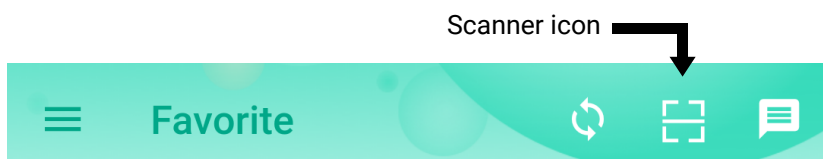

2. Approve access to your phone's camera, if requested. A viewfinder will be shown on the app.

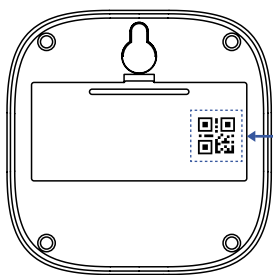


3. Hold the phone over the QR code so that the code appears in the viewfinder. If successful, the **Add Device** screen will be displayed.

G

Add Your Water Level Monitoring Sensor to the App, Continued

4. You can change the device name and assign it to a room later. Tap **Bind device**.

5. If successful, the screen will appear as shown. Tap **Done**.

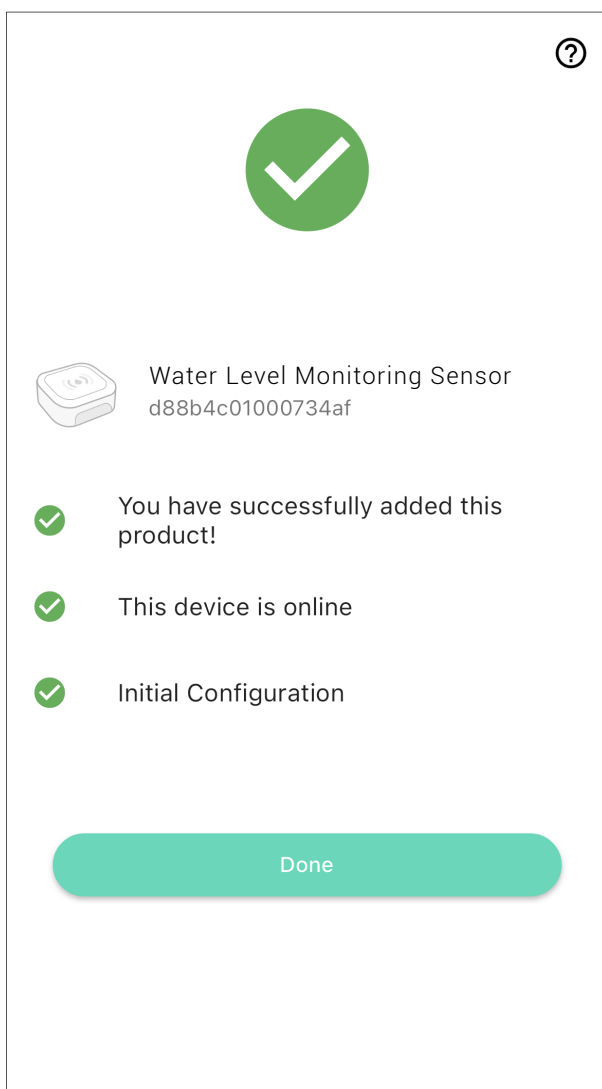

Sensor use considerations:

The Water Level Monitoring Sensor is a variant of the Water Leak Sensor 2 (rope/cable style water sensor), which also shares the main sensor body with the Water Leak Sensor 3 (probe cable type water sensor). All three sensors are generally identical in the app, but settings you make in the app determine the behavior of the sensor.

When using this sensor with a float switch, for monitoring the presence of absence of a liquid with water, in the app, you will define either liquid-detected, or no-liquid-detected, as “normal”. Depending on the mode you select, the sensor will alert, and you will be notified if the liquid level drops below the float switch, OR if it rises to the float switch.

It is important to note, that even if you define “no liquid detected” as an alert (and therefore “liquid detected” as normal), you can still create some automations that will respond to the change of state from liquid detected to no liquid detected. An example of this approach, is you want to receive a push notification and SMS when no liquid is detected (something is wrong), and you want to receive a push notification, only, when liquid is detected (normal; the level of the liquid is good). You can create an automation using the Notification behavior, to receive a push notification when liquid is detected again.




Sensor location considerations:

Before installing your Water Level Monitoring Sensor, consider the following important factors:

- 1.** This device is intended for indoor use, only. If used outdoors, the sensor body should be protected from the elements, in an environmental enclosure, for example, and the environmental conditions (temperature, humidity, etc.) should be within the specified range for the sensor (refer to online support information for the full specifications for this sensor). The sensor body should not be installed where it may get wet (indoors or outdoors).
- 2.** The Water Level Monitoring Sensor has an integral sounder alarm (piezo sounder). Use of the sounder is optional, can it can be disabled in the app settings. Use of the sounder will reduce the total battery life.
- 3.** The Water Level Monitoring Sensor is typically mounted on a wall or on a stable vertical surface (e.g. post or column).

H Installation, Continued

4. If needed, you can add extension cables between the float switch cable and the sensor, to extend the total cable distance. Use standard 3.5 mm headphones type cables appropriate for the application (e.g. outdoor rated/waterproof)

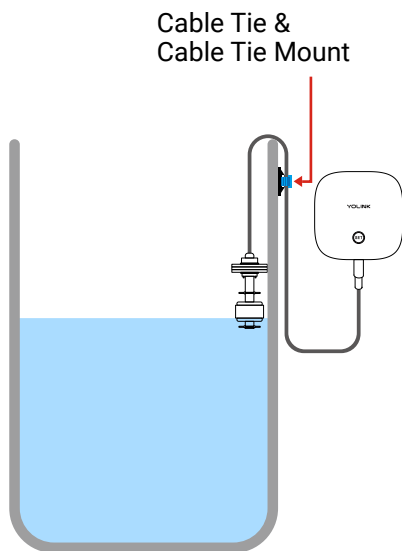

Float switch location & installation considerations:

The float switch is designed for and intended to be suspended into the tank, container, etc. The stainless steel washers installed on the float switch have two purposes. The weight of the washers will ensure that the float switch hangs to the appropriate level in the tank, and that the cable does not coil or bend, resulting in undesired results from the float switch. Also, the wider diameter of the washers ensures the float switch can be placed against a sidewall of the tank/container, allowing the float switch to move freely.



Installation, Continued

It is the responsibility of the installer to secure the cable so that the float switch position does not change later. For example, use zip cords/tie wraps to secure the cable to a fixed object.



Avoid damaging the cable when securing it. If you use tie wraps, do not crimp or smash the cable by overtightening the tie wraps.

Float switch configuration:

The float switch has two float positions – high and low. When installed correctly in a vertical position, if a liquid is present, the float will rise to the high position. If there is no liquid present, it falls to the low position, by gravity. But electrically, the float switch can give four different outputs to the sensor:

- Float high, closed circuit
- Float high, open circuit
- Float low, closed circuit
- Float low, open circuit



Installation, Continued

The float switch has an internal reed switch, and the small magnet inside the float magnetically opens or closes the reed switch, thereby opening or closing the circuit to the Water Level Monitoring Sensor. As shipped, your float switch should be “closed” or “shorted” when the float is in the high position and “open” when the float is in the low position. If you need to change this operation, you can do so by removing the c-clip, removing the float, and then reinstalling the float upside-down, then reinstalling the c-clip. The c-clip can be removed by gently widening the opening of the “C” shape, by hand or with a tool, like a screwdriver. Push it back in place on the float switch to install it, noting the slot for the c-clip that is in the end of the float switch. ☒☒It may be helpful to have a multimeter to test the float switch configuration, but otherwise, after connected to the sensor, the open/closed status can be checked.

Install the float switch


1. Before installing the float switch, determine the method of securing the cable.
2. Place the float switch at the desired level in the tank/container, based on your application (liquid detected is normal, or no liquid detected is normal).
3. Secure the cable, while verifying the height of the float switch is correct.



Installation, Continued

Install the mounting hook

1. Before installing the Water Level Monitoring Sensor, check the length of the cable, ensuring there is enough, for the desired sensor location.
2. Clean the mounting surface with rubbing alcohol or similar cleaner or degreaser that will clean the surface without leaving a residue that might effect the adhesion of the mounting tape on the bracket. The surface must be clean, dry and free of dirt, oils, grease, or other cleaning agent residue.
3. Remove the protective plastic from the mounting tape on the back of the mounting hook.
4. With the hook facing up, as shown, press it firmly against the mounting surface and maintain pressure for at least 5 seconds.

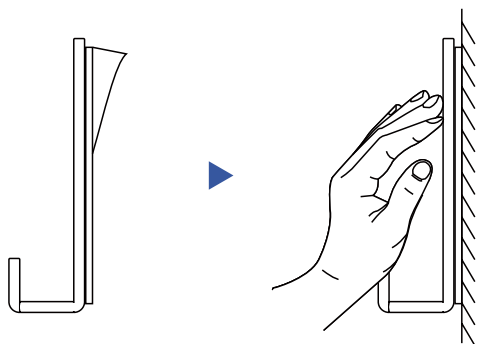



Installation, Continued


Install and test the Water Level Monitoring Sensor

- 1.** Insert the float switch cable connector into the Water Level Monitoring Sensor.
- 2.** Using the slot on the back of the sensor, hang the sensor on the mounting hook. Ensure it is secure by gently tugging on it.
- 3.** It is important that you test your sensor, to ensure it will work properly when needed! To properly test it, you may need to change settings in the app.



App Functions: Device Screen

In the app, tap on your Water Level Monitoring Sensor icon. Your Water Level Monitoring Sensor main screen should be similar to the one shown below.

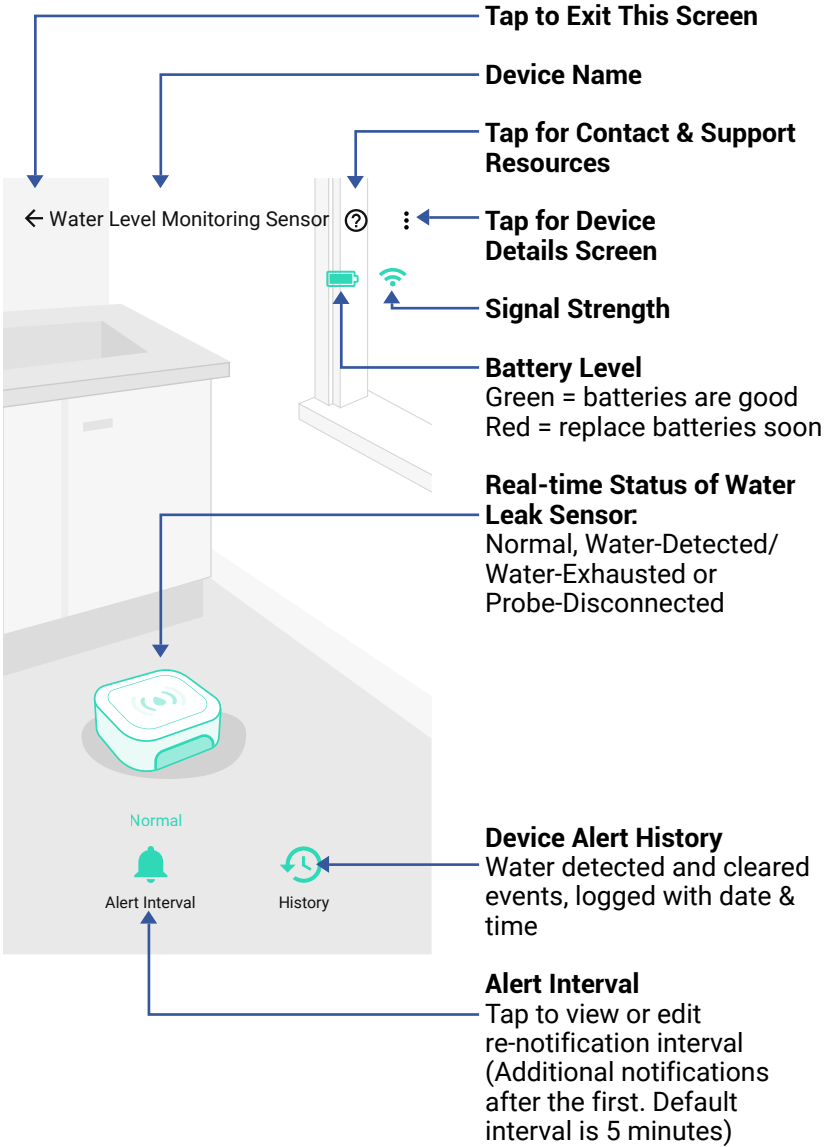



App Functions: Device Details Screen

Tap the three dots (in the upper right corner) to open the Water Level Monitoring Sensor **Details** screen. Your Water Level Monitoring Sensor screen should be similar to the one shown below.

Details

Type Leak Sensor

Name Water Level Monitoring >

Room Not Set >

Favorite Will show in favorite screen

History Get device logs >

Alert >

Device Mode Water Exhausted Monitor >

Alarm when water not detected

Cable Type Water Sensor Probe ▾

State Water exhausted

Other

Model YS7904-UC

Device EUI d88b4c0100083d79

SN 351A047639 >

Temperature 79 °F

Signal Intensity Strong (~6 dBm) >

Battery

Firmware 0474
0475 ready now.

Delete

Device Type

Device Name
(Tap to Edit)

Room
(Tap to Edit)

Favorite
(Red if Favorite, Tap to Edit)

History
Tap to view device history

Alert
Tap to edit Alert Settings
(Refer to page 22)

Device Mode
Tap to change device mode

Device Cable
Tap to select device cable

State



App Functions: Device Details Screen, Continued

←

Details

?

Type

Leak Sensor

Name

Water Level Monitoring >

Room

Not Set >

Favorite

Will show in favorite screen

History

Get device logs

>

Alert

>

Device Mode

Water Exhausted Monitor >

Alarm when water not detected

Cable Type

Water Sensor Probe ▾

State

Water exhausted

Other

Model

YS7904-UC

Device EUI

d88b4c0100083d79

SN

351A047639

>

Temperature

79 °F

Signal Intensity

Strong (~6 dBm) >

Battery

Firmware

0474

0475 ready now.

Delete

Model Number

Device EUI
Unique Identifier Number

Device Serial Number

Temperature
The temperature display is an extra feature and updates only during sensor alerts, regular checks, or when you press the SET button.

Signal Intensity
(From YoLink Hub)


Battery

Firmware Revision
(Refer to page 34)

Remove Device From Current Account
Tap to delete the device from your YoLink account



App Functions: Alert Settings Screen

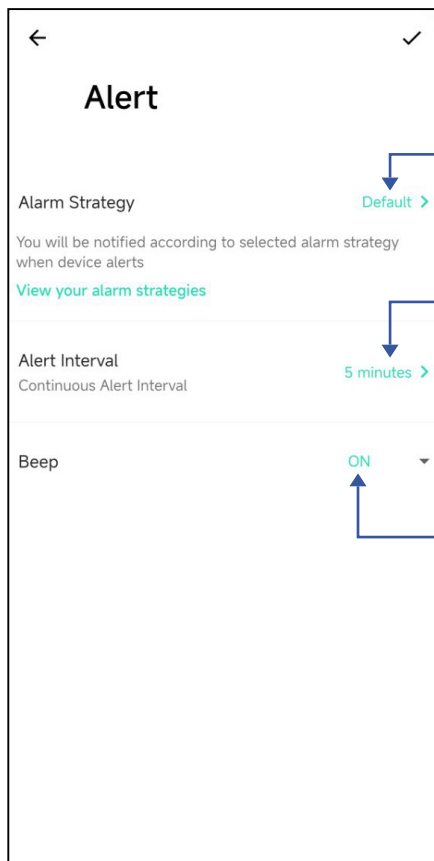

Alarm Strategy

Tap to edit the sensor's Alarm Strategy

Alert Interval

Choose how often you want to be reminded after a "leak" or "no water" alarm. The default is every 5 minutes

Beep

Tap to enable or disable beep sound



App Functions: Alarm Strategy Screen

You can set up notifications in Alarm Strategy settings, make sure you have enabled App, Email, SMS notification from the app->Menu->Settings->Account Settings->Advanced Settings, and verified your email address and added your phone number in the app.

The screenshot shows the 'Alarm Strategy' settings screen. The header is green with a back arrow, a question mark icon, and the title 'Alarm Strategy'. Below the header, there are several sections: 'Name' with the value 'Always' and a right arrow; 'Related Devices' with the value '1' and a right arrow; 'Enable Device Alarm' with a green toggle switch; 'Do Not Disturb' with a grey toggle switch; 'Send App Notification' with a dropdown menu set to 'Admin'; 'Send Email' with a dropdown menu set to 'None'; 'Send SMS' with a dropdown menu set to 'None'; and 'Trigger Action' with a dropdown menu set to 'None'. A green 'Save' button is at the bottom. Annotations with arrows point to the question mark icon, the 'Always' text, the '1' text, the 'Enable Device Alarm' toggle, and the 'Do Not Disturb' toggle.

Strategy Name
Tap to edit the name

Related Devices
Tap to add more devices (that can alert) to this strategy, a device can be related to only one strategy

Tap to Enable or Disable The Strategy

Tap to Set Up Dnd (Do Not Disturb)



App Functions: Alarm Strategy Screen, Continued

The screenshot shows the 'Alarm Strategy' configuration screen. At the top is a green header with a back arrow, the title 'Alarm Strategy', and a help icon. Below the header are several settings sections: 'Name' with a value of 'Always' and a chevron; 'Related Devices' with a value of '1' and a chevron; 'Enable Device Alarm' with a toggle switch turned on; 'Do Not Disturb' with a toggle switch turned off; 'Send App Notification' with a dropdown menu set to 'Admin'; 'Notification Settings' with a link to 'Notification Settings ...'; 'Send Email' with a dropdown menu set to 'None'; 'Send SMS' with a dropdown menu set to 'None'; and 'Trigger Action' with a dropdown menu set to 'None'. At the bottom is a green 'Save' button. Blue arrows point from the text callouts on the right to the corresponding settings on the screen.

Send App Notification

Tap to select Admin to enable App push, select All, if desired for all members

Notification Settings (iOS only)

Tap to change notification tone, if desired

Send Email

Tap to select Admin to enable email notification, select All, if desired to send to all members

Send SMS

Tap to select Admin to enable limited text messages, select All (subscribe required-starter or standard plan), if desired to send to all members

Trigger Action

Tap to choose trigger actions (YoLink sirens, YoLink SpeakerHubs, scene)



App Functions: Automation

The Water Level Monitoring Sensor can be set up as a condition in an automation. For example, you can automatically close the valve if the sensor detects water leak. This example is shown below. The automation also sends a custom notification (via app push notification, email SMS, or SpeakerHub broadcast) reminding you the sensor detects leak.

←

Automation

✓

Name

Auto shut off

14/64

When



Water Level Monitoring Sensor

Water Leak Alert

Then

Behavior

↑

+

✖



5001 X3 Valve

Close

Working Time

Always Working

Advanced Settings


▼

N Control D2D

YoLink Control-D2D is our unique device to device control technology. Using YoLink Control-D2D, YoLink devices can be controlled without the Hub or an internet connection. (Use of YoLink Control-D2D is optional; you can use the Automation feature in the app OR use YoLink Control, but YoLink Control-D2D offers the benefit of operation without the Hub or internet connection.) One device controls another, directly. A device that sends out commands is called the controller. A device that receives the commands is called the responder. Examples of a controller are a Water Leak Sensor, while examples of a responder are a Siren or the Smart Motorized Valve.

The following instructions uses pairing your Water Level Monitoring Sensor with a YoLink Valve Controller as example.

1. To configure your Water Level Monitoring Sensor as a controller, Press and hold the SET button for 5-10 seconds until the LED quickly blinks green, then, release the button.

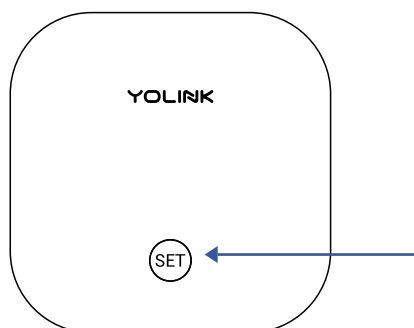


a. SET Button
(5-10 seconds)


N Control D2D, Continued

2. To configure a Valve Controller as the responder, close the valve using SET button or via YoLink app (verify the valve is shown to be Closed on the app). Press and hold the SET button for 5-10 seconds until the LED quickly blinks green, then, release the button.

b. Press to close the valve

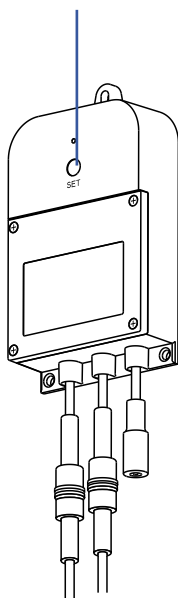

c. SET Button (5-10 seconds)

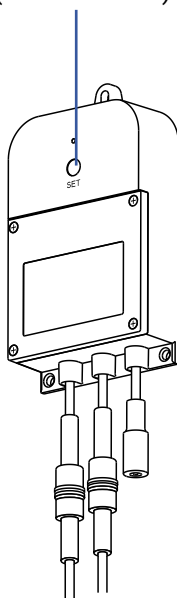

3. Upon pairing, the LED will stop blinking (this may happen after only blinking two or three times).

When the Water Level Monitoring Sensor detects water, the Valve Controller will now immediately close the valve. The valve will remain closed until opened via the app or using the SET button; the restoral of the Water Leak Sensor to normal (no water detected) does not open the valve.



Control D2D, Continued

More advanced sequences, controlling multiple outputs (e.g. close valve and activate siren) are available via the YoLink app

Unpair your Water Level Monitoring Sensor:

1. On the Water Level Monitoring Sensor, press and hold the SET button for 10 to 15 seconds, until the LED quickly blinks red, then release the button.
2. On the Valve Controller, close the valve, press and hold the POWER button for 10 to 15 seconds, until the LED quickly blinks red, then release the button.



The LED will flash green prior to the 10 second mark, going into pairing mode, but keep pressing until the LED flashes red. The Controller's pairing is now removed. This water leak sensor 1 will no longer control the valve controller.



3rd Party Services

You can use the Water Level Monitoring Sensor to trigger Alexa routines. You must have the Alexa app installed, the YoLink skill installed and connected to your YoLink app account.

1. Create a new routine in the Alexa app.
2. In the **When This Happens** section, select **Smart Home**.
3. Find your water leak sensor and select it.
4. Alexa integrates the Water Level Monitoring Sensor as a contact sensor, so the available sensor states are "Closed" or "Open" like a set of electrical contacts on a relay, button or switch. The default state is **Open**. Leave on or change to **Closed**, then tap **Next**.
5. For Add Action, tap the **+** button, then **Smart Home** and select your device (siren, valve controller, etc.), tap **Next**.
6. For a valve controller, for example, select **On**, then tap **Next**.
7. Review your settings, then tap **Save**.



Always functionally test your new automations and routines!



3rd Party Services, Continued

You can use the Water Level Monitoring Sensor to trigger IFTTT applets. You must have the IFTTT app installed, the YoLink service installed and connected to your YoLink app account.



Please note, IFTTT.com is a paid service, typically offering a limited number of free applets.


1. Create a new applet in the IFTTT app.
2. For the If This section, search and select the YoLink service.
3. Tap **Leak Sensor**.
4. In the Device drop-down box, select your Water Level Monitoring Sensor, tap **Done**.
5. Tap **Create Trigger**.
6. Tap **Continue** to save your settings.
7. Review your applet settings, if they are correct tap **Finish**.




Always functionally test your new automations and routines!

P Battery Replacement

- 1 Remove the battery cover by gently prying with your fingertip or tool at the edge as shown

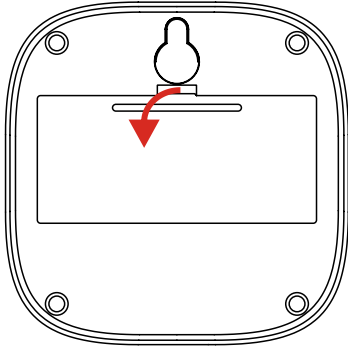


- 2 Remove the old batteries

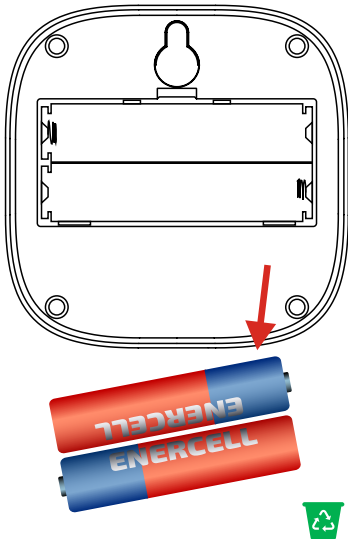


P Battery Replacement, Continued

- 3 Install two new alkaline non-rechargeable AAA batteries, and then close the battery cover

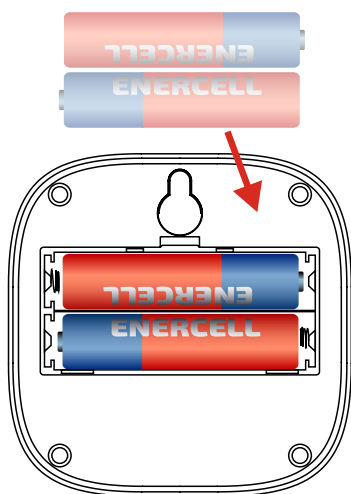

- 4 Close the battery cover

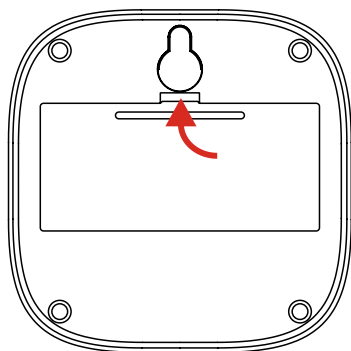




Factory Reset

When directed by customer support, and/or as an attempt to resolve a problem with your Water Level Monitoring Sensor, it may be necessary to perform a factory reset. Factory resetting your Water Level Monitoring Sensor returns it to the factory default programming and settings. This is a simple process:

Hold the SET Button for 20 to 30 seconds, until the LED blinks red and green alternately, then release the button.

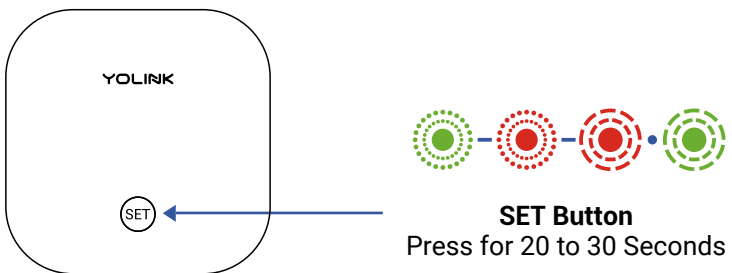

Factory reset is complete when the LED stops flashing.

R Firmware Updates

Your YoLink products are frequently being improved, with new features and functions added over time. It is periodically necessary to make changes to your device firmware. For optimal performance of your device, and to give you access to any improvements made to your device model, these firmware updates should be installed (added to your device) when they become available.

In the Detail screen of your device, you will see the Firmware section, as shown in the image below. A firmware update is available if it says “#### ready now” (where #### is a four-digit combination of letters and/or numbers).

Signal Intensity

Strong (-32 dBm)

Firmware

0703

Delete

R Firmware Updates, Continued

Firmware is like settings in your Water Level Monitoring Sensor that define the overall operations of the Water Level Monitoring Sensor. These settings are added to the Water Level Monitoring Sensor when it is manufactured, and they are periodically updated, as needed, to add improvements, new features, new integrations, etc, to your Water Level Monitoring Sensor, as they become available.

Tap in the Firmware area to start the update. The Water Level Monitoring Sensor will update automatically, indicating the progress by percentage-complete. You may use your Water Level Monitoring Sensor during the update process, as the update is performed “in the background”. You may see the LED slowly blink green during the update, and the update may continue for several minutes beyond the LED turning off.



If you experience incomplete firmware updates, please update only one device at a time. If this does not resolve the problem, please contact our customer support department!



Specifications

Controller:	Semtech® LoRa® RF Module YL09 microcontroller with 32-Bit RISC processor
Voltage:	3V DC (2-Alkaline Non-Rechargeable AAA Batteries)
Dimensions, Imperial (L x W x D):	2.44 x 2.44 x 0.86 inches
Dimensions, Metric (L x W x D):	62 × 62 × 22 mm
Alert Sounder Volume:	95-105 dB (@10cm)
Sensor Cable:	Connector: 3.5 mm headphones/ audio type Cable Whip: 5.9 feet (1.8 meters)(L) Detection Probe: Φ1.29 x 2.75 (Φ33 x70 millimeters) (Dia x D)

S Specifications, Continued

* Optional Accessory
Cable Length
(Purchased
Separately):
16 feet (5 meters)


Environment:

Working Temperature:
32°F-122°F (0°C-50°C)


Working Humidity:
≤ 95%RH
non-condensing

IP Rating:


IP50

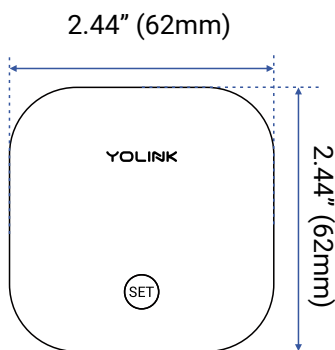

FRONT

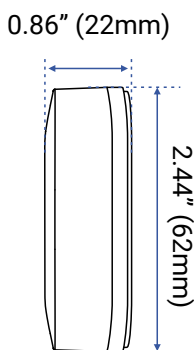

SIDE

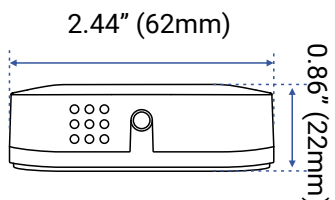

TOP

T Troubleshooting

Problem:

Sensor is Offline

Possible Solution:

a) Sensor has not been turned on. Press the Set button to turn on the sensor.

b) Batteries are dead. Replace the batteries. See page 31 for instructions.

If this does not resolve the issue, please contact our customer support department (see the contact info on the last page of this guide).



We recommend checking for and performing any available firmware updates before contacting customer support. See Firmware Updates, page 34.



Warnings

For optimal performance and lifetime of your Water Level Monitoring Sensor, please adhere to the following warnings:

- When replacing the batteries, only use new alkaline or lithium non-rechargeable batteries.
- Do not use zinc blend batteries.
- Do not mix old and new batteries.
- Adhere to the battery manufacturer's safety and disposal or recycling instructions.
- Please contact Customer Support before attempting to repair, disassemble, or modify your Water Level Monitoring Sensor, any of which can permanently damage your Water Level Monitoring Sensor and void the warranty.



2 Year Limited Electrical Warranty

YoSmart Inc. warrants to the original user ("customer") of this product that it will be free from defects in materials and workmanship, under normal use, for 2 years from the date of purchase. This warranty does not apply to devices that have been improperly installed, modified, put to a use other than designed, or subjected to acts of God (such as floods, lightning, earthquakes, etc.). This warranty does not cover neglected or abused products. This warranty is limited to the repair or replacement of the device, only, at YoSmart's sole discretion. YoSmart will NOT be liable for the cost of installing, removing, nor reinstalling this product, nor direct, indirect, or consequential damages to persons or property resulting from the use of this product. This warranty only covers the cost of replacement parts or replacement units, it does not cover shipping & handling fees. The customer must provide proof of purchase, in the form of the original purchase invoice or order number. The purchase must have been made from an authorized seller.

To implement this warranty please contact us by one of the methods listed on the Contact Us page of this user guide.

FCC Statement

This device complies with part 15 of the FCC Rules. Operation is subject to the following two conditions: (1) This device may not cause harmful interference, and (2) this device must accept any interference received, including interference that may cause undesired operation. Any Changes or modifications not expressly approved by the party responsible for compliance could void the user's authority to operate the equipment.

Note: This equipment has been tested and found to comply with the limits for a Class B digital device, pursuant to part 15 of the FCC Rules. These limits are designed to provide reasonable protection against harmful interference in a residential installation. This equipment generates uses and can radiate radio frequency energy and, if not installed and used in accordance with the instructions, may cause harmful interference to radio communications. However, there is no guarantee that interference will not occur in a particular installation. If this equipment does cause harmful interference to radio or television reception, which can be determined by turning the equipment off and on, the user is encouraged to try to correct the interference by one or more of the following measures:

- Reorient or relocate the receiving antenna.
- Increase the separation between the equipment and receiver.
- Connect the equipment into an outlet on a circuit different from that to which the receiver is connected.



FCC Statement, Continued

- Consult the dealer or an experienced radio/TV technician for help.

The device has been evaluated to meet general RF exposure requirement. The device can be used in portable exposure condition without restriction.

PRODUCT NAME:
WATER LEVEL MONITORING SENSOR

PARTY:
YOSMART, INC.

TELEPHONE:
831-292-4831

MODEL NUMBER:
YS7904-UC

ADDRESS:
25172 ARCTIC OCEAN DRIVE, SUITE 106, LAKE
FOREST, CA 92630 USA

EMAIL:
SERVICE@YOSMART.COM



Contact Us

We are here for you, if you ever need any assistance installing, setting up or using a YoLink app or product!

Need help? For fastest service, please email us 24/7 at service@yosmart.com

Or call us at **831-292-4831** (US phone support hours: **Monday - Friday, 9AM to 5PM** Pacific)

You can also find additional support and ways to contact us at:

www.yosmart.com/support-and-service

Or scan the QR code:



Support Home Page

Finally, if you have any feedback or suggestions for us, please email us at feedback@yosmart.com

Thank you for trusting YoLink!

YoLink Customer Support



25172 Arctic Ocean Drive, Suite 106 Lake Forest, CA 92630
© 2026 YOSMART INC. CALIFORNIA, USA