


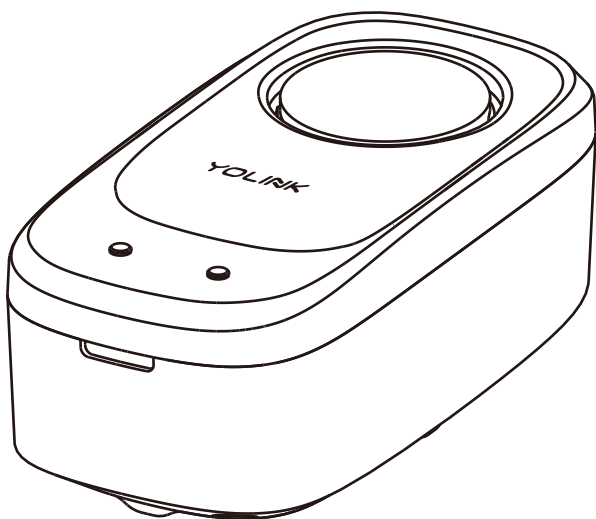

Water Leak Sensor 5

YS7986-UC



Installation & User Guide

Revision Sep. 23, 2026

Contents

A . Welcome	01
B . Before You Begin	02
C . In the Box	03
D . Get to Know Your Sensor	04
E . Power Up	06

F . Install the App	07
G . Add Your Sensor to the App	08
H . Pre-installation	10
I . Installation	18
J . App Functions: Device Screen	19

K . App Functions: Device Details Screen	20
L . App Functions: Alert Settings Screen	21
M . App Functions: Alarm Strategy Screen	22
N . App Functions: Automation	24
O . Control-D2D	25

P . 3rd Party Services	28
Q . Battery Replacement	30
R . Factory Reset	33
S . Firmware Updates	34
T . Specifications	35

U . Troubleshooting	
V . Warnings	
W . Warranty	
X . FCC Statement	37
Y . Contact Us	38
	39
	40

A Welcome

Thank you for purchasing YoLink products! We appreciate you trusting YoLink for your smart home & automation needs. Your 100% satisfaction is our goal. If you experience any problems with your installation, with our products or if you have any questions that this manual does not answer, please contact us right away. See the Contact Us section for more info.

Thank you!

YoLink Customer Support

User Guide Conventions

The following icons are used in this guide to convey specific types of information:



Very important information
(can save you time!)



Good to know info but may not
apply to you

B Before You Begin

Visit our Water Leak Sensor 5 support page on our website, for the latest installation guides, additional resources, information and videos by visiting:

<https://www.yosmart.com/support/YS7986-UC>

Or by scanning the QR code:



Download the most current version of the user guide by scanning the QR code:



B Before You Begin, Continued




Your Water Leak Sensor 5 communicates through a YoLink Hub. It does not connect directly to Wi-Fi or your local network. An online hub is required for app access, remote notifications, history, and firmware updates.

This guide assumes that the YoLink app is installed and a YoLink Hub is online at your location.


C In the Box



Water Leak Sensor 5

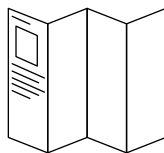



Quick Start Guide



2 x AA Lithium Batteries
(Installed)

D

Get to Know Your Water Leak Sensor 5

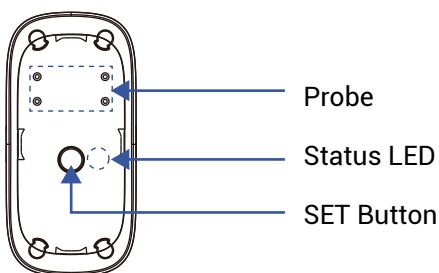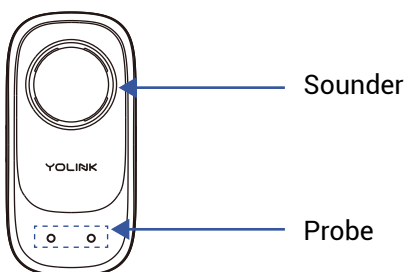

LED & Beep Behaviors



Blinking Red Once, then Green Once
Device Start-Up



Blinking Red And Green Alternately
Restoring to Factory Defaults



Blinking Green
Connecting to Cloud



Slow Blinking Green
Updating



Fast Blinking Green
Control-D2D Pairing in Progress



Blinking Red Once
Device is connected to the cloud and is functioning normally



Fast Blinking Red
Control-D2D Unpairing in Progress



Get to Know Your Water Leak Sensor 5, Continued

Alert LED



Blinking Red
Leak Warning



Fast Blinking Red 5 Times when pressing the SET Button
Batteries Are Low;
Replace the Batteries

Sounder Behaviors



One Beep
Power Up or SET
Button Pressed

Fast Beeps
Find Device
Repeated continuously

Slow Beeps
Water Detected


1st minute:
Repeat after a pause
of about 2 seconds

1 to 10 minutes:
Repeat about every
10 seconds

After 10 minutes:
Repeat about every
5 minutes

E Power Up

Your Water Leak Sensor 5 has preinstalled batteries. Press the SET button briefly to activate it. The LED flashes red and then green. Confirm that the sensor is online in the YoLink app before installation.

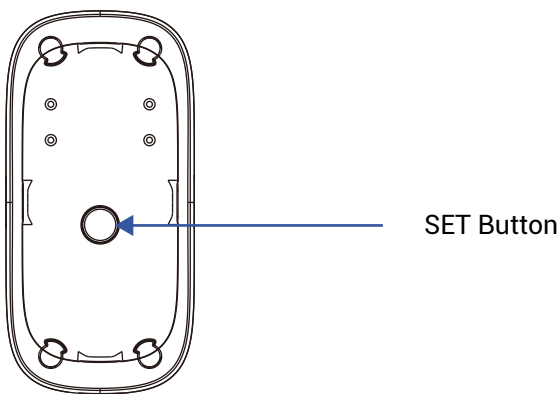

F Install the App

If you are new to YoLink, please install the app on your phone or tablet, if you have not already. Otherwise, please proceed to the next section.

Scan the appropriate QR code below or find the “YoLink app” on the appropriate app store.



Apple phone/tablet
iOS 9.0 or higher



Android phone/tablet
7.0 or higher

Open the app and tap **Sign up for an account**. You will be required to provide a username and a password. Follow the instructions, to set up a new account. Allow notifications, when prompted.

You will immediately receive a welcome email from no-reply@yosmart.com with some helpful information. Please mark the yosmart.com domain as safe, to ensure you receive important messages in the future.


Log in to the app using your new username and password.

The app opens to the **Favorite** screen. This is where your favorite devices and scenes will be shown. You can organize your devices by room, in the **Rooms** screen, later.




Add Your Water Leak Sensor 5 to the App

1. Tap **Add Device** (if shown) or tap the scanner icon:

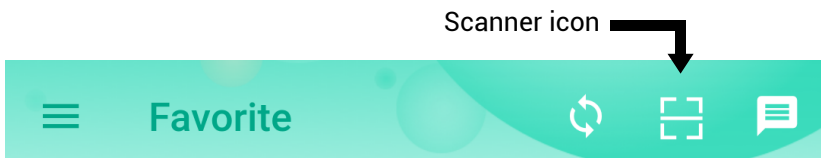

2. Approve access to your phone's camera, if requested. A viewfinder will be shown on the app.

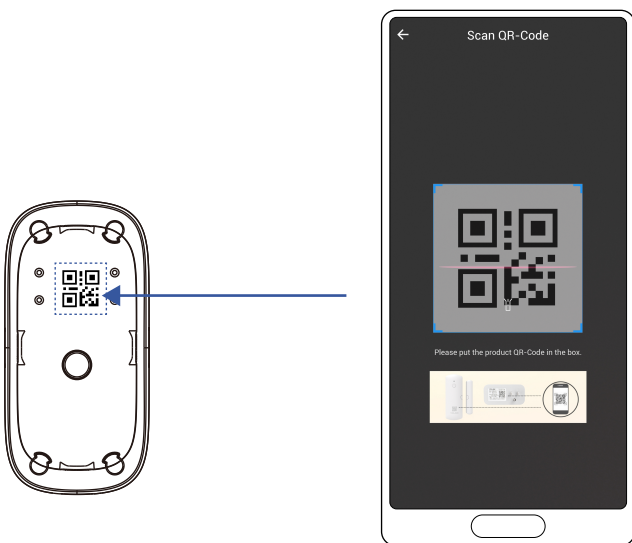


3. Hold the phone over the QR code so that the code appears in the viewfinder. If successful, the **Add Device** screen will be displayed.

G

Add Your Water Leak Sensor 5 to the App, Continued

4. Follow the on-screen instructions to add the device. You can edit its name and room later.

5. Complete setup and confirm that the sensor is online. Tap Done.

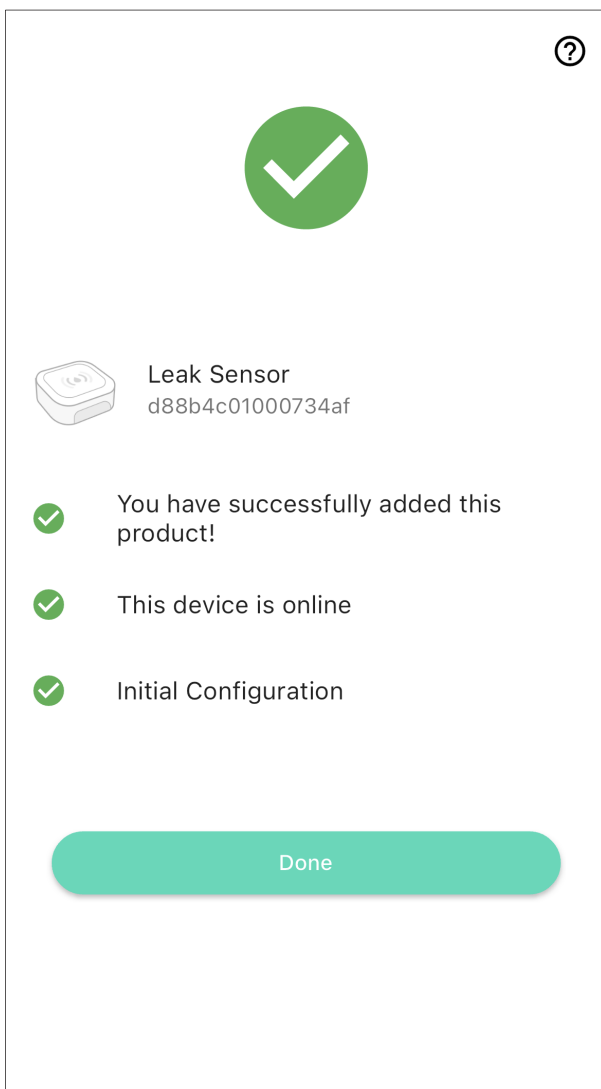


Sensor location considerations:

Before placing your Water Leak Sensor 5, consider the following:

- 1.** Use the sensor indoors and within the temperature and humidity ranges listed in Specifications.
- 2.** The enclosure is rated IP67. Do not leave the sensor submerged or in standing water for extended periods. Use a water-level sensor for continuous water-level monitoring.
- 3.** One probe group on top detects drips from above. Two probe groups underneath detect pooling water. Water bridging either pair of contacts can trigger a leak alarm. Place the recessed side facing up.



Pre-installation, Continued

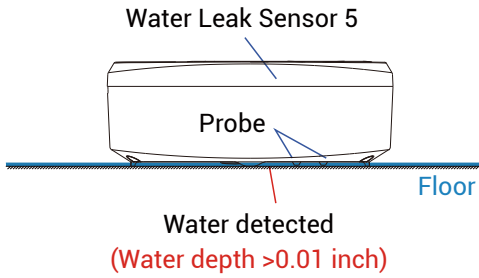

4. The Water Leak Sensor 5 can be used in many different applications, and not all of them can be covered in detail in this guide. If you are unsure where to place your Water Leak Sensor 5, please contact us.

5. When determining the location and quantity of sensors required for your application, consider the types of leaks or flooding that may occur. For example, could the water come from an overflow, such as a sink, toilet, or tub? Could it come from a leak inside an appliance, such as a dishwasher? Could it come from a loose or broken plumbing fitting, such as a washing machine hose or ice maker water line? In general, any location where water enters or exits an appliance, where two pipes or fixtures are connected, where a hose connects to a fitting, or where water comes out of a faucet or fixture is a potential leak location.



Pre-installation, Continued

6. Consider how water may flow, pool, or collect if a leak occurs at each possible leak location. Pay attention to the slope of the floor or the surface where water may drip. For example, a leak from a drain fitting under a sink may result in water directly below the sink. The water may then run toward the front of the vanity or cabinetry, or toward the back, where it may drain into the base of the cabinetry and only appear on the floor after a significant leak has occurred. Floors with drains, such as those in a mechanical room or near a water heater, are often intentionally sloped toward the drain. Floors in older homes, or homes where settling has occurred, may also have a slope. Take advantage of any slope by placing the leak sensor at the bottom of the slope or in the path where water is likely to flow. A marble, toy ball, or similar object can be used to check the floor's level. You may also consider pouring a small amount of water on the floor or surface where a leak is possible to see how the water may flow and pool.

7. Additional leak sensors can be added if you want to protect a larger area. You may also consider the Water Leak Sensor 6 (YS7984), our rope-style leak sensor, which allows you to create larger water detection areas using additional cables.



Pre-installation, Continued

8. Avoid locations where people or pets may kick, step on, or move the sensor.

Check the location

Place the sensor on a stable surface with the recessed side facing up. Keep its probes in the path of water likely to drip, flow, or collect.

Check the connection

Open the device screen in the YoLink app and confirm that the sensor is online. Check the signal at the installation location.

Complete the functional test described in Installation before relying on the sensor.

H Pre-installation, Continued



Applications (locations and placement) for the Water Leak Sensor 5 are many, and they can not all be covered in this guide. The following application examples cover the most popular ones for the WLS5, as well as for other YoLink water sensors. If your application is unique or if you are unsure where to place your sensor, please contact us!

Common Leak Sensor Application Examples



Toilets

For external water leaks, place near the toilet, at the rear. Keep the sensor clear of foot traffic. Also, consider the Water Leak Sensor 6, our rope style water sensor, that can be used to detect leaks from the toilet as well as an adjacent sink, tub or shower. For internal water leaks, consider our Water Level Monitoring Sensor (with float switch).



Sinks

For vanity or enclosed style sinks, place the leak sensor under the P-Trap, otherwise at a location where leaking water may gather. For multiple sinks, place a sensor below each sink. For open or pedestal style sinks, place the sensor on the floor, near the wall, below the sink. Keep the sensor clear of foot traffic. Also, consider the Water Leak Sensor 6, our rope style water sensor, that can be used to detect leaks from the toilet as well as an adjacent sink, tub or shower.



Pre-installation, Continued



Dishwashers

The sensor can be placed on the floor in front of the dishwasher, but this location may be subjected to being knocked out of place, in high traffic areas. Choose a location where the sensor will not be disturbed. If the appliance can be moved out, placing one or a second sensor underneath the dishwasher is ideal. Consider the cold and hot water line, and the drain hose connections, as likely locations for a leak. If keeping the sensor out of view is desired, consider the Water Leak Sensor 6, that can be discreetly placed on the floor at the front of the dishwasher, and/or underneath the dishwasher. And it may be possible, with extension ropes, to also detect leaks in an adjacent sink area.



Refrigerators,
Icemakers

Icemakers, and refrigerators with water and/or icemaker features (with a water line in) are subject to water leaks, which typically occur at the rear of the appliance. Ideally, place the leak sensor behind the appliance and under the water connection. The Water Leak Sensor 6 can also be used for this application, and it is often possible to place the sensor body at a more accessible location, such as in the cabinet above the fridge. This can make battery replacement more convenient, and it may be more appropriate for built-in appliances. Extension ropes/cables are available for this purpose.



Laundry
Machines

Laundry machine water leaks are common at the front as well as the rear of the appliance. Depending on floor slope (if applicable) and the amount of water, placing one sensor near the rear of the appliance may be sufficient, otherwise, consider placing one at the front and rear. Also, consider the Water Leak Sensor 6, with extension ropes, that can encircle the machine with the water-sensitive ropes. For floor leaks near the drain pipe, place a leak sensor on the floor. For high-water monitoring in a laundry sump or collection basin, consider our Water Level Monitoring Sensor (with float switch).



Pre-installation, Continued



Water Heaters

Water heater leaks are frequently detected at the base of the water heater, but the location is often on a floor that has a slight slope to a floor drain. When placing the sensor, factor-in the path water may take, as it runs to the low point of the floor. Or, consider the Water Leak Sensor 6. The Water Leak Sensor 6's rope(s) can be used to encircle the base of the water heater, making it less likely that a small leak is not detected promptly.



Sump Pumps

For sumps that are typically dry, placing the sensor in the sump is ideal. If a small, acceptable, amount of water may be present, the sensor should be placed on the floor, near the edge of the sump. This is not to be considered early-warning. In this case, consider the Water Leak Sensor 6. The Water Leak Sensor 6's rope(s) can be used to encircle the sump. Also, consider the Water Level Monitoring Sensor (with float switch), for placement within the sump.



HVAC

The Water Leak Sensor 5 can be used to detect water condensation overflow or build-up, depending on the air conditioner type and method of condensate discharge. For pans or trays, the sensor can be placed in the pan/tray, if it is normally dry. Or, place the sensor on the floor near the air conditioner. For high-water monitoring in a condensate collection pan, consider our Water Level Monitoring Sensor (with float switch), where there is sufficient space for the float to move freely.



Aquariums

Water leaks from fish tanks can result in extensive damage. Typical aquarium applications include simply placing the sensor on the floor, behind the tank. If there is filtration or pump equipment located in the tank stand, for example, additional sensors may be required here. For confined space water detection, consider the Water Leak Sensor 6. For early warning, consider our Water Level Monitoring Sensor (with float switch), to monitor water levels in the tank and/or sump.



Pre-installation, Continued



Roofs

Consider our Water Leak Sensor 6, a rope style sensor, that may be more appropriate for detection of leaks in roofs. Otherwise, if detecting leaks at locations prone to leaks, place the Water Leak Sensor 5 at these locations and/or where water gathers or pools up. The use of trays or pans (even large baking pans/trays), placed below areas at risk of leaks, can be used to gather leaking water, allowing a sensor placed in the tray to detect leaks as quickly as possible.



See Specifications for the operating limits. Use the sensor only within the specified temperature and humidity ranges.

After Installation

Open History from the device screen to review recorded leak and temperature events.

Tap the download icon to view available export periods, such as Last Month, Last 3 Months, or Last 6 Months.

Use Find Device in Details to locate a sensor by its fast repeating beeps.



Installation

Place the leak sensor

Place the sensor on a stable surface with the recessed side facing up. Position its probes where water is likely to collect.

Test the leak sensor

Touch a probe group with a damp paper towel. Allow for any configured Delayed Alarm setting.


Confirm the on-site alarm if Beep is on, the warning in the app, and your configured notifications or actions.

Dry the sensor completely. Confirm that the leak condition clears. If Alarm Latch is enabled, the app alarm can remain visible until you acknowledge or reset it.



App Functions: Device Screen

In the app, tap the Water Leak Sensor 5 tile to open its device screen.

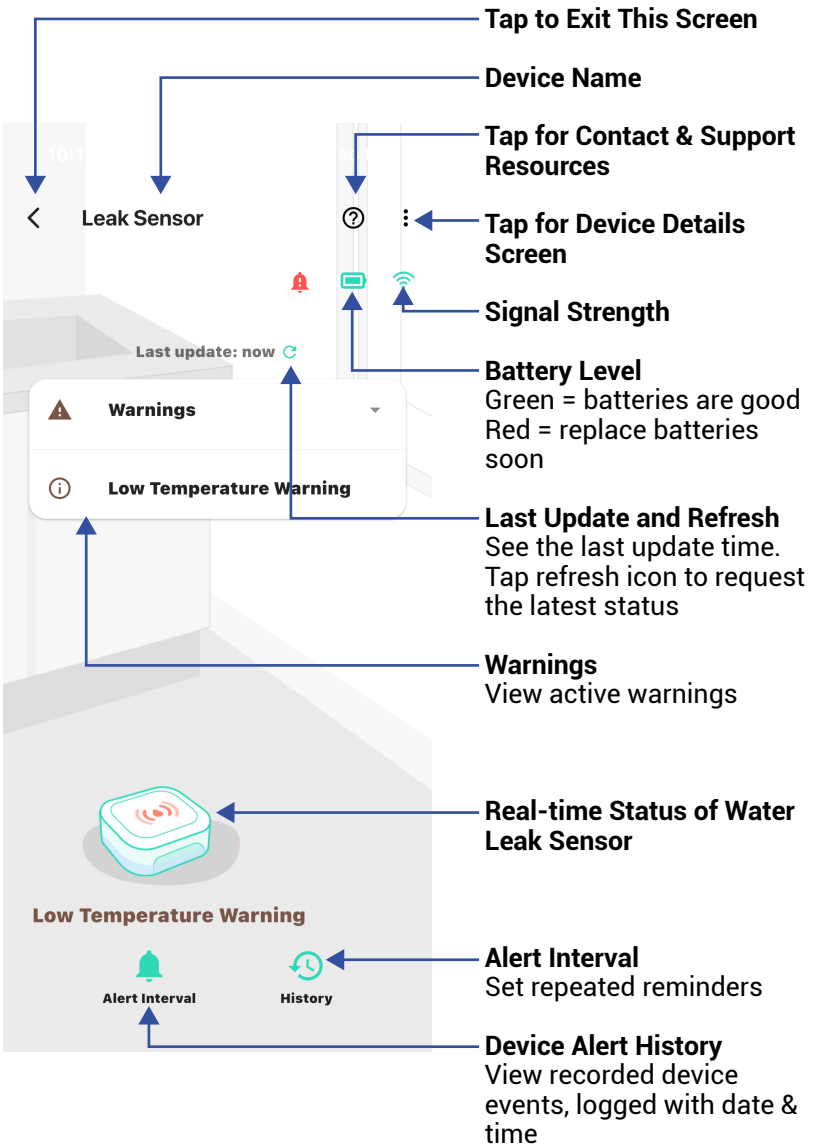




App Functions: Device Details Screen

Tap the three dots (in the upper right corner) to open the Details screen.



Type	Water Leak Sensor
Name	Water Leak Sensor >
Room	7986 >
Favorite	Will show in favorite screen
History	Get device activity logs >
Alert	>
Temperature	85 °F
Find Device	Make the device beep or flash to help you locate it. >
State	Normal
D2D Control Management	>
Other	
Model	YS7986-UC
Device EUI	d88b4c012000e9a3 >
SN	B87E0457B4 >
Signal Intensity	Strong (~34 dBm)
Battery	>
Firmware	8605



Remove Device From Current Account
Tap to delete the device from your YoLink account

Device Type

Name
Tap to rename the sensor

Room
Assign the sensor to a room

Favorite
Show or hide it in Favorites

History
View recorded device events

Alert
Tap to edit Alert Settings

Temperature
Latest reported temperature

Find Device
Start fast beeps to locate the sensor

State

D2D Control Management
Manage local D2D pairings

Model Number

Device EUI
Unique Identifier Number (Unique)

Device Serial Number

Signal Intensity
(From YoLink Hub)


Battery

Firmware Revision



App Functions: Alert Settings Screen

Tap Details > Alert to configure the sensor.

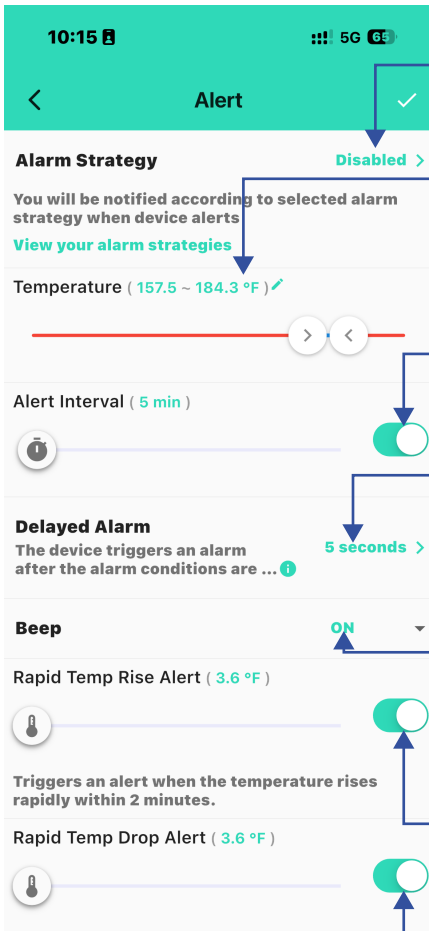

Alarm Strategy

Select the notification and action strategy

Temperature

Set low and high temp alert thresholds

Alert Interval

Repeat remote reminders while an alarm continues

Delayed Alarm

Delay a leak alarm from 2 seconds to 4 hours. If the probes dry before the delay ends, the alarm is canceled

Beep

Enable or disable the audible leak alarm. Find Device beeps are not affected

Rapid Temp Rise Alert

Enable and set an alert for a temperature rise within 2 minutes


Rapid Temp Drop Alert

Enable and set an alert for a temperature drop within 2 minutes



App Functions: Alarm Strategy Screen

You can set up notifications in Alarm Strategy settings, make sure you have enabled App, email, SMS notification from the App->Menu->Settings->Account Settings->Advanced Settings, and verified your email address and added your phone number in the app.

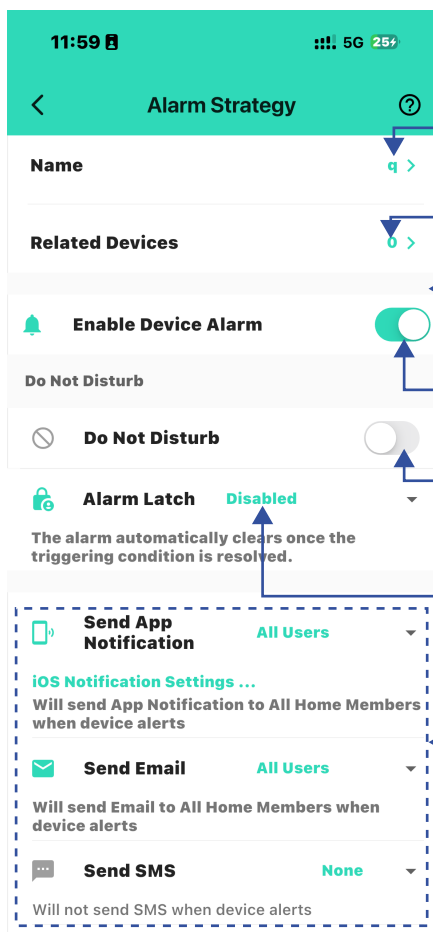

Name

Tap to edit the name

Related Devices

Tap to add more devices (that can alert) to this strategy, a device can be related to only one strategy

Tap to Enable or Disable the Strategy

Do Not Disturb

Schedule pauses for remote notifications

Alarm Latch

Keep the app alarm visible after the condition clears, until acknowledged or reset



Notification Recipients

Choose the recipients offered for each channel, such as All Users, Admin, Authorized Users, or None



App Functions: Alarm Strategy Screen, Continued

Set how alerts reach you and which actions run.

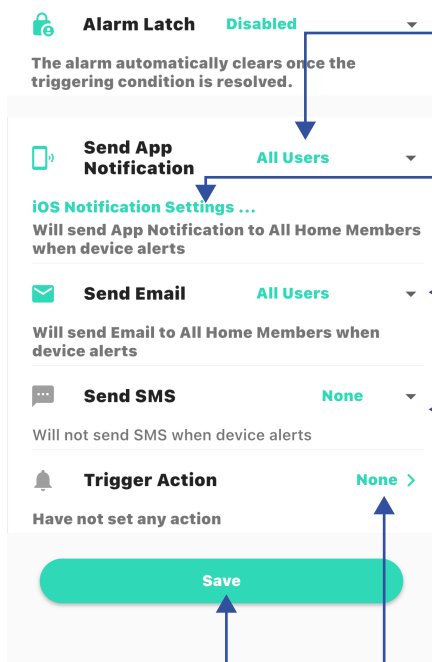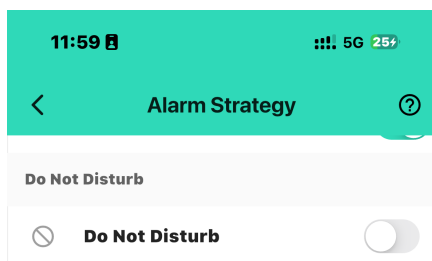

Send App Notification
Select who receives app push alerts

iOS Notification Settings
Configure the available iOS notification options

Send Email
Select recipients for email alerts

Send SMS
Select recipients for SMS alerts. Message allowances and plan limits may apply (subscribe required if desired to send to all members). Enable phone notification permissions. Verify the email address and phone number used for the selected channels.

Trigger Action
Select a supported device action (sirens or speakerhubs, sold separately) or Scene.

Save
Save changes to the strategy



App Functions: Automation

Use the Water Leak Sensor 5 as an automation condition. For example, water detection can trigger a compatible YoLink valve to close. The valve is sold separately.

Set the condition and action in the app, then save and test the automation. Cloud automations require an online hub and internet connection.

← Automation ✓

Name

Auto shut off

14/64

When

 Leak Sensor 4

Water Leak Alert

Then

Behavior

 5001 X3 Valve

Close

Working Time

Always Working

Advanced Settings

▼



What Is Control-D2D?

Control-D2D lets one YoLink device control another directly. For example, your leak sensor (the controller) can tell a compatible valve (the responder) to close when water is detected.

After pairing, this local response works without a YoLink Hub or internet connection. App alerts and other online features still require an online hub. The valve is sold separately.

Pair Using the SET Buttons

1. On the sensor, hold SET for 5-10 seconds until the LED blinks quickly green, then release.
2. Close the valve using its SET button or the app. On the valve controller, hold SET for 5-10 seconds until the LED blinks quickly green, then release.
3. The LEDs stop blinking when pairing is complete.


You can also pair using the app (next page).



Control-D2D, Continued

Pair Using the App

Open Details > D2D Control Management and tap + ADD. Choose the water-detection trigger, select a compatible device and its action, then complete pairing.

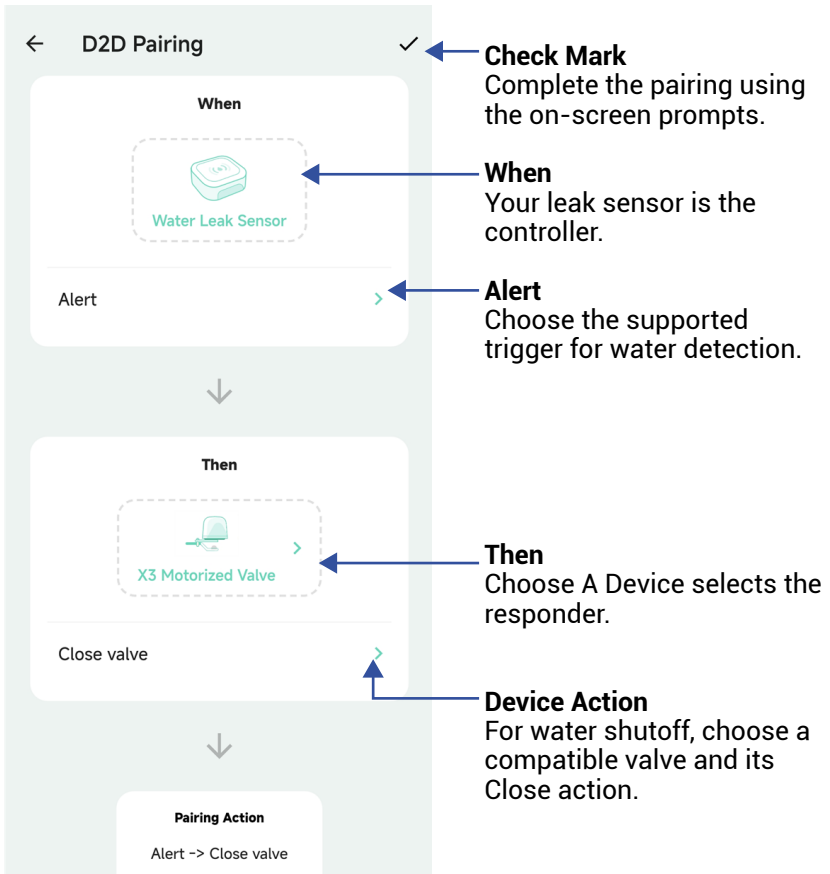

Note: App setup requires an online hub. After pairing, Control-D2D operates without a hub or internet. Valve sold separately. Test before use.



Control-D2D, Continued

Test Control-D2D

Open the paired valve. Wet a sensor probe group and allow for any configured alarm delay. Confirm that the valve closes, then dry the sensor. Drying the sensor does not reopen the valve. Reopen it only after checking the leak.

Unpair Using the SET Button

1. On the sensor, hold SET for 10-15 seconds until the LED blinks quickly red, then release.

The LED flashes green first. Keep holding until it flashes red; do not release at green.

2. To clear pairing on the valve controller, close the valve, press and hold the SET button for 10 to 15 seconds, until the LED quickly blinks red, then release the button.

3. With the valve open, wet the sensor probes again. Confirm that this D2D pairing no longer closes the valve, then dry the sensor. Other automations may still operate the valve.

Manage Pairings in the App

Open Details > D2D Control Management and follow the app prompts to review or remove a pairing. Test again after any change.



3rd Party Services

Alexa

You can use the Water Leak Sensor 5 to trigger Alexa routines. You must have the Alexa app installed, the YoLink skill installed and connected to your YoLink app account.

1. Create a new routine in the Alexa app.
2. In the **When This Happens** section, select **Smart Home**.
3. Find your water leak sensor and select it.
4. Alexa integrates the Water Leak Sensor 5 as a contact sensor, so the available sensor states are "Closed" or "Open" like a set of electrical contacts on a relay, button or switch. The default state is **Open**. Leave on or change to **Closed**, then tap **Next**.
5. For Add Action, tap the **+** button, then **Smart Home** and select your device (siren, valve controller, etc.), tap **Next**.
6. For a valve controller, for example, select **Off**, then tap **Next**.
7. Review your settings, then tap **Save**.



Always functionally test your new automations and routines!



3rd Party Services, Continued

IFTTT

You can use the Water Leak Sensor 5 to trigger IFTTT applets. You must have the IFTTT app installed, the YoLink service installed and connected to your YoLink app account.



Please note, IFTTT.com is a paid service, typically offering a limited number of free applets.

1. Create a new applet in the IFTTT app.
2. For the If This section, search and select the YoLink service.
3. Tap **Leak Sensor**.
4. In the Device drop-down box, select your Water Leak Sensor 5, tap **Done**.
5. Tap **Create Trigger**.
6. Under **Then That**, select a service and configure the desired action.
7. Follow the prompts to save the Applet, then test it.




Always functionally test your new automations and routines!




Battery Replacement

Tools Required :

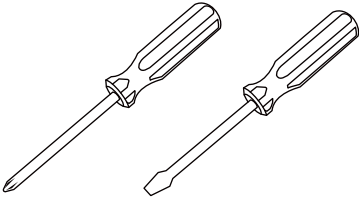


Small Phillips and Flat-Head
Screwdrivers

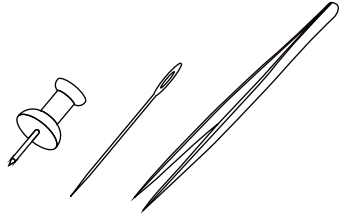

Tweezers or Needle/Pin or Tack




1. Replace both batteries with new AA lithium non-rechargeable batteries. Do not mix old and new batteries.
 2. Keep the base, gasket, and sealing pads clean and dry.
 3. Reassemble all seals carefully to maintain water resistance.
-
- 1 Use a pin or needle, tack, or tweezers to remove the four sealed rubber pads at the base of the device.

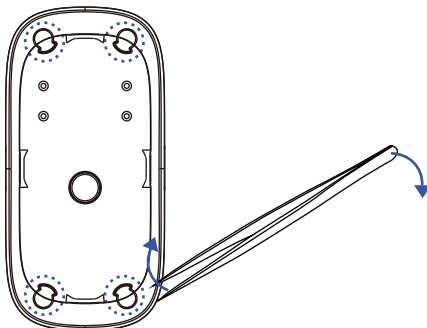


Q Battery Replacement, Continued


- 2 Use a screwdriver to loosen the screws at the base of the device. Use care to retain the screws in the base, or carefully set them aside.

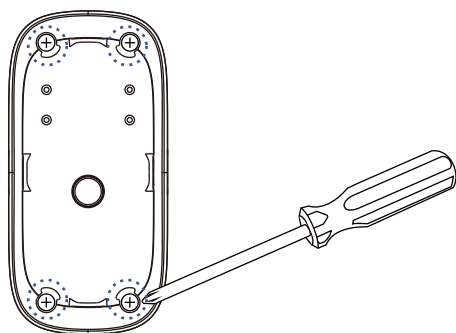

- 3 Carefully pry open the housing using a flat-head screwdriver.

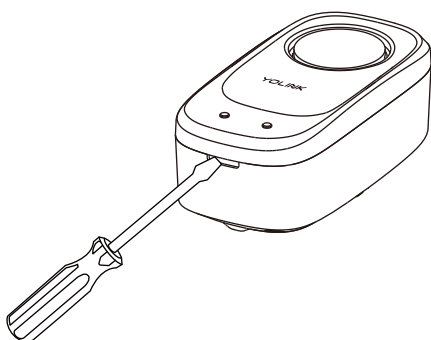


- 4 Remove both old batteries before installing replacements.

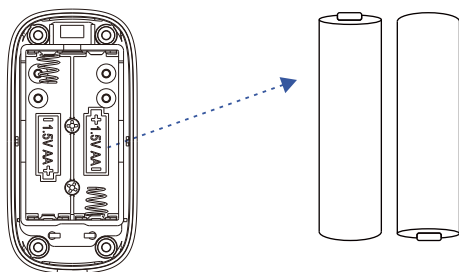


Q Battery Replacement, Continued

- 5 Install two new AA lithium batteries, matching the polarity marks.

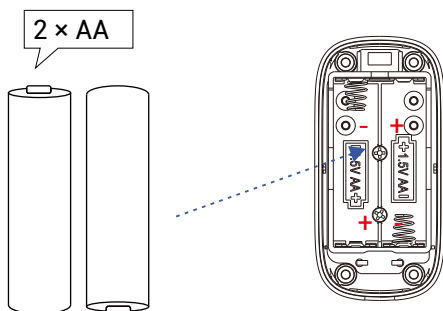

- 6 Close and secure the base by reinstalling and tightening the four screws.

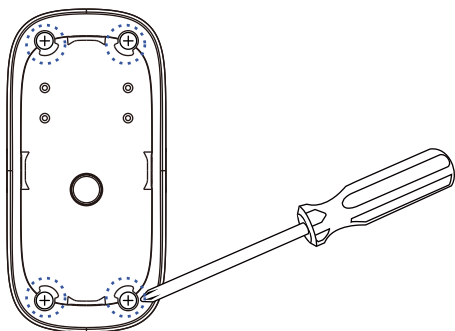

- 7 Reattach the four sealing rubber pads. Press the SET button briefly. Confirm that the sensor is online in the YoLink app.




Test the sensor with a damp paper towel. Dry it completely after testing.

R Factory Reset

When directed by customer support, and/or as an attempt to resolve a problem with your Water Leak Sensor 5, it may be necessary to perform a factory reset. Factory resetting your Water Leak Sensor 5 returns it to the factory default programming and settings. This is a simple process:

Hold the SET Button for 20 to 30 seconds, until the LED blinks red and green alternately, then release the button.

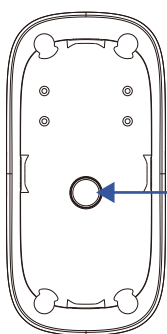

SET Button
Press for 20 to 30 Seconds

Factory reset is complete when the LED stops flashing.



Only deleting a device from the app will remove it from your account. Factory reset will not delete the device from the app.




Firmware Updates

Firmware controls how your Water Leak Sensor 5 operates. Updates may improve performance or add features.

Open Details and scroll to Other. Tap Firmware to install an available update. Keep the hub online and leave the batteries installed.

The app may show progress as a percentage. The LED may blink slowly green during the update. Allow several minutes for the process to finish.

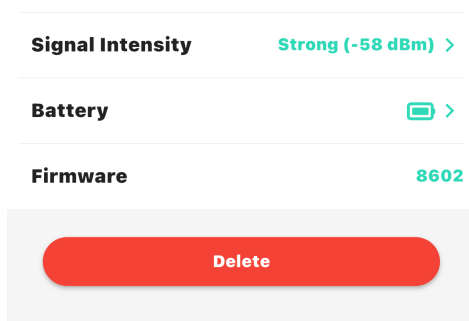

Note: The version shown in the screenshot is an example. Available firmware changes over time.

If you experience incomplete firmware updates, please update only one device at a time. If this does not resolve the problem, please contact our customer support department!



Specifications

Voltage:	3V DC (2 x AA lithium batteries)
----------	----------------------------------

IP Rating:	IP67
------------	------

Dimensions, Imperial (L x W x D):	3.37 x 1.65 x 1.24 inches
-----------------------------------	---------------------------


Dimensions, Metric (L x W x D):	85.5 x 42 x 31.4 mm
---------------------------------	---------------------

Environment:	Working Temperature: 32°F - 122°F (0°C - 50°C)
--------------	--


	Working Humidity: ≤ 100% RH (non-condensing)
--	--




Specifications, Continued

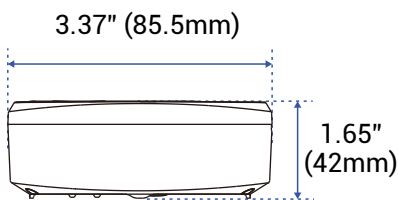

FRONT

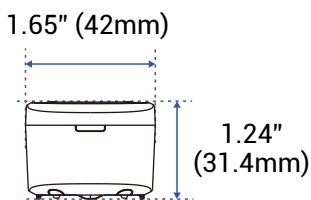

SIDE

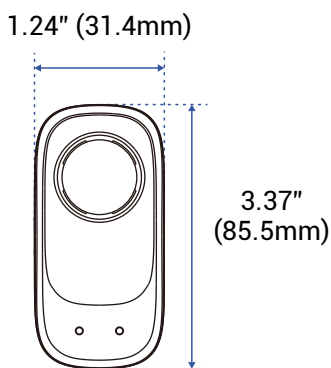

TOP



Troubleshooting

Sensor Is Offline

Press SET briefly. Check battery polarity and power, and confirm that the hub is online. Check signal at the installation location.

No Audible Leak Alarm

Enable Beep in Alert settings. Allow for Delayed Alarm. See page 05 for the leak beep timing.

No Remote Notifications

Check Alarm Strategy, recipients, phone permissions, and Do Not Disturb. Confirm internet access.

Repeated or Temporary Alerts

Review Delayed Alarm, Alert Interval, Alarm Latch, and temperature settings.

Find Device or D2D Does Not Respond

Check battery power and connection. For D2D, verify the pairing and action, then test again.

Still Need Help?

Check for firmware updates and contact Customer Support.

Warnings

For reliable operation, follow these precautions:

- Use the sensor only within the specified operating temperature and humidity ranges.
- The IP67 rating does not mean the sensor is designed for continuous submersion.
- Use two AA lithium non-rechargeable batteries. Do not mix old and new batteries or different battery types. Observe the polarity markings.
- Do not recharge, short-circuit, disassemble, heat, or burn the batteries. Dispose of used batteries according to local regulations.
- Keep the gasket and sealing surfaces clean and undamaged. Reassemble the housing securely after replacing batteries to maintain water resistance.
- Keep the sensing contacts clean and unobstructed. Test the sensor after installation and battery replacement, and periodically during use.
- This sensor provides alerts but cannot guarantee detection of every leak or prevent water damage.
- Do not modify the device or attempt repairs beyond the battery replacement instructions. Contact Customer Support for assistance.



Warranty

2 Year Limited Electrical Warranty

YoSmart Inc. warrants to the original user ("customer") of this product that it will be free from defects in materials and workmanship, under normal use, for 2 years from the date of purchase. This warranty does not apply to devices that have been improperly installed, modified, put to a use other than designed, or subjected to acts of God (such as floods, lightning, earthquakes, etc.). This warranty does not cover neglected or abused products. This warranty is limited to the repair or replacement of the device, only, at YoSmart's sole discretion. YoSmart will NOT be liable for the cost of installing, removing, nor reinstalling this product, nor direct, indirect, or consequential damages to persons or property resulting from the use of this product. This warranty only covers the cost of replacement parts or replacement units, it does not cover shipping & handling fees. The customer must provide proof of purchase, in the form of the original purchase invoice or order number. The purchase must have been made from an authorized seller.

To implement this warranty please contact us by one of the methods listed on the Contact Us page of this user guide.

FCC Statement

This device complies with part 15 of the FCC Rules. Operation is subject to the following two conditions: (1) This device may not cause harmful interference, and (2) this device must accept any interference received, including interference that may cause undesired operation. Any Changes or modifications not expressly approved by the party responsible for compliance could void the user's authority to operate the equipment.

Note: This equipment has been tested and found to comply with the limits for a Class B digital device, pursuant to part 15 of the FCC Rules. These limits are designed to provide reasonable protection against harmful interference in a residential installation. This equipment generates uses and can radiate radio frequency energy and, if not installed and used in accordance with the instructions, may cause harmful interference to radio communications. However, there is no guarantee that interference will not occur in a particular installation. If this equipment does cause harmful interference to radio or television reception, which can be determined by turning the equipment off and on, the user is encouraged to try to correct the interference by one or more of the following measures:

- Reorient or relocate the receiving antenna.
- Increase the separation between the equipment and receiver.
- Connect the equipment into an outlet on a circuit different from that to which the receiver is connected.



FCC Statement, Continued

- Consult the dealer or an experienced radio/TV technician for help.

The device has been evaluated to meet general RF exposure requirement. The device can be used in portable exposure condition without restriction.

PRODUCT NAME:
WATER LEAK SENSOR 5

PARTY:
YOSMART, INC.

TELEPHONE:
831-292-4831

MODEL NUMBER:
YS7986-UC

ADDRESS:
25172 ARCTIC OCEAN DRIVE, SUITE 106, LAKE
FOREST, CA 92630 USA

EMAIL:
SERVICE@YOSMART.COM



Contact Us

We are here for you, if you ever need any assistance installing, setting up or using a YoLink app or product!

Need help? For fastest service, please email us 24/7 at service@yosmart.com

Or call us at **831-292-4831** (US phone support hours: **Monday - Friday, 9AM to 5PM** Pacific)

You can also find additional support and ways to contact us at:

www.yosmart.com/support-and-service

Or scan the QR code:



Support Home Page

Finally, if you have any feedback or suggestions for us, please email us at feedback@yosmart.com

Thank you for trusting YoLink!

YoLink Customer Support



25172 Arctic Ocean Drive, Suite 106 Lake Forest, CA 92630
© 2026 YOSMART INC. CALIFORNIA, USA