




Smart Energy Plug

YS6614-UC

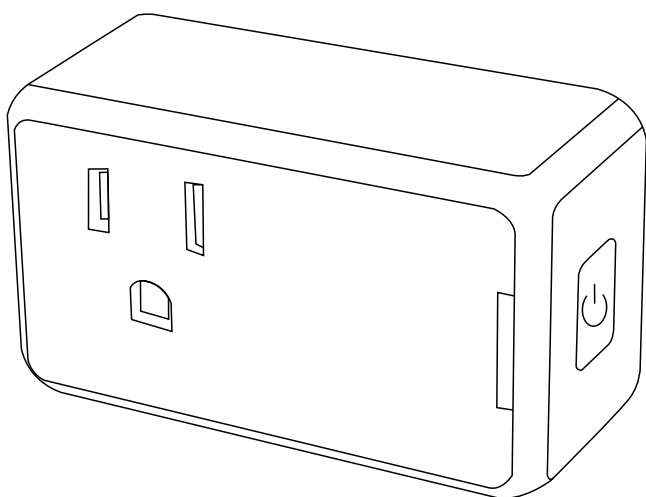

Installation & User Guide

Revision Jun. 02, 2026

Contents

A . Welcome!	01
B . Before You Begin	02
C . In the Box	03
D . Get to Know Your Smart Energy Plug	04
E . Install the App	05
F . Add Your Smart Energy Plug to the App	06
G . App Functions: Device Screen	08
H . App Functions: Device Details Screen	09
I . App Functions: Alert Settings Screen	11
J . App Functions: Energy Usage Chart	12
K . App Functions: Power Chart Screen	13
L . App Functions: Schedule	14
M . App Functions: Timer	15
N . App Functions: Smart - Scene	16
O . App Functions: Smart - Automation	17
P . App Functions: Alarm Strategy Screen	18
Q . Control-D2D	20
R . Using the App & 3rd-Party Services	23
S . Factory Reset	24
T . Firmware Update	25
U . Specifications	26
V . Troubleshooting	28
W . Warnings	30
X . Warranty	32
Y . FCC Statement	33
Z . Contact Us	35



Welcome!

Thank you for purchasing YoLink products! We appreciate you trusting YoLink for your smart home & automation needs. Your 100% satisfaction is our goal. If you experience any problems with your installation, with our products or if you have any questions that this manual does not answer, please contact us right away. See the Contact Us section for more info.

Thank you!

YoLink Customer Support

User Guide Conventions

The following icons are used in this guide to convey specific types of information:



Very important information
(can save you time!)



Good to know info but may not
apply to you

B Before You Begin

Visit our Smart Smart Energy Plug support page on our website, for the latest installation guides, additional resources, information and videos by visiting:

<https://www.yosmart.com/support/YS6614-UC>

Or by scanning the QR code:



Download the most current version of the user guide by scanning the QR code:




Make sure to use this product together with 15A circuit breaker in the upstream.

B Before You Begin, Continued




Your Smart Energy Plug connects to the internet via a YoLink hub, and it does **not** connect directly to your WiFi or local network. In order for remote access to the device from the app, and for full functionality, a hub is required. This guide assumes the YoLink app has been installed on your smartphone, and a YoLink hub is installed and online (or your location, apartment, condo, etcetera, is already served by a YoLink wireless network).

C In the Box

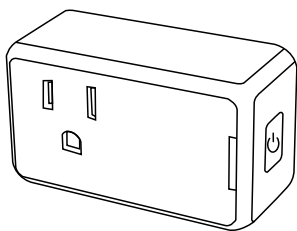


YoLink Smart Plug

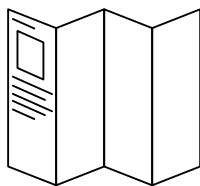

Quick Start Guide

D

Get to Know Your Smart EnergyPlug

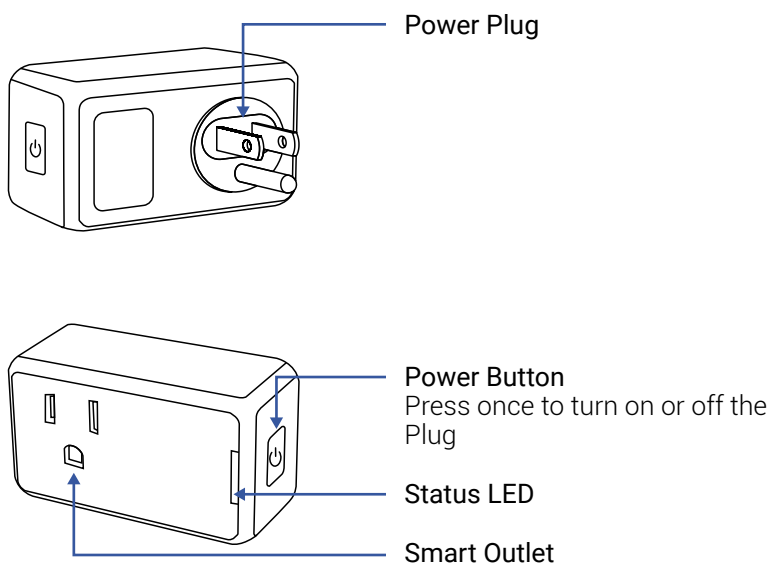

LED Behaviors

- **Green**
Smart Energy Plug is On
- **Red**
Smart Energy Plug is Off
- ⦿ **Blinking Green**
Connecting to Cloud
- ⦿ **Quick Blinking Green**
Control-D2D Pairing in Progress
- ⦿ **Slow Blinking Green**
Updating
- ⦿ **Quick Blinking Red**
Control-D2D Unpairing in Progress
- ⦿ ⦿ **Blinking Red And Green Alternately**
Restoring to Factory Defaults

E Install the App

If you are new to YoLink, please install the app on your phone or tablet, if you have not already. Otherwise, please proceed to the next section.

Scan the appropriate QR code below or find the “YoLink app” on the appropriate app store.



Apple phone/tablet
iOS 9.0 or higher



Android phone/tablet
6.0 or higher

Open the app and tap **Sign up for an account**. You will be required to provide a username and a password. Follow the instructions, to set up a new account. Allow notifications, when prompted.

You will immediately receive a welcome email from no-reply@yosmart.com with some helpful information. Please mark the yosmart.com domain as safe, to ensure you receive important messages in the future.


Log in to the app using your new username and password.

The app opens to the **Favorite** screen. This is where your favorite devices and scenes will be shown. You can organize your devices by room, in the **Rooms** screen, later.



F

Add Your Smart Energy Plug to the App

1. Tap **Add Device** (if shown) or tap the scanner icon:

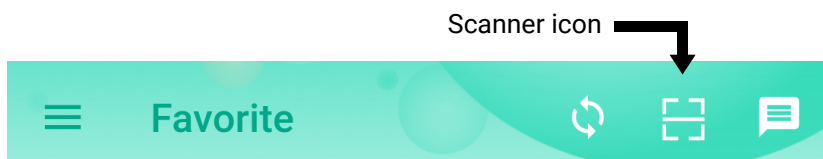

2. Approve access to your phone's camera, if requested. A viewfinder will be shown on the app.

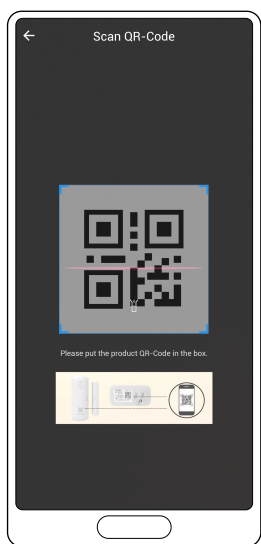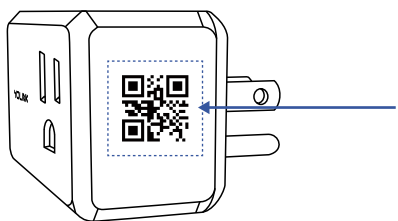


3. Hold the phone over the QR code so that the code appears in the viewfinder. If successful, the **Add Device** screen will be displayed.

F

Add Your Smart Energy Plug to the App, Continued

4. You can change the device name and assign it to a room later. Tap **Bind device**.

5. If successful, the screen will appear as shown. Tap **Done**.

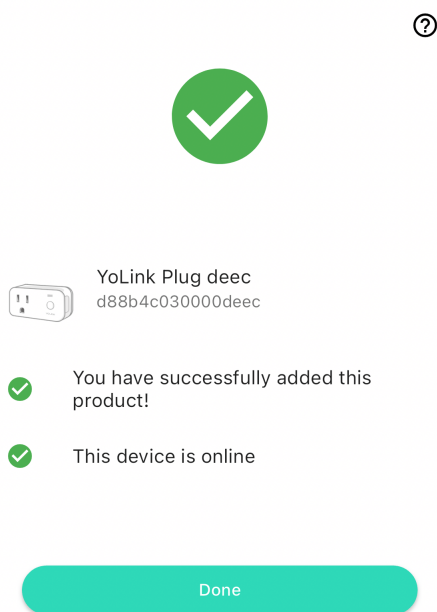

6. Plug in the Plug to a 120V AC outlet.


7. To turn the Plug on for the first time, press the Power button briefly, until the LED illuminates.

8. You should now be able to control the Plug from the Power button and from the app.




App Functions: Device Screen

In the app, tap on your Smart Energy Plug icon. Your main screen should be similar to the one shown below.

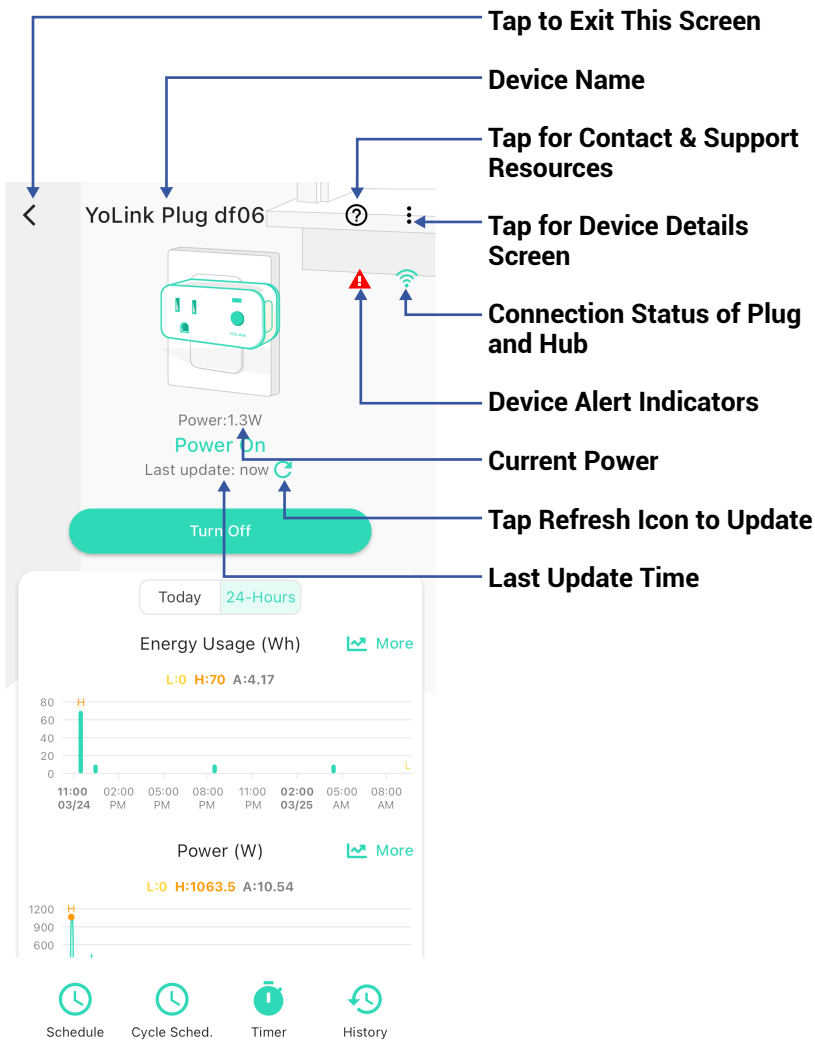



App Functions: Device Screen, Continued

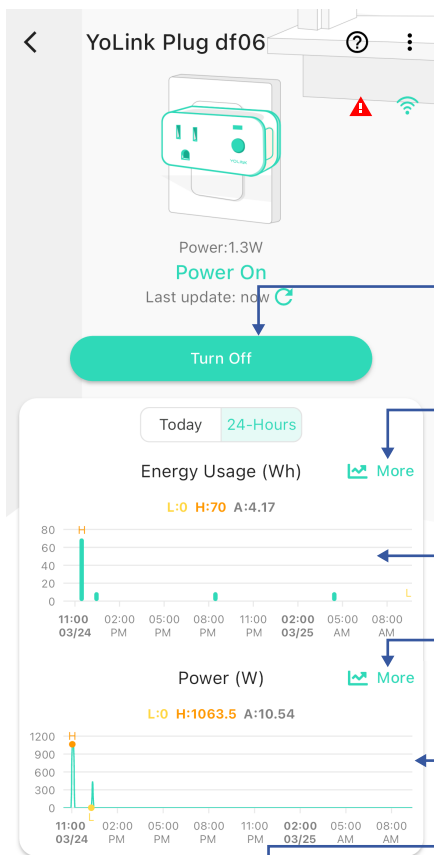

Turn On/Off

Tap to turn on or turn off the Plug

Tap for Hourly, Daily, Monthly Measurement Data

Energy Usage Chart

Tap for Historical Measurement Data

Power Chart

Timer

Set the one-time-timer duration for the Plug

History

Tap to view device history

Schedule

Create one cycle schedule to automate your Plug

Schedule

Create on/off schedules to automate your Plug



App Functions: Device Details Screen

Tap the three dots (in the upper right corner) to open the **Details** screen. Your screen should be similar to the one shown below.

<

Details

?

Type

YoLink Plug

Name

YoLink Plug df06 >

Room

6614 >

Favorite

Will show in favorite screen

♥

Alert

>

State

On

Time

3/25 10:32:50 AM (GMT+8)

Sync With Mobile >

D2D Control Management

>

Historical Measurement Data

Energy Usage

>

Power

>

Other

Power On Status

Last State ▾

Device Type

Device Name
(Tap to Edit)

Room
(Tap to Edit)

Favorite
(Red if Favorite, Tap to Edit)

Alert

Device State

Time
Tap to sync with mobile


Tap to manage D2D Control

Energy Usage Chart

Power Chart



App Functions: Device Details Screen, Continued

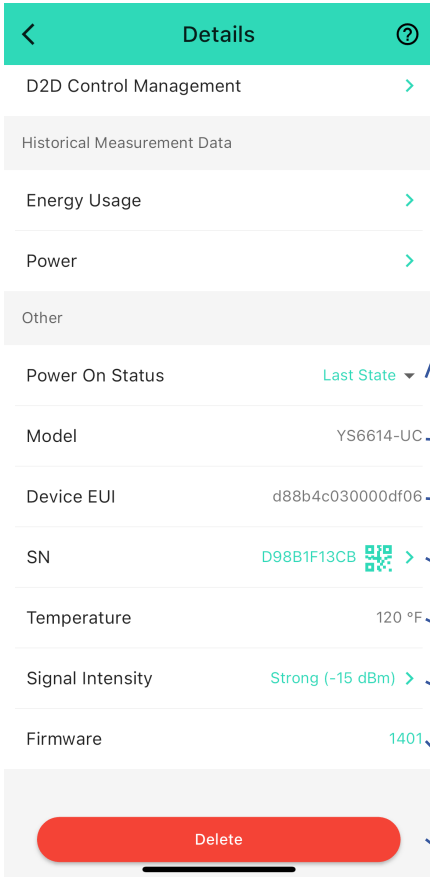

Power On Status
Power on status after firmware update or power loss, choose Last State or On or Off. Default is set to Last State

Model Number
Device EUI
Unique Identifier Number

Device Serial Number
Device Temperature


Signal Intensity
(From YoLink Hub)

Firmware Revision
(Refer to page 27)

Remove Device From Current Account
Tap to delete the device from your YoLink account



App Functions: Alert Settings Screen

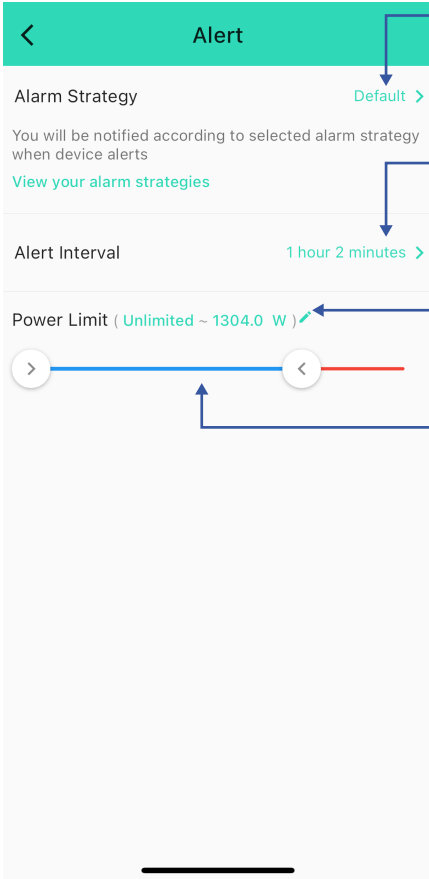

Alarm Strategy

Tap to edit the plug's Alarm Strategy

Alert Interval

Choose how often you want to be reminded after an alert


Tap here to open the digital power limit alert settings

Power Limit Alert

Tap the slider control and adjust the high or low alert value. The "normal" range will be displayed in blue text as a low alert value, to the high alert value. You will get an alert when the power exceeds the range you set.




App Functions: Energy Usage Chart Screen

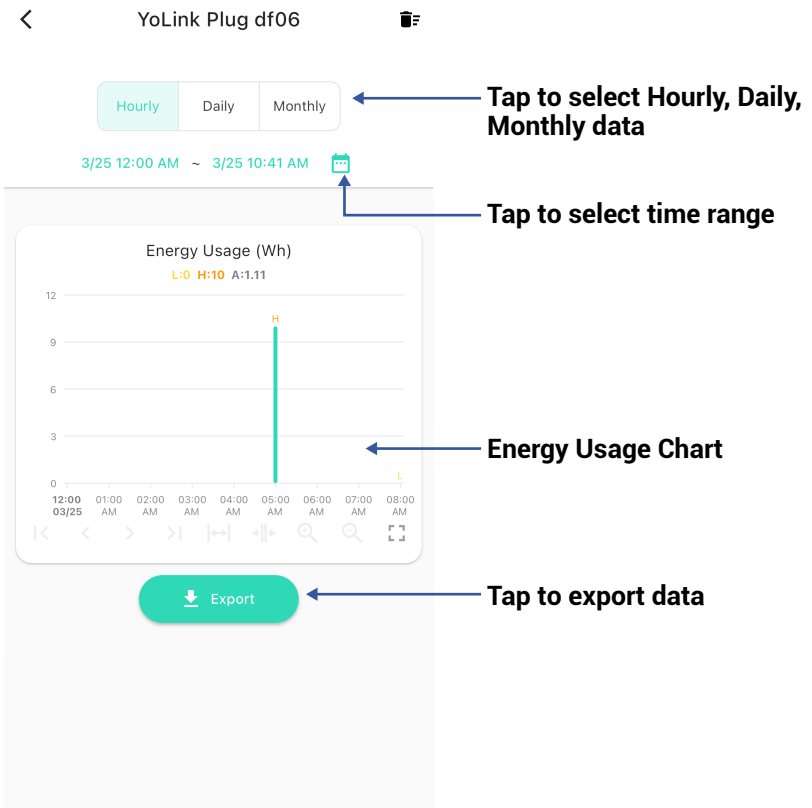

The chart supports pinch-to-zoom in and out with two fingers.



App Functions: Power Chart Screen

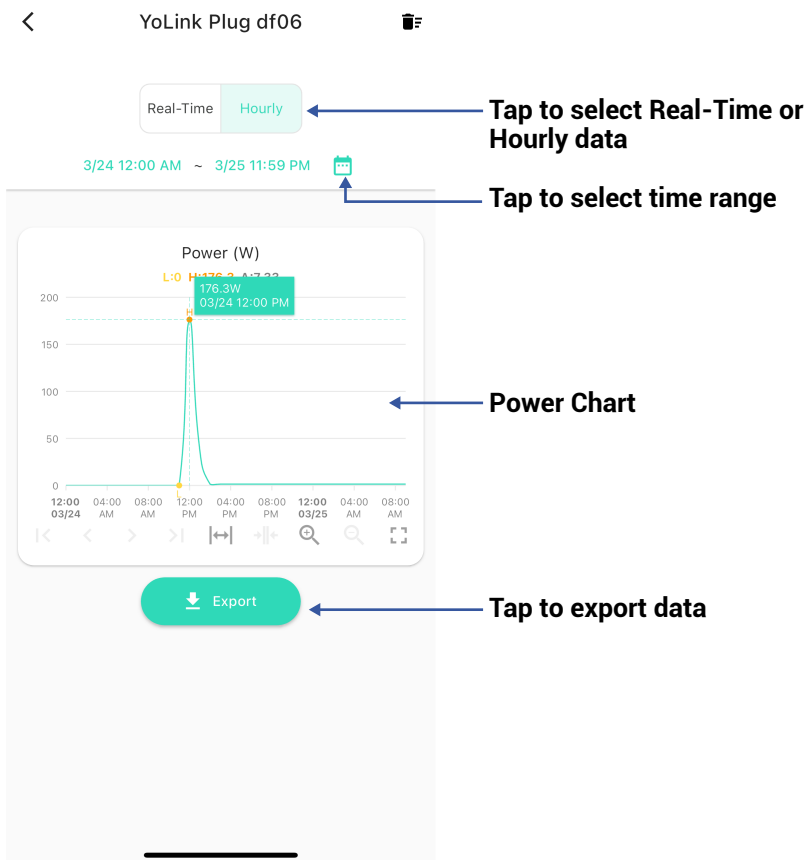

The chart supports pinch-to-zoom in and out with two fingers.



App Functions: Cycle Schedule

Cycle Schedule ✓

Cycle Schedule ☒

On Duration 2 minutes >

Off Duration 5 minutes >

Time

Start Time End Time

8 9 10 : 0 AM 8 9 10 : 8 AM

11 1 12 2 PM 11 9 12 10 PM

Total Duration: 8 minutes
Final Action: On 1 minute

Repeat Weekly

Sun Mon Tue Wed Thu Fri Sat

Execute Preview

10:00 AM On 2 minutes

10:02 AM

Tap to enable or disable the cycle schedule

Tap to set the On Duration

Tap to set the Off Duration

Tap to choose the Start and End Time

Tap to select repeat days (weekly or monthly)




Only one cycle schedule can be set at a time.

The schedule runs on the device (no internet connection required).



App Functions: Schedule

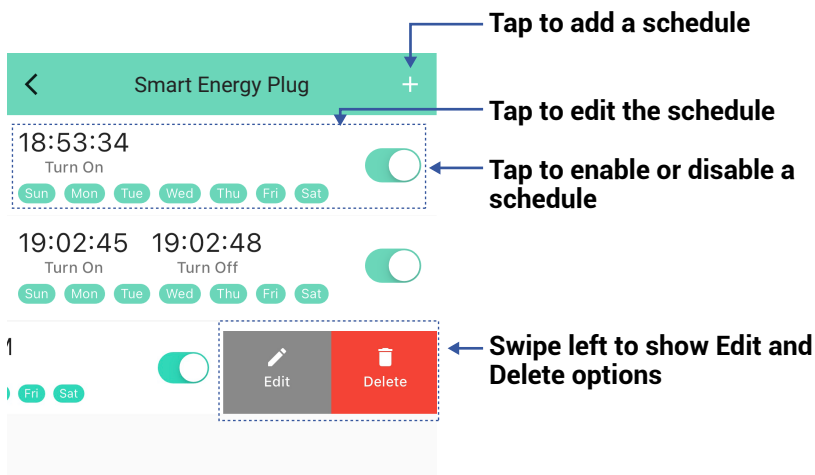

You can have a maximum 6 schedules at one time.

The schedule runs on the device (no internet connection required).

You can add more schedules in Automation settings. Automation settings are saved in the cloud.



App Functions: Timer




Turn On After Plug

Slide to enable/disable



Set the duration

When enabled, the Plug will turn on after this timer duration has elapsed



Turn Off After Plug

Slide to enable/disable



Set the duration

When enabled, the Plug will turn off after this timer duration has elapsed

The timer starts when the settings are saved (by tapping the checkmark at the upper right of the screen).

You can add more timers in Automation settings. Automation settings are saved in the cloud.



The timer will run only once. You can set a new timer after the timer has already run once or after you cancel it.

The timer runs on the device (no internet connection required).



App Functions: Smart - Scene

The screenshot shows the 'Scene' settings interface. At the top is a green header bar with a back arrow, the title 'Scene', and a checkmark icon. Below this are four rows: 'Name' with a 'Sleep >' link, 'Icon' with a '1 >' icon, 'Favorite' with a heart icon, and 'Group' with a 'Dimmer >' link. At the bottom is a 'Behavior' section containing a list item 'Smart Energy Plug' with a 'Turn on' status. Annotations with arrows point to various elements: the checkmark icon is labeled 'Tap to save the settings'; the 'Sleep >' link is labeled 'Name' with the subtext 'Tap to edit the scene name'; the '1 >' icon is labeled 'Icon' with the subtext 'Tap to select a scene icon'; the heart icon is labeled 'Favorite' with the subtext 'Tap to make it a favorite scene'; the 'Dimmer >' link is labeled 'Assign the scene to a scene group'; the 'Smart Energy Plug' item is labeled 'Delete the behavior' and 'Add behavior' with the subtext 'Tap to add a behavior'; and the list icon at the bottom of the behavior section is labeled 'Tap to sort behaviors'.

Tap to save the settings

Name
Tap to edit the scene name

Icon
Tap to select a scene icon

Favorite
Tap to make it a favorite scene

Assign the scene to a scene group

Delete the behavior

Add behavior
Tap to add a behavior

Tap to sort behaviors



The Scene settings are saved in the cloud.

One Scene group only shows one active scene, for example, in Home scene group, if you execute the Home scene, it will show the Home scene activated, if you execute Away scene next, the Away scene will revert the Home scene's active status to off.



App Functions: Smart - Automation

The Smart Energy Plug can be set up as a condition or action in automation.

The screenshot shows the 'Automation' settings screen. At the top is a teal header with a back arrow, the title 'Automation', and a checkmark icon. Below the header, the 'Name' field is set to 'switch'. The 'When' section shows a clock icon and the text 'When 12:00 AM Every Tue,Wed,Thu'. The 'Then' section has a 'Behavior' list with a 'Smart Energy Plug' entry set to 'Turn ON'. Below this is the 'Working Time' section, currently set to 'Always Working'. At the bottom is the 'Advanced Settings' section. Annotations with arrows point to various UI elements: the checkmark icon, the 'Name' field, the 'When' section, the plus icon to add a behavior, the trash icon to delete a behavior, the list icon to sort behaviors, the 'Always Working' option, and the 'Advanced Settings' section.

- Tap to save the settings**
- Edit the name of the automation**
- Tap to set a schedule for the automation**
- Add behavior**
Tap to add a behavior
- Delete the behavior**
- Tap to sort behaviors**
- Always Working**
Tap to set when the automation can be activated
- Advanced Settings**
Tap to edit advanced automation and logging settings

The Automation settings are saved in the cloud.

You can edit the Advanced Settings, including save the log, retry if action fails, notify if action fails, etc.



App Functions: Alarm Strategy Screen

You can set up notifications in Alarm Strategy settings, make sure you have enabled App, Email, SMS notification from the app->Menu->Settings->Account Settings->Advanced Settings, and verified your email address and added your phone number in the app.

The screenshot shows the 'Alarm Strategy' settings screen. The header is green with a back arrow, a question mark icon, and the title 'Alarm Strategy'. Below the header, there are several sections: 'Name' with a value of 'Always' and a chevron; 'Related Devices' with a value of '1' and a chevron; 'Enable Device Alarm' with a toggle switch that is turned on; 'Do Not Disturb' with a toggle switch that is turned off; 'Send App Notification' with a value of 'Admin' and a dropdown arrow; 'Send Email' with a value of 'None' and a dropdown arrow; 'Send SMS' with a value of 'None' and a dropdown arrow; and 'Trigger Action' with a value of 'None' and a chevron. At the bottom is a green 'Save' button. Annotations with arrows point to the question mark icon, the 'Always' value, the '1' value, the 'Enable Device Alarm' toggle, and the 'Do Not Disturb' toggle.

Strategy Name
Tap to edit the name

Related Devices
Tap to add more devices (that can alert) to this strategy, a device can be related to only one strategy

Tap to enable or disable the strategy

Tap to set up DND (Do Not Disturb)



App Functions: Alarm Strategy Screen, Continued

The screenshot shows the 'Alarm Strategy' screen with a teal header. The screen contains several sections: 'Name' with a value of 'Always' and a chevron; 'Related Devices' with a value of '1' and a chevron; 'Enable Device Alarm' with a toggle switch turned on; 'Do Not Disturb' with a toggle switch turned off; 'Send App Notification' with a dropdown menu set to 'Admin'; 'Notification Settings ...' with a description 'Will send App Notification to the administrator of this home when device alerts'; 'Send Email' with a dropdown menu set to 'None'; 'Send SMS' with a dropdown menu set to 'None'; and 'Trigger Action' with a dropdown menu set to 'None'. A large teal 'Save' button is at the bottom. Blue arrows point from text boxes on the right to specific elements: 'Send App Notification' points to the 'Send App Notification' section; 'Notification Settings (iOS only)' points to the 'Notification Settings ...' section; 'Send Email' points to the 'Send Email' section; 'Send SMS' points to the 'Send SMS' section; and 'Trigger Action' points to the 'Trigger Action' section.

Send App Notification

Tap to select Admin to enable App push, select All, if desired for all members

Notification Settings (iOS only)

Tap to change notification tone, if desired

Send Email

Tap to select Admin to enable email notification, select All, if desired to send to all members

Send SMS

Tap to select Admin to enable limited text messages, select All (subscribe required-starter or standard plan), if desired to send to all members

Trigger Action

Tap to choose trigger actions (YoLink sirens, YoLink SpeakerHubs, scene)

Control D2D

YoLink Control-D2D (device-to-device) pairing is a feature unique to YoLink products. One device can be paired to one (or more) devices. When two or more devices are paired, a link is created, “locking-in” the behavior, so that the device(s) will carry out their paired behavior when required, regardless of a connection to the internet or cloud, and even without AC power (in the case of battery-powered or battery backed-up devices). For example, a Door Sensor can be paired to a Siren Alarm, so that when the door is opened, the siren is activated.

Several important points:

- The use of Control-D2D is entirely optional. It is more common to use the app’s automation and scene settings to create desired behaviors, such as motion sensors turning on the lights automatically. Your application may require functionality during the loss of internet/WiFi, in which case Control-D2D pairing may be preferred.
- A device that controls another device is referred to as a Controller. The device that is controlled is referred to as a Responder.

R Control D2D, Continued

- While online, any paired behaviors as well as automation and scene settings (desired plug behaviors set in advance by you, such as the motion sensor/plug example) will both be carried out. Paired behaviors and app settings can coexist, but use care to not create conflicting actions between the two, as the device may not operate as desired.
- A device can have up to 128 pairings.
- During D2D pairing, both the controller and the responder must be in the correct operational state corresponding to their intended behavior. For example, if the controller (door sensor) is meant to turn on a plug when the door opens, the door sensor should be in the open state and the plug should be on during pairing.


The following instructions use pairing your Door Sensor with a Smart Energy Plug as an example, when door is open, turn on the plug.

1. To configure your Door Sensor as a controller, open the door, press and hold the SET button for 5-10 seconds until the LED quickly blinks green, then, release the button.



Control D2D, Continued

2. To configure a Smart Energy Plug as the responder, turn on the plug by pressing the POWER button or via YoLink app. Press and hold the POWER button for 5-10 seconds until the LED quickly blinks green, then, release the button.

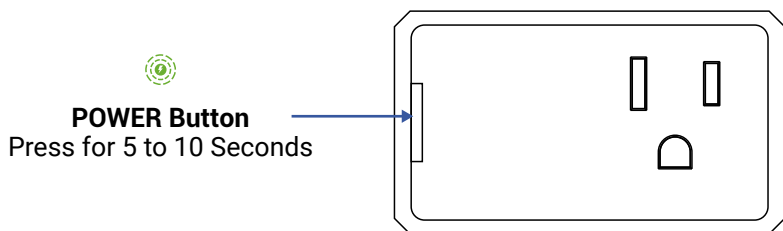

3. Upon pairing, the LED will stop blinking (this may happen after only blinking two or three times).

When the door sensor is opened, the plug will turn on. The plug will remain on status until turned off via the app or press the POWER button.

Unpair your Smart Energy Plug:

1. On the Door Sensor, press the hold the SET button for 10 to 15 seconds, until the LED quickly blinks red, then release the button.

2. On the Plug, press and hold the POWER button for 10 to 15 seconds, until the LED quickly blinks red, then release the button.

R Control D2D, Continued



The LED will flash green prior to the 10 second mark, going into pairing mode, but keep pressing until the LED flashes red. The Controller's pairing is now removed. This door sensor will no longer control the plug.

S Using the App & 3rd-Party Services

The Smart Energy Plug works with several voice assistants, including Alexa and Google, and it works with other automation platforms such as IFTTT and Home Assistant.

To set up 3rd-party integrations (Alexa, Google and IFTTT), in the app, go to Settings, Third-Party Services, and follow the instructions.

Refer to the Home Assistant website and the YoLink integration page for instructions.

<https://www.home-assistant.io/integrations/yolink/>



Factory Reset

Factory reset will erase device settings and restore it to factory default settings. Doing a factory reset will not remove the device from your account and it will not harm the device, or lose any data or require you to redo your automations, etc.

Instructions:

Hold the POWER button down for 20-30 seconds, until the LED blinks red and green alternately. Then, release the button. (Holding the button down longer than 30 seconds will abort the factory reset operation)

Factory reset will be complete when the LED stops blinking.




Only deleting a device from the app will remove it from your account. Factory reset will not delete the device from the app.



Firmware Update

Your YoLink products are constantly being improved, with new features added. It is periodically necessary to make changes to your device's firmware. For optimal performance of your system, and to give you access to all available features for your devices, these firmware updates should be installed when they become available.

In the Detail screen of each device, at the bottom, you will see the Firmware section, as shown in the image below. A firmware update is available for your device if it says "#### ready now"

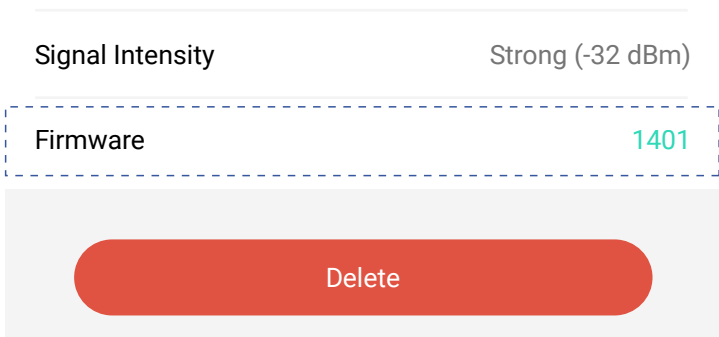

Tap in this area to start the update.

The device will update automatically, indicating progress by percentage-complete. You may use your device during the update, as the update is performed "in the background". The LED will slowly blink green during the update, and the update may continue for several minutes beyond the LED turning off.



Specifications

Input: 120V AC, 60Hz

Output: 15A MAX (Resistive)

Dimensions, Imperial
(L x W x D): 2.75 x 2.04 x 1.50
inches


Dimensions, Metric
(L x W x D): 70 x 52 x 38 mm

Environment: Working Temperature:
-4°F - 113°F
(-20°C-45°C)


Working Humidity:
≤ 90% non-condensing




Specifications, Continued

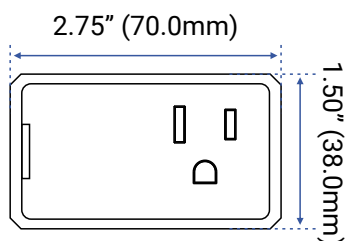

FRONT

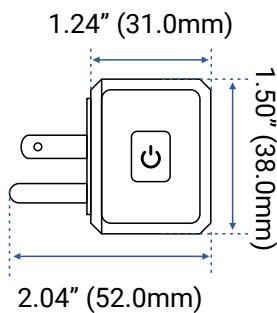

SIDE

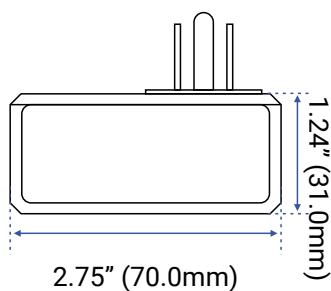

TOP

Warnings

- Please install, operate and maintain the Smart Energy Plug only as outlined in this manual. Improper use may damage the unit and/or void the warranty.
- Refer to Specifications for the device environmental limitations.
- Do not install or use this device where it will be subjected to high temperatures and/or open flame.
- Subjecting this device to outdoor environment conditions such as direct sunlight, extreme hot, cold temperatures or extreme humid, rain, water and/or condensation can damage the device and will void the warranty.
- Install or use this device only in clean environments. Dusty or dirty environments may prevent the proper operation of this device, and will void the warranty. If your Smart Energy Plug does get dirty, please clean it by wiping it down with a clean, dry cloth.
- Do not use strong chemicals or detergents, which may discolor or damage the exterior and/or damage the electronics, voiding the warranty.



Warnings, Continued

- Do not install or use this device where it will be subjected to physical impacts and/or strong vibration. Physical damage is not covered by the warranty.
- Please contact Customer Service before attempting to repair disassemble or modify the device, any of which can void the warranty and permanently damage the device.

1 Year Limited Electrical Warranty

YoSmart Inc. warrants to the original user (“customer”) of this product that it will be free from defects in materials and workmanship, under normal use, for 1 year from the date of purchase. This warranty does not apply to devices that have been improperly installed, modified, put to a use other than designed, or subjected to acts of God (such as floods, lightning, earthquakes, etc.). This warranty does not cover neglected or abused products. This warranty is limited to the repair or replacement of the device, only, at YoSmart's sole discretion. YoSmart will NOT be liable for the cost of installing, removing, nor reinstalling this product, nor direct, indirect, or consequential damages to persons or property resulting from the use of this product. This warranty only covers the cost of replacement parts or replacement units, it does not cover shipping & handling fees. The customer must provide proof of purchase, in the form of the original purchase invoice or order number. The purchase must have been made from an authorized seller.

To implement this warranty please contact us by one of the methods listed on the Contact Us page of this user guide.

FCC Statement

This device complies with part 15 of the FCC Rules. Operation is subject to the following two conditions: (1) this device may not cause harmful interference, and (2) this device must accept any interference received, including interference that may cause undesired operation.

Any changes or modifications not expressly approved by the party responsible for compliance could void the user's authority to operate the equipment.

NOTE: This equipment has been tested and found to comply with the limits for a Class B digital device, pursuant to Part 15 of the FCC Rules. These limits are designed to provide reasonable protection against harmful interference in a residential installation. This equipment generates, uses and can radiate radio frequency energy and, if not installed and used in accordance with the instructions, may cause harmful interference to radio communications. However, there is no guarantee that interference will not occur in a particular installation. If this equipment does cause harmful interference to radio or television reception, which can be determined by turning the equipment off and on, the user is encouraged to try to correct the interference by one or more of the following measures:

- Reorient or relocate the receiving antenna.
- Increase the separation between the equipment and receiver.



FCC Statement, Continued

- Connect the equipment into an outlet on a circuit different from that to which the receiver is connected.
- Consult the dealer or an experienced radio/TV technician for help.

To maintain compliance with FCC's RF Exposure guidelines, This equipment should be installed and operated with minimum distance between 20cm the radiator your body: Use only the supplied antenna.

PRODUCT NAME:
SMART ENERGY PLUG

PARTY:
YOSMART, INC.

TELEPHONE:
831-292-4831

MODEL NUMBER:
YS6614-UC

ADDRESS:
25172 ARCTIC OCEAN DRIVE, SUITE 106 LAKE
FOREST, CA 92630 USA

EMAIL:
SERVICE@YOSMART.COM

Z Contact Us

We are here for you, if you ever need any assistance installing, setting up or using a YoLink app or product!

Need help? For fastest service, please email us 24/7 at service@yosmart.com

Or call us at **831-292-4831** (US phone support hours: **Monday - Friday, 9AM to 5PM** Pacific)

You can also find additional support and ways to contact us at:

www.yosmart.com/support-and-service

Or scan the QR code:



Support Home Page

Finally, if you have any feedback or suggestions for us, please email us at feedback@yosmart.com

Thank you for trusting YoLink!

YoLink Customer Support

YOLINK

25172 Arctic Ocean Drive, Suite 106 Lake Forest, CA 92630
© 2026 YOSMART INC. CALIFORNIA, USA