




## Water Leak Sensor 3

YS7904-UC

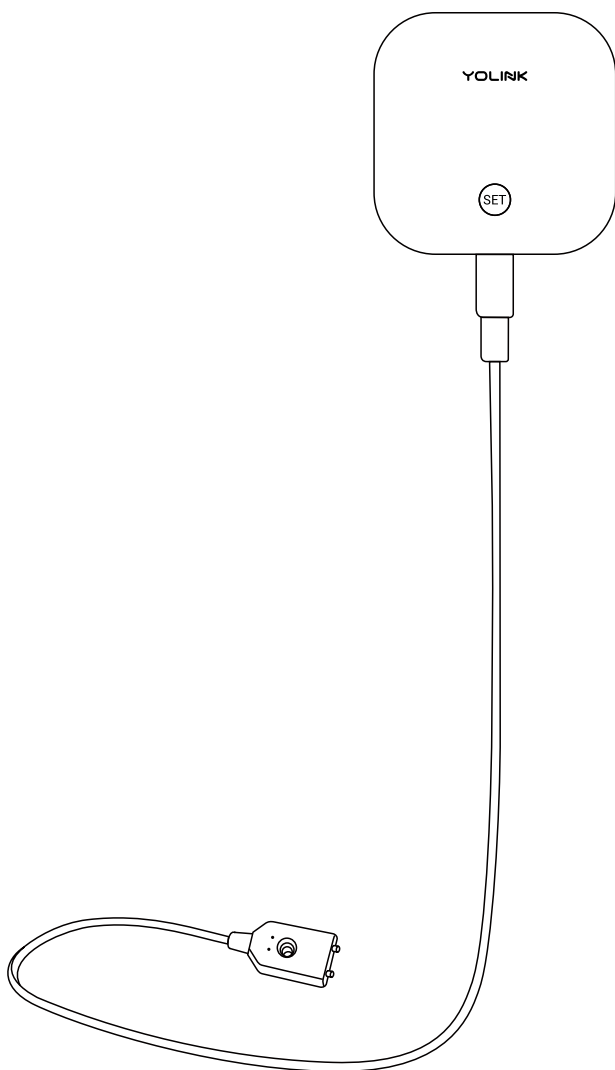

Installation & User Guide

Revision Jun. 11, 2026

# Contents

|                             |    |
|-----------------------------|----|
| A . Welcome                 | 01 |
| B . Before You Begin        | 02 |
| C . In the Box              | 04 |
| D . Get to Know Your Sensor | 05 |
| E . Power Up                | 07 |

---

|                                          |    |
|------------------------------------------|----|
| F . Install the App                      | 08 |
| G . Add Your Sensor to the App           | 09 |
| H . Installation                         | 11 |
| I . App Functions: Device Screen         | 16 |
| J . App Functions: Device Details Screen | 17 |

---

|                                          |    |
|------------------------------------------|----|
| K . App Functions: Alert Settings Screen | 19 |
| L . App Functions: Alarm Strategy Screen | 20 |
| M . App Functions: Automation            | 22 |
| N . Control D2D                          | 23 |
| O . 3rd Party Services                   | 26 |

---

|                         |    |
|-------------------------|----|
| P . Battery Replacement | 28 |
| Q . Factory Reset       | 30 |
| R . Firmware Updates    | 31 |
| S . Specifications      | 33 |
| T . Troubleshooting     | 35 |

---

|                   |    |
|-------------------|----|
| U . Warnings      | 36 |
| V . Warranty      | 37 |
| W . FCC Statement | 38 |
| X . Contact Us    | 40 |



## Welcome

Thank you for purchasing YoLink products! We appreciate you trusting YoLink for your smart home & automation needs. Your 100% satisfaction is our goal. If you experience any problems with your installation, with our products or if you have any questions that this manual does not answer, please contact us right away. See the Contact Us section for more info.

Thank you!

YoLink Customer Support

---

## User Guide Conventions

The following icons are used in this guide to convey specific types of information:



Very important information  
(can save you time!)



Good to know info but may not  
apply to you

## B Before You Begin

Visit our Water Leak Sensor 3 support page on our website, for the latest installation guides, additional resources, information and videos by visiting:

<https://www.yosmart.com/support/YS7904-UC>

Or by scanning the QR code:



Download the most current version of the user guide by scanning the QR code:



## B Before You Begin, Continued




Your Water Leak Sensor 3 connects to the internet via a YoLink hub, and it does not connect directly to your WiFi or local network. In order for remote access to the device from the app, and for full functionality, a hub is required. This guide assumes the YoLink app has been installed on your smartphone, and a YoLink hub is installed and online (or your location, apartment, condo, etcetera, is already served by a YoLink wireless network).




## In the Box




Water Leak Sensor 3

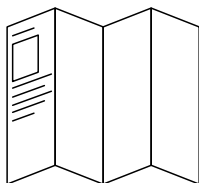


Quick Start Guide

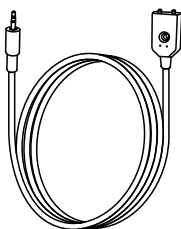

Float Switch

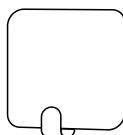

Mounting Hook




2 x AAA Batteries (Installed)

The following items may be required:




Double-Sided Mounting Tape

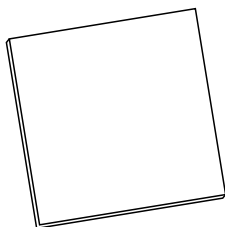

Rubbing Alcohol Pads



D

## Get to Know Your Water Leak Sensor 3

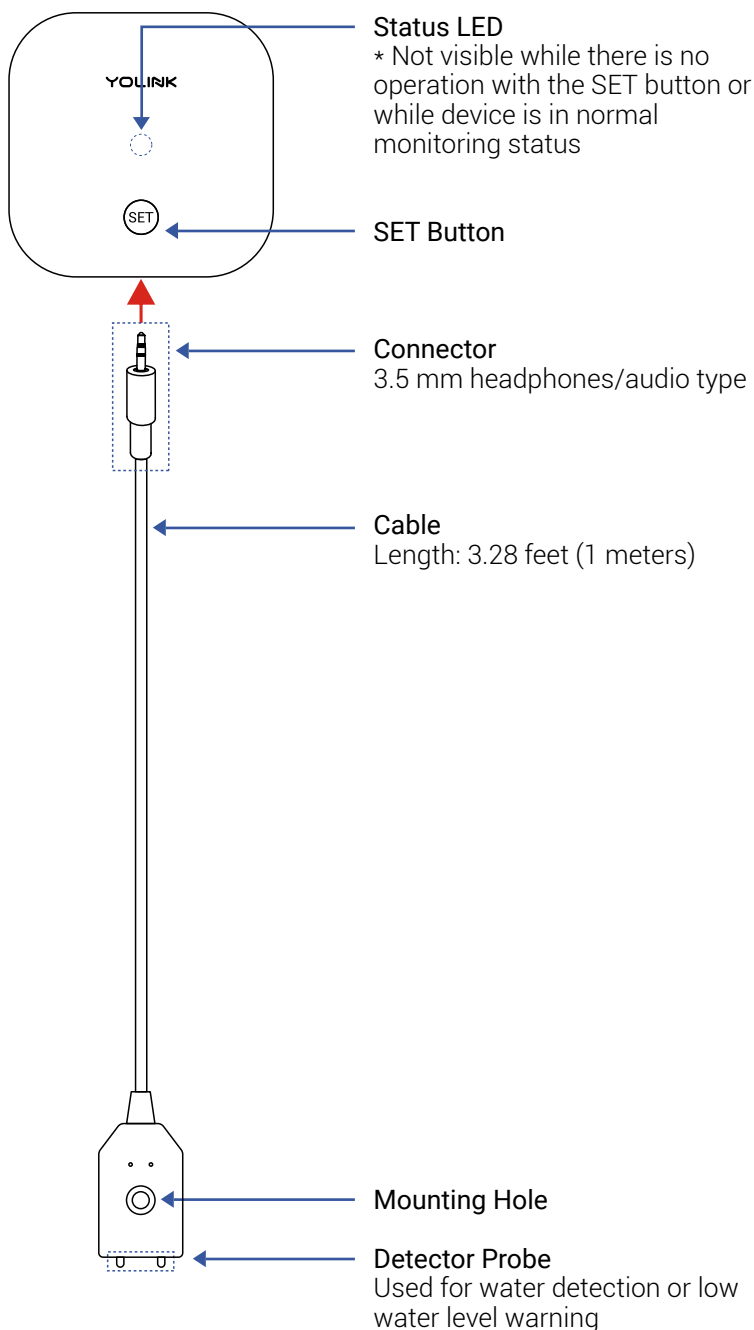

# D

## Get to Know Your Water Leak Sensor 3, Continued

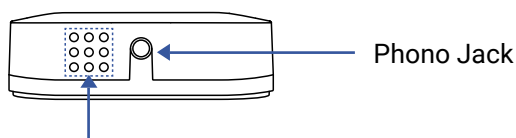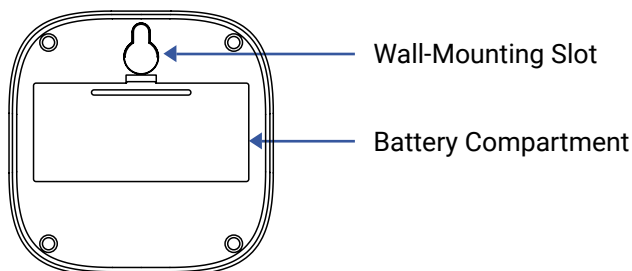

### Sounder

- **One Beep**

Device Power-Up/Button Pressed

- **Two Beeps**

Device Alert

(Two beeps every 1 second for the first minute.

Two beeps every 5 seconds for the next 10 minutes.

Sustaining two beeps once 10 minutes after 10 minutes.)

## LED Behaviors



### Blinking Red Once

Water Alert  
Water Detected or Water  
Not Detected  
(Depending on Mode)



### Blinking Green

Connecting to Cloud



### Fast Blinking Green

Control-D2D Pairing in  
Progress



### Slow Blinking Green

Updating



### Fast Blinking Red

Control-D2D Unpairing  
in Progress



### Blinking Red And Green Alternately

Restoring to Factory  
Defaults



or




### Fast Blinking Red Every 30 Seconds or Fast Blinking Red 5 Times when pressing the SET Button

Batteries are Low,  
Please Replace the  
Batteries

## E Power Up

Before you can use your Water Leak Sensor 3, it must be turned on. (Batteries have been pre-installed.) Press the SET button briefly, until the LED flashes red then green (which indicates it has turned on and connected to a hub and the cloud).

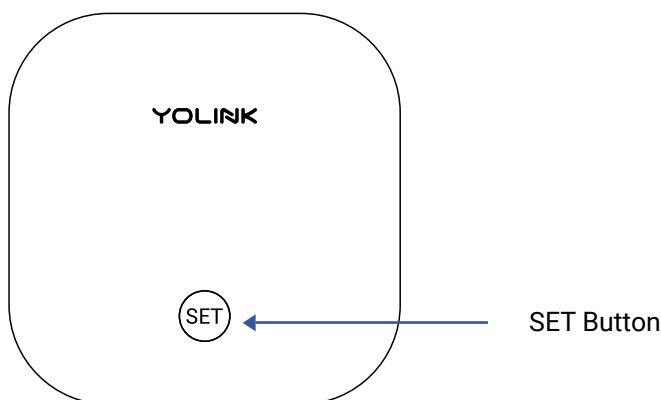



## Install the App

If you are new to YoLink, please install the app on your phone or tablet, if you have not already. Otherwise, please proceed to the next section.

Scan the appropriate QR code below or find the “YoLink app” on the appropriate app store.



Apple phone/tablet  
iOS 9.0 or higher



Android phone/tablet  
6.0 or higher

Open the app and tap **Sign up for an account**. You will be required to provide a username and a password. Follow the instructions, to set up a new account. Allow notifications, when prompted.

You will immediately receive a welcome email from no-reply@yosmart.com with some helpful information. Please mark the yosmart.com domain as safe, to ensure you receive important messages in the future.


Log in to the app using your new username and password.

The app opens to the **Favorite** screen. This is where your favorite devices and scenes will be shown. You can organize your devices by room, in the **Rooms** screen, later.




## Add Your Water Leak Sensor 3 to the App

1. Tap **Add Device** (if shown) or tap the scanner icon:

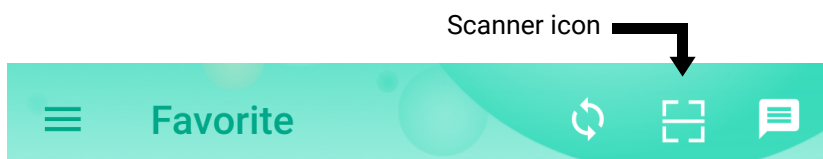

2. Approve access to your phone's camera, if requested. A viewfinder will be shown on the app.

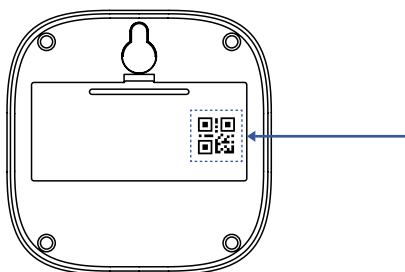


3. Hold the phone over the QR code so that the code appears in the viewfinder. If successful, the **Add Device** screen will be displayed.

G

## Add Your Water Leak Sensor 3 to the App, Continued

4. You can change the device name and assign it to a room later. Tap **Bind device**.

5. If successful, the screen will appear as shown. Tap **Done**.

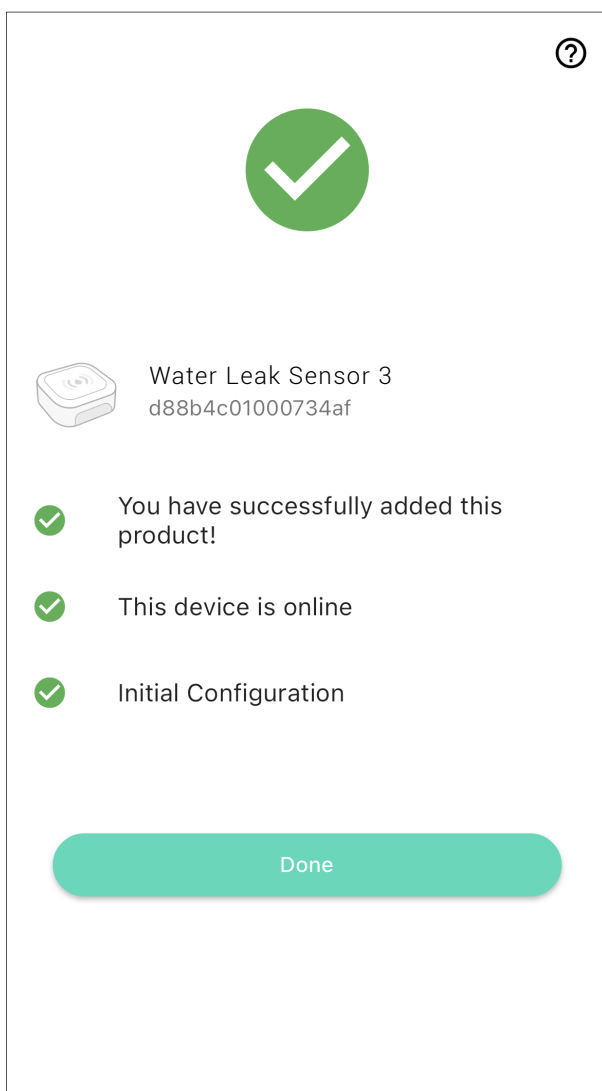



## **Location considerations:**

Before installing your Water Leak Sensor 3, consider the following important factors:

**1.** The Water Leak Sensor 3 is a variant of the Water Leak Sensor 2. The Water Leak Sensor 2 uses a water-sensing cable or “rope” to detect water, while the Water Leak Sensor 3 detects the presence or absence of water by sensing, or not sensing, water on both electrodes of the probe cable. If your application requires water detection along the length of the cable, the Water Leak Sensor 2’s cable should be used. This is readily available from our website store, as well as other online retail sources. Since the Water Leak Sensor 3 is a variant of the Water Leak Sensor 2, you do not need to replace the sensor, only the cable.

**2.** This device is intended for indoor use, only. The sensor body should not be installed where it will normally get wet or be submerged.



## Installation, Continued

**3.** The Water Leak Sensor 3 has an integral sounder alarm. Its use is optional, as it can be enabled or disabled, in the app settings. Please note, using this sounder as your primary means of notification is discouraged, as various factors, such as the distance from where you are to this sensor, the number of doors, walls or floors that may be between the sensor and you, if you are asleep, etcetera, can all reduce the chance you will hear the alarm. If a siren alarm is preferred, please consider one of our siren products and our SpeakerHubs (audio, tone and message-playing, hubs). Also, please note, the use of the sounder does reduce the maximum life of the batteries.

**4.** The Water Leak Sensor 3 is typically mounted on the wall or on a stable vertical surface.

**5.** You can extend the total distance of the cable by adding extension cables, readily available in retail (3.5 mm phono headphones type cables) or by using two conductor cables and 3.5 mm phono cord/plug kits).



### **Application-specific considerations:**

If you are using the Water Leak Sensor 3 for water detection or for water level monitoring, please note the sensor is compatible with standard dry-contact (non-powered) float switches (not included), which is recommended if the water to be used in is hard or not clean. Mineral or residue build-up over time can lead to slow response time from the probe cable. This is not an issue with float switches. Float switches are readily-available via online retail sources. Contact us for additional information if needed.

The Water Leak Sensor 3 has two modes: Water-Exhausted Monitor, which alerts if water is no longer detected (the probe cable will normally be submerged, or a float switch will provide a closed-circuit to the sensor), and Water Leak Monitor (the probe cable is normally dry, or a float switch provides an open circuit to the sensor), and an alert is triggered when water is detected or if the float switch circuit closes. If an alert for the water level dropping is desired, you will select the Water-Exhausted Monitor setting. If you want an alert if the water rises too high, select Water Leak Monitor (to be alerted when water is detected on the probe cable).




### **Determine the sensor location and approximate cable placement:**

- 1.** Connect the cable to the sensor, by plugging the male end of the probe cable into the sensor. If you are using an extension cable, connect it at this time.
- 2.** The applications for the Water Leak Sensor 3 are numerous and this quick start guide can not address all of them in detail. For water leak detection, place the probe cable with the end positioned at the location of an undesirable level of water. For water level monitoring, place the probe cable within the water, above the preferred water level.
- 3.** After the location and placement of the probe cable or float switch has been determined, define the location of the sensor. The mounting hook should be installed at this location. (If you intend to mount the Water Leak Sensor 3 using another method, such as double-sided mounting tape or Velco, do so at this time, per the manufacturer's instructions.)
- 4.** Clean the surface where the mounting hook will be placed, using rubbing alcohol (recommended) or a degreaser that does not leave a residue on the surface. In order for the pre-installed mounting tape to adhere to the surface, the surface must be clean, dry and free of dirt, oils, grease, or other cleaning agent residue.

## H Installation, Continued

5. Remove the plastic backing from the mounting tape on the mounting hook.

6. With the hook facing up, as shown, press it firmly against the mounting surface and maintain pressure for at least 5 seconds.

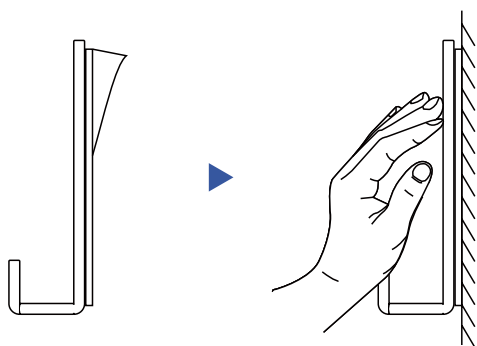

### **Install and test the Water Leak Sensor 3:**


1. Hang the sensor on the mounting hook, using the slot on the back of the sensor. Ensure it is secure, by gently tugging on it.

2. It is important that you test each sensor, to ensure it will work properly when needed! Test the sensor, depending on your application. For leak detection, functionally test the sensor using water. The sounder should activate and the LED should flash red. Dry the probe cable off, or unplug the cable, to remove the water alert and silence the sounder. For water level monitoring, remove the probe from the water, or remove the water from the probe. Allow it a moment to dry and for an alert to be triggered.



## App Functions: Device Screen

In the app, tap on your Water Leak Sensor 3 icon. Your Water Leak Sensor 3 main screen should be similar to the one shown below.

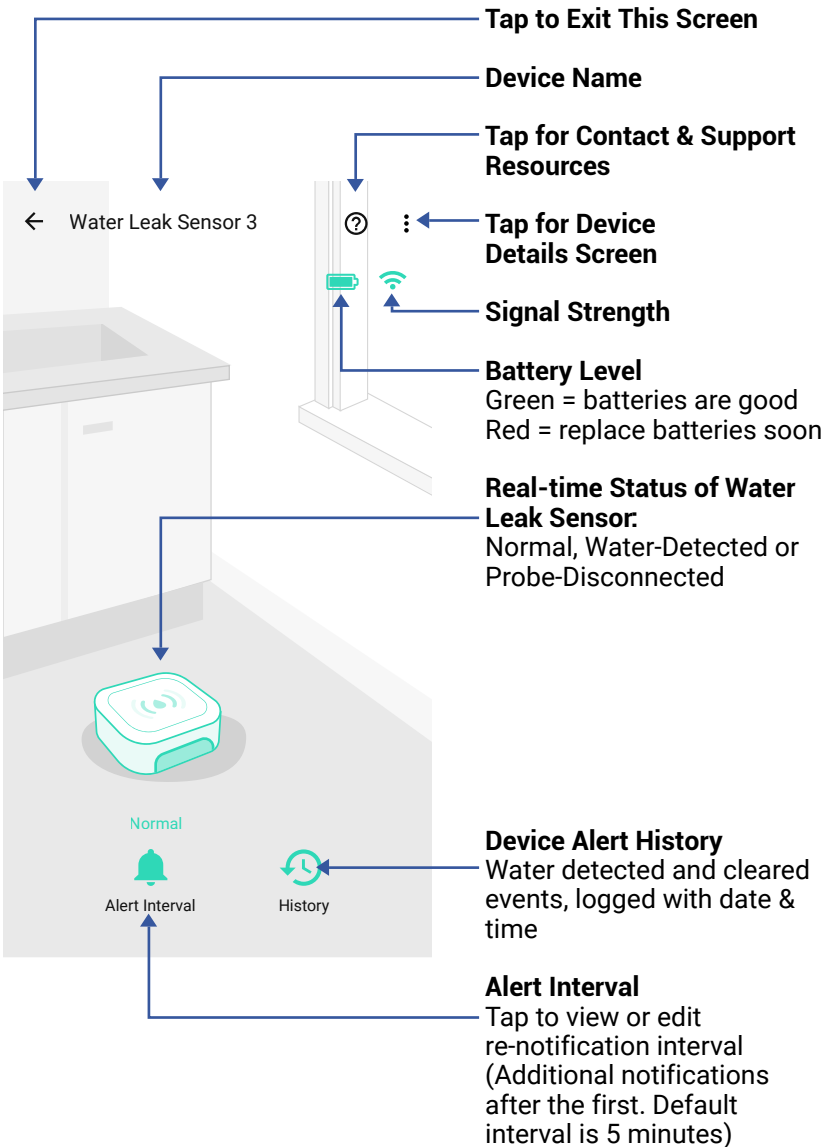



# App Functions: Device Details Screen

Tap the three dots (in the upper right corner) to open the Water Leak Sensor 3 **Details** screen. Your Water Leak Sensor 3 screen should be similar to the one shown below.

**Details** ⓘ

|                  |                                |                                                                                                           |
|------------------|--------------------------------|-----------------------------------------------------------------------------------------------------------|
| Type             | Leak Sensor                    | <b>Device Type</b>                                                                                        |
| Name             | Leak Sensor 2 >                | <b>Device Name</b><br>(Tap to Edit)                                                                       |
| Room             | Office >                       | <b>Room</b><br>(Tap to Edit)                                                                              |
| Favorite         | Will show in favorite screen ⓘ | <b>Favorite</b><br>(Red if Favorite, Tap to Edit)                                                         |
| History          | Get device logs >              | <b>History</b><br>Tap to view device history                                                              |
| Alert            | >                              | <b>Alert</b><br>Tap to edit Alert Settings<br>(Refer to page 19)                                          |
| Device Mode      | Water Leak Monitor >           | <b>Device Mode</b><br>Tap to change device mode<br>(white probe cable support<br>water leak monitor only) |
| Cable Type       | Sensor Cable ▾                 | <b>Device Cable</b><br>Tap to select device cable                                                         |
| State            | Water exhausted                | <b>State</b>                                                                                              |
| Other            |                                |                                                                                                           |
| Model            | YS7904-UC                      |                                                                                                           |
| Device EUI       | d88b4c010003f122               |                                                                                                           |
| SN               | FF97743F02 ⓘ                   |                                                                                                           |
| Temperature      | 82 °F                          |                                                                                                           |
| Signal Intensity | Strong (-19 dBm) >             |                                                                                                           |
| Battery          | ⬢                              |                                                                                                           |
| Firmware         | 0467                           |                                                                                                           |

Delete



# App Functions: Device Details Screen, Continued

←

Details

?

Type

Leak Sensor

Name

Leak Sensor 2 >

Room

Office >

Favorite

Will show in favorite screen

♡

History

Get device logs

>

Alert

>

Device Mode

Water Leak Monitor >

Alarm when water detected

Cable Type

Sensor Cable ▾

State

Water exhausted

Other

Model

YS7904-UC

Device EUI

d88b4c010003f122

SN

FF97743F02  >

Temperature

82 °F

Signal Intensity

Strong (-19 dBm) >

Battery



Firmware

0467

Delete

**Model Number**

**Device EUI**  
Unique Identifier Number

**Device Serial Number**

**Temperature**  
The temperature display is an extra feature and updates only during sensor alerts, regular checks, or when you press the SET button.

**Signal Intensity**  
(From YoLink Hub)


**Battery**

**Firmware Revision**  
(Refer to page 31)

**Remove Device From Current Account**  
Tap to delete the device from your YoLink account



# App Functions: Alert Settings Screen

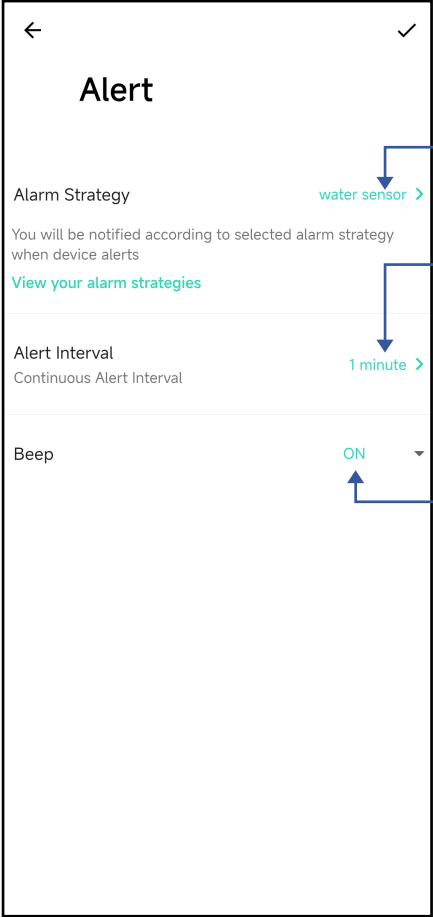

## Alarm Strategy

Tap to edit the sensor's Alarm Strategy

## Alert Interval

Choose how often you want to be reminded after a “leak” alarm. The default is every 5 minutes

## Beep

Tap to enable or disable beep sound



# App Functions: Alarm Strategy Screen

You can set up notifications in Alarm Strategy settings, make sure you have enabled App, Email, SMS notification from the app->Menu->Settings->Account Settings->Advanced Settings, and verified your email address and added your phone number in the app.

The screenshot shows the 'Alarm Strategy' settings screen. The header is green with a back arrow, a question mark icon, and the title 'Alarm Strategy'. Below the header, there are several sections: 'Name' with the value 'Always' and a chevron; 'Related Devices' with the value '1' and a chevron; 'Enable Device Alarm' with a toggle switch that is turned on; 'Do Not Disturb' with a toggle switch that is turned off; 'Send App Notification' with a dropdown menu set to 'Admin'; 'Send Email' with a dropdown menu set to 'None'; 'Send SMS' with a dropdown menu set to 'None'; and 'Trigger Action' with a dropdown menu set to 'None'. At the bottom, there is a green 'Save' button. Annotations with arrows point to the question mark icon, the 'Always' text, the '1' text, the 'Enable Device Alarm' toggle, and the 'Do Not Disturb' toggle.

**Strategy Name**  
Tap to edit the name

**Related Devices**  
Tap to add more devices (that can alert) to this strategy, a device can be related to only one strategy

**Tap to Enable or Disable The Strategy**

**Tap to Set Up Dnd (Do Not Disturb)**



# App Functions: Alarm Strategy Screen, Continued

The screenshot shows the 'Alarm Strategy' screen with a teal header. Below the header, there are several settings sections. The 'Name' section has a value of 'Always' with a right arrow. The 'Related Devices' section has a value of '1' with a right arrow. The 'Enable Device Alarm' section has a toggle switch that is turned on. The 'Do Not Disturb' section has a toggle switch that is turned off. The 'Send App Notification' section has a dropdown menu set to 'Admin'. Below this is a link for 'Notification Settings'. The 'Send Email' section has a dropdown menu set to 'None'. Below this is a note 'Will not send Email when device alerts'. The 'Send SMS' section has a dropdown menu set to 'None'. Below this is a note 'Will not send SMS when device alerts'. The 'Trigger Action' section has a dropdown menu set to 'None'. Below this is a note 'Have not set any action'. At the bottom is a large teal 'Save' button. Blue arrows point from the text descriptions on the right to the corresponding settings on the screen.

## Send App Notification

Tap to select Admin to enable App push, select All, if desired for all members

## Notification Settings (iOS only)

Tap to change notification tone, if desired

## Send Email

Tap to select Admin to enable email notification, select All, if desired to send to all members

## Send SMS

Tap to select Admin to enable limited text messages, select All (subscribe required-starter or standard plan), if desired to send to all members

## Trigger Action

Tap to choose trigger actions (YoLink sirens, YoLink SpeakerHubs, scene)



## App Functions: Automation

The Water Leak Sensor 3 can be set up as a condition in an automation. For example, you can automatically close the vlave if the sensor detects water leak. This example is shown below. The automation also sends a custom notification (via app push notification, email SMS, or SpeakerHub broadcast) reminding you the sensor detects leak.

←

Automation

✓

Name

Auto shut off

14/64

When

Water Leak Sensor 3

Water Leak Alert

Then

Behavior

↑

+

✖

5001 X3 Valve

Close

Working Time

Always Working

Advanced Settings

▼


22

## N Control D2D

YoLink Control-D2D is our unique device to device control technology. Using YoLink Control-D2D, YoLink devices can be controlled without the Hub or an internet connection. (Use of YoLink Control-D2D is optional; you can use the Automation feature in the app OR use YoLink Control, but YoLink Control-D2D offers the benefit of operation without the Hub or internet connection.) One device controls another, directly. A device that sends out commands is called the controller. A device that receives the commands is called the responder. Examples of a controller are a Water Leak Sensor, while examples of a responder are a Siren or the Smart Motorized Valve.

The following instructions uses pairing your Water Leak Sensor 3 with a YoLink Valve Controller as example.

1. To configure your Water Leak Sensor 3 as a controller, Press and hold the SET button for 5-10 seconds until the LED quickly blinks green, then, release the button.

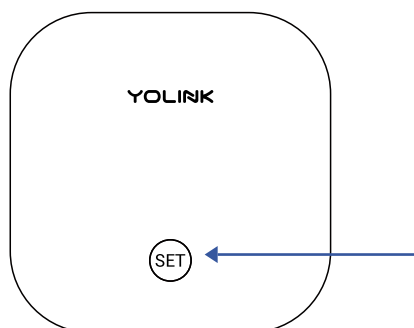


a. SET Button  
(5-10 seconds)


## N Control D2D, Continued

**2.** To configure a Valve Controller as the responder, close the valve using SET button or via YoLink app (verify the valve is shown to be Closed on the app). Press and hold the SET button for 5-10 seconds until the LED quickly blinks green, then, release the button.

b. Press to close the valve

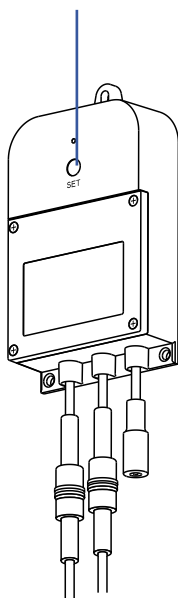

c. SET Button (5-10 seconds)

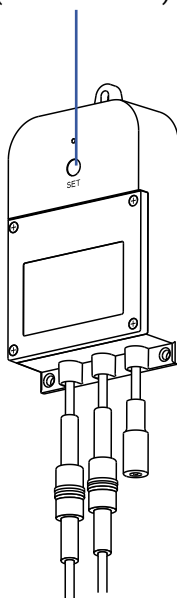

**3.** Upon pairing, the LED will stop blinking (this may happen after only blinking two or three times).

When the Water Leak Sensor 3 detects water, the Valve Controller will now immediately close the valve. The valve will remain closed until opened via the app or using the SET button; the restoration of the Water Leak Sensor to normal (no water detected) does not open the valve.



## Control D2D, Continued

More advanced sequences, controlling multiple outputs (e.g. close valve and activate siren) are available via the YoLink app

### **Unpair your Water Leak Sensor 3:**

1. On the Water Leak Sensor 3, press and hold the SET button for 10 to 15 seconds, until the LED quickly blinks red, then release the button.
2. On the Valve Controller, close the valve, press and hold the POWER button for 10 to 15 seconds, until the LED quickly blinks red, then release the button.



The LED will flash green prior to the 10 second mark, going into pairing mode, but keep pressing until the LED flashes red. The Controller's pairing is now removed. This water leak sensor 3 will no longer control the valve controller.



## 3rd Party Services

You can use the Water Leak Sensor 3 to trigger Alexa routines. You must have the Alexa app installed, the YoLink skill installed and connected to your YoLink app account.

1. Create a new routine in the Alexa app.
2. In the **When This Happens** section, select **Smart Home**.
3. Find your water leak sensor and select it.
4. Alexa integrates the Water Leak Sensor 3 as a contact sensor, so the available sensor states are "Closed" or "Open" like a set of electrical contacts on a relay, button or switch. The default state is **Open**. Leave on or change to **Closed**, then tap **Next**.
5. For Add Action, tap the **+** button, then **Smart Home** and select your device (siren, valve controller, etc.), tap **Next**.
6. For a valve controller, for example, select **On**, then tap **Next**.
7. Review your settings, then tap **Save**.



Always functionally test your new automations and routines!



## 3rd Party Services, Continued

You can use the Water Leak Sensor 3 to trigger IFTTT applets. You must have the IFTTT app installed, the YoLink service installed and connected to your YoLink app account.



Please note, IFTTT.com is a paid service, typically offering a limited number of free applets.


1. Create a new applet in the IFTTT app.
2. For the If This section, search and select the YoLink service.
3. Tap **Leak Sensor**.
4. In the Device drop-down box, select your Water Leak Sensor 3, tap **Done**.
5. Tap **Create Trigger**.
6. Tap **Continue** to save your settings.
7. Review your applet settings, if they are correct tap **Finish**.




Always functionally test your new automations and routines!

## P Battery Replacement

- 1 Remove the battery cover by gently prying with your fingertip or tool at the edge as shown

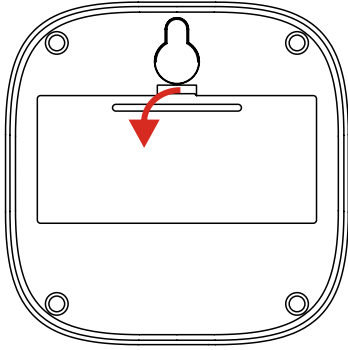


- 2 Remove the old batteries

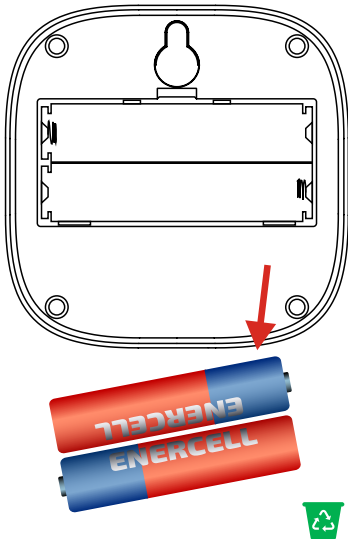


## P Battery Replacement, Continued

- 3 Install two new alkaline non-rechargeable AAA batteries, and then close the battery cover

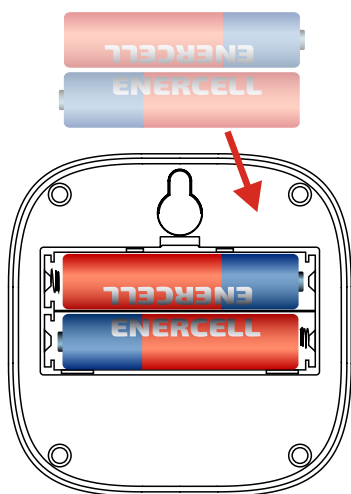


- 4 Close the battery cover

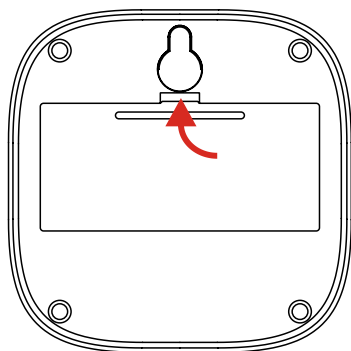

## Q Factory Reset

When directed by customer support, and/or as an attempt to resolve a problem with your Water Leak Sensor 3, it may be necessary to perform a factory reset. Factory resetting your Water Leak Sensor 3 returns it to the factory default programming and settings. This is a simple process:

Hold the SET Button for 20 to 30 seconds, until the LED blinks red and green alternately, then release the button.

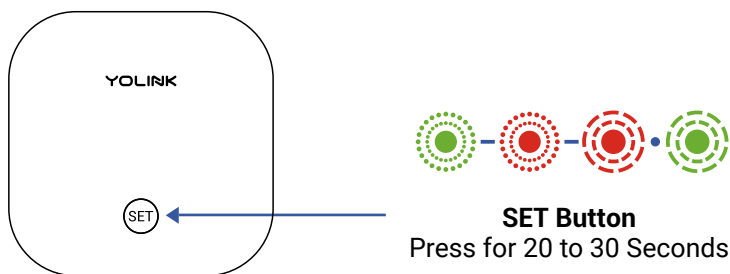

Factory reset is complete when the LED stops flashing.

## R Firmware Updates

Your YoLink products are frequently being improved, with new features and functions added over time. It is periodically necessary to make changes to your device firmware. For optimal performance of your device, and to give you access to any improvements made to your device model, these firmware updates should be installed (added to your device) when they become available.

In the Detail screen of your device, you will see the Firmware section, as shown in the image below. A firmware update is available if it says “#### ready now” (where #### is a four-digit combination of letters and/or numbers).

---

Signal Intensity

Strong (-32 dBm)

---

Firmware

0703

Delete

## R Firmware Updates, Continued

Firmware is like settings in your Water Leak Sensor 3 that define the overall operations of the Water Leak Sensor 3. These settings are added to the Water Leak Sensor 3 when it is manufactured, and they are periodically updated, as needed, to add improvements, new features, new integrations, etc, to your Water Leak Sensor 3, as they become available.

Tap in the Firmware area to start the update. The Water Leak Sensor 3 will update automatically, indicating the progress by percentage-complete. You may use your Water Leak Sensor 3 during the update process, as the update is performed “in the background”. You may see the LED slowly blink green during the update, and the update may continue for several minutes beyond the LED turning off.



If you experience incomplete firmware updates, please update only one device at a time. If this does not resolve the problem, please contact our customer support department!



## Specifications

|                                   |                                                                                        |
|-----------------------------------|----------------------------------------------------------------------------------------|
| Controller:                       | Semtech® LoRa® RF Module YL09 microcontroller with 32-Bit RISC processor               |
| Voltage:                          | 3V DC (2-Alkaline Non-Rechargeable AAA Batteries)                                      |
| Dimensions, Imperial (L x W x D): | 2.44 x 2.44 x 0.86 inches                                                              |
| Dimensions, Metric (L x W x D):   | 62 × 62 × 22 mm                                                                        |
| Alert Sounder Volume:             | 95-105 dB (@10cm)                                                                      |
| Sensor Cable:                     | Connector:<br>3.5 mm headphones/ audio type<br><br>Cable Whip: 3.28 feet (1 meters)(L) |
| IP Rating:                        | IP50                                                                                   |


## S Specifications, Continued

Environment:


Working Temperature:  
32°F-122°F (0°C-50°C)

Working Humidity:  
≤ 95%RH  
non-condensing


---

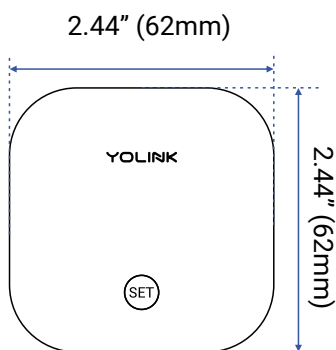

FRONT

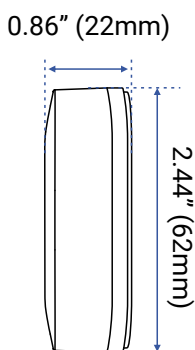

SIDE

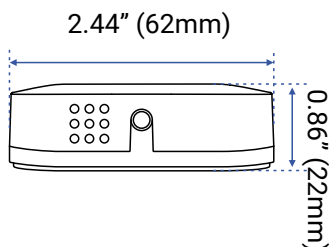

TOP

## T Troubleshooting

### **Problem:**

Sensor is Offline

### **Possible Solution:**

a) Sensor has not been turned on. Press the Set button to turn on the sensor.

b) Batteries are dead. Replace the batteries. See page 28 for instructions.

If this does not resolve the issue, please contact our customer support department (see the contact info on the last page of this guide).



We recommend checking for and performing any available firmware updates before contacting customer support. See Firmware Updates, page 31.



## Warnings

For optimal performance and lifetime of your Water Leak Sensor 3, please adhere to the following warnings:

- When replacing the batteries, only use new alkaline or lithium non-rechargeable batteries.
- Do not use zinc blend batteries.
- Do not mix old and new batteries.
- Adhere to the battery manufacturer's safety and disposal or recycling instructions.
- Please contact Customer Support before attempting to repair, disassemble, or modify your Water Leak Sensor 3, any of which can permanently damage your Water Leak Sensor 3 and void the warranty.

### **2 Year Limited Electrical Warranty**

YoSmart Inc. warrants to the original user (“customer”) of this product that it will be free from defects in materials and workmanship, under normal use, for 2 years from the date of purchase. This warranty does not apply to devices that have been improperly installed, modified, put to a use other than designed, or subjected to acts of God (such as floods, lightning, earthquakes, etc.). This warranty does not cover neglected or abused products. This warranty is limited to the repair or replacement of the device, only, at YoSmart's sole discretion. YoSmart will NOT be liable for the cost of installing, removing, nor reinstalling this product, nor direct, indirect, or consequential damages to persons or property resulting from the use of this product. This warranty only covers the cost of replacement parts or replacement units, it does not cover shipping & handling fees. The customer must provide proof of purchase, in the form of the original purchase invoice or order number. The purchase must have been made from an authorized seller.

To implement this warranty please contact us by one of the methods listed on the Contact Us page of this user guide.

## FCC Statement

This device complies with part 15 of the FCC Rules. Operation is subject to the following two conditions: (1) This device may not cause harmful interference, and (2) this device must accept any interference received, including interference that may cause undesired operation. Any Changes or modifications not expressly approved by the party responsible for compliance could void the user's authority to operate the equipment.

Note: This equipment has been tested and found to comply with the limits for a Class B digital device, pursuant to part 15 of the FCC Rules. These limits are designed to provide reasonable protection against harmful interference in a residential installation. This equipment generates uses and can radiate radio frequency energy and, if not installed and used in accordance with the instructions, may cause harmful interference to radio communications. However, there is no guarantee that interference will not occur in a particular installation. If this equipment does cause harmful interference to radio or television reception, which can be determined by turning the equipment off and on, the user is encouraged to try to correct the interference by one or more of the following measures:

- Reorient or relocate the receiving antenna.
- Increase the separation between the equipment and receiver.
- Connect the equipment into an outlet on a circuit different from that to which the receiver is connected.



## FCC Statement, Continued

- Consult the dealer or an experienced radio/TV technician for help.

The device has been evaluated to meet general RF exposure requirement. The device can be used in portable exposure condition without restriction.

PRODUCT NAME:  
WATER LEAK SENSOR 3

---

PARTY:  
YOSMART, INC.

---

TELEPHONE:  
831-292-4831

---

MODEL NUMBER:  
YS7904-UC

---

ADDRESS:  
25172 ARCTIC OCEAN DRIVE, SUITE 106, LAKE  
FOREST, CA 92630 USA

---

EMAIL:  
SERVICE@YOSMART.COM

---



## Contact Us

We are here for you, if you ever need any assistance installing, setting up or using a YoLink app or product!

Need help? For fastest service, please email us 24/7 at [service@yosmart.com](mailto:service@yosmart.com)

Or call us at **831-292-4831** (US phone support hours: **Monday - Friday, 9AM to 5PM** Pacific)

You can also find additional support and ways to contact us at:

[www.yosmart.com/support-and-service](http://www.yosmart.com/support-and-service)

Or scan the QR code:



Support Home Page

Finally, if you have any feedback or suggestions for us, please email us at [feedback@yosmart.com](mailto:feedback@yosmart.com)

Thank you for trusting YoLink!

YoLink Customer Support



25172 Arctic Ocean Drive, Suite 106 Lake Forest, CA 92630  
© 2026 YOSMART INC. CALIFORNIA, USA