




Weatherproof Temperature Sensor

YS8004-UC

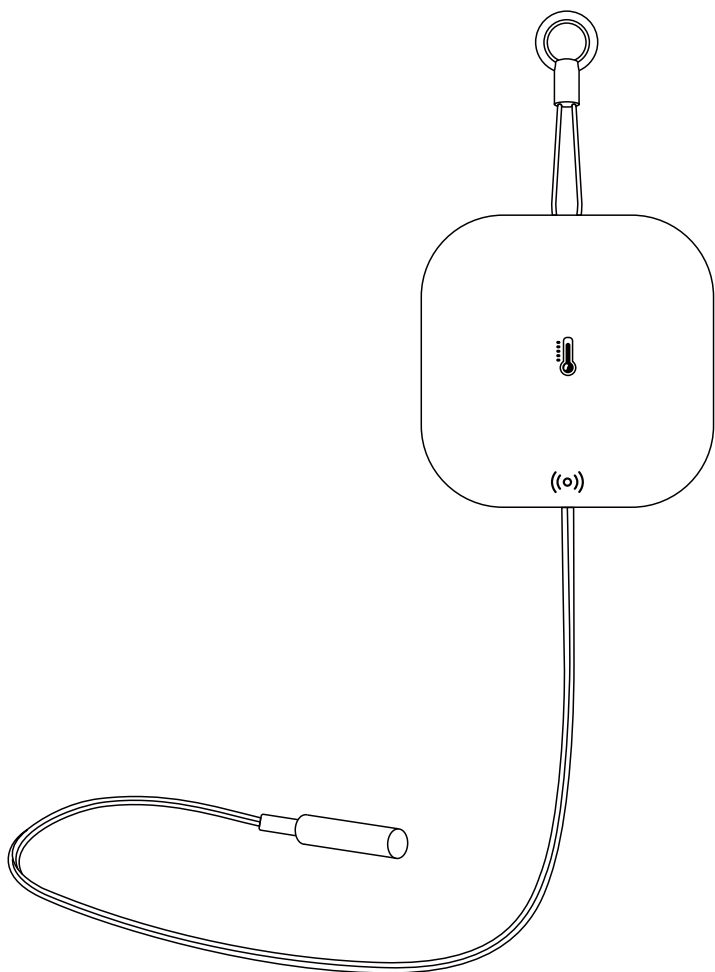

Installation & User Guide

Revision Jun. 11, 2026

Contents

A . Welcome!	01
B . Before You Begin	02
C . In the Box	04
D . Required Items	04
E . Get to Know Your Sensor	05
F . Power Up	06
G . Install the App	07
H . Add Your Sensor to the App	08
I . Installation	10
J . App Functions: Device Screen	12
K . App Functions: Device Details Screen	13
L . App Functions: Alert Settings Screen	15
M . App Functions: Chart Screen	16
N . App Functions: Alarm Strategy Screen	17
O . App Functions: Automation	19
P . Sensor Calibration	20
Q . Sensor Refresh Frequency	22
R . 3rd-Party Services	24
S . Battery Replacement	25
T . Specifications	28
U . Factory Reset	32
V . Firmware Updates	32
W . Troubleshooting	33
X . Warnings	36
Y . Warranty	37
Z . FCC Statement	38
AA. Contact Us	40

A Welcome

Thank you for purchasing YoLink products! We appreciate you trusting YoLink for your smart home & automation needs. Your 100% satisfaction is our goal. If you experience any problems with your installation, with our products or if you have any questions that this manual does not answer, please contact us right away. See the Contact Us section for more info.

Thank you!

YoLink Customer Support

User Guide Conventions

The following icons are used in this guide to convey specific types of information:



Very important information
(can save you time!)



Good to know info but may not
apply to you

B Before You Begin

Visit our Weatherproof Temperature Sensor support page on our website, for the latest installation guides, additional resources, information and videos by visiting:

<https://www.yosmart.com/support/YS8004-UC>

Or by scanning the QR code:



Download the most current version of the user guide by scanning the QR code:



B Before You Begin, Continued




Your Weatherproof Temperature Sensor connects to the internet via a YoLink hub, and it does not connect directly to your WiFi or local network. In order for remote access to the device from the app, and for full functionality, a hub is required. This guide assumes the YoLink app has been installed on your smartphone, and a YoLink hub is installed and online (or your location, apartment, condo, etcetera, is already served by a YoLink wireless network).




Your Weatherproof Temperature Sensor has lithium batteries pre-installed. Please note, at temperatures under 1.4°F (-17°C), the battery level may be indicated in the app as lower than it actually is. This is a characteristic of lithium batteries.


C In the Box

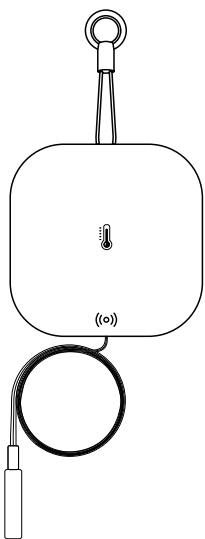

Weatherproof Temperature
Sensor




2 x AAA Lithium Batteries
(Pre-installed)

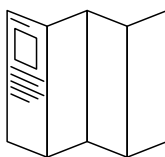


Quick Start Guide

D Required Items


You may require these items:

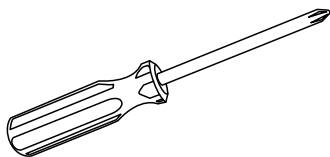

Small and/or Medium Phillips
Screwdriver

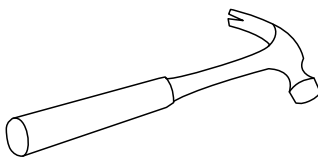

Hammer

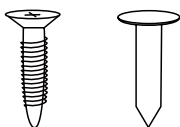


Nail or Self Tapping Screws



Double-sided Mounting Tape or
Velcro

E Get to Know Your Sensor

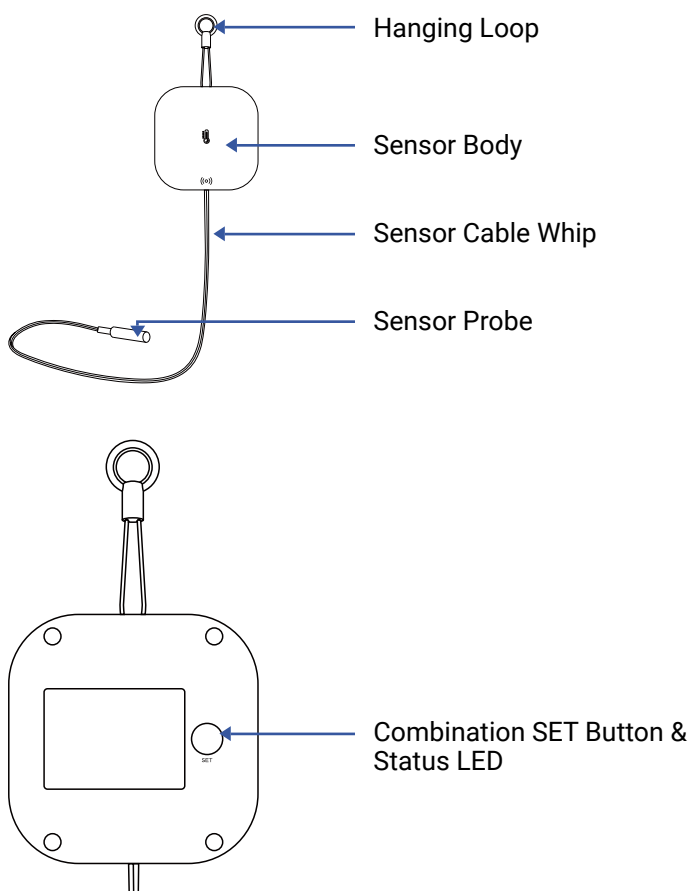

LED Behaviors



Blinking Red Once, then Green Once
Device Start-Up



Blinking Red And Green Alternately
Restoring to Factory Defaults



Slow Blinking Green
Updating



Blinking Red Once
Device Alerts or Device is Connected to the Cloud and Functioning Normally



or




Fast Blinking Red Every 30 Seconds or Fast Blinking Red 5 Times when pressing the SET Button
Batteries are Low, Please Replace the



Power Up

Press the SET button briefly, long enough for the LED to illuminate, blinking red then green

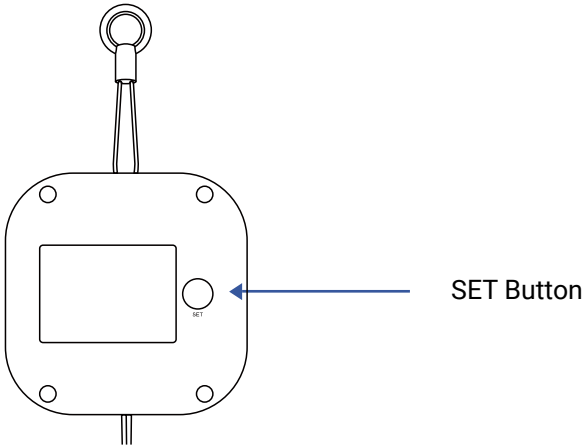



Install the App

If you are new to YoLink, please install the app on your phone or tablet, if you have not already. Otherwise, please proceed to the next section.

Scan the appropriate QR code below or find the “YoLink app” on the appropriate app store.



Apple phone/tablet
iOS 9.0 or higher



Android phone/tablet
6.0 or higher

Open the app and tap **Sign up for an account**. You will be required to provide a username and a password. Follow the instructions, to set up a new account. Allow notifications, when prompted.

You will immediately receive a welcome email from no-reply@yosmart.com with some helpful information. Please mark the yosmart.com domain as safe, to ensure you receive important messages in the future.


Log in to the app using your new username and password.

The app opens to the **Favorite** screen. This is where your favorite devices and scenes will be shown. You can organize your devices by room, in the **Rooms** screen, later.




Add Your Sensor to the App

1. Tap **Add Device** (if shown) or tap the scanner icon:

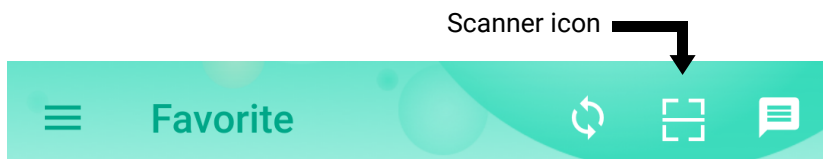

2. Approve access to your phone's camera, if requested. A viewfinder will be shown on the app.

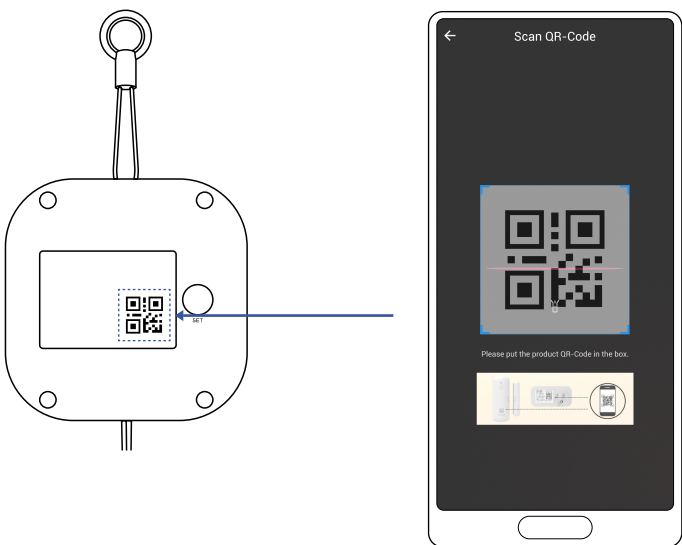


3. Hold the phone over the QR code so that the code appears in the viewfinder. If successful, the **Add Device** screen will be displayed.



Add Your Sensor to the App, Continued

4. You can change the device name and assign it to a room later. Tap **Bind device**.

5. If successful, the screen will appear as shown. Tap **Done**.

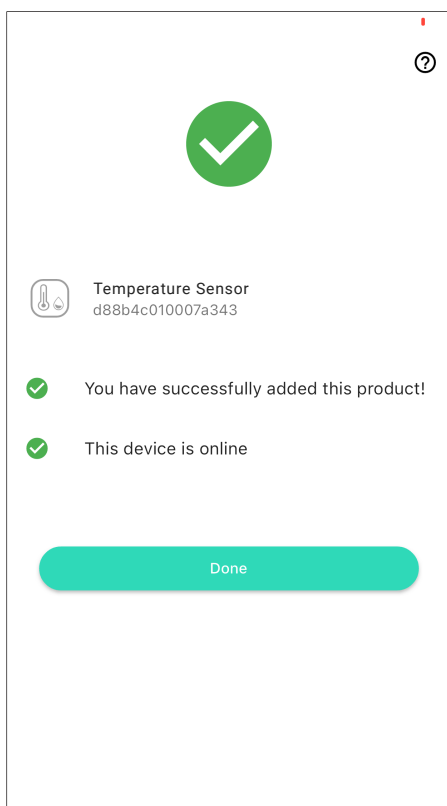

A popular application for this sensor is in swimming pools (in the filter sump) and in aquariums. If your application is similar, use care to prevent the sensor body from “going for a swim” (the sensor body should not be submerged!).



Installation

Location & Mounting Considerations

The Weatherproof Temperature Sensor is designed to be easy to install, and portable, but before installing the sensor, the following items should be considered:

- While the Weatherproof Temperature Sensor is designed for outdoor use, do not use the sensor outside of the environmental temperature range, per the product specifications (refer to the product's support page).
- The sensor body is designed for outdoor use, but do not allow it to be submerged.
- The sensor cable whip should be handled with care, and should be protected from physical damage.
- Do not use the sensor near sources of extreme hot or cold, as this can affect accurate ambient temperature readings, and in some cases may damage the sensor.
- As with most electronic devices, even if intended for outdoor use, the useful life of the device can be extended if it is protected from the elements. Direct intense sunlight, rain and snow over an extended period can discolor or damage the device. Consider placing the sensor where it has overhead cover and/or protection from the elements.



Installation, Continued

- Place the sensor where it will be out of reach of children.
- Place the sensor where it will not be subjected to tampering or physical damage. As the mounting height should not affect the readings of the sensor, consider mounting the sensor above than where it may be subjected to physical impact, theft or tampering.
- As an alternative to using the hanging loop, the sensor can be attached to the mounting surface with double-sided mounting tape or Velcro.

Install the Sensor

1. If you are hanging the sensor from a wall or other surface, provide a stable hook, nail, screw or other similar mounting method, and hang the mounting loop on it.


Due to the light weight of the sensor, strong winds may knock it off a hook, nail or screw, etc. Consider the mounting method and/or secure it with tie wraps/zip ties or other similar method to protect the sensor from falling off the wall or surface.

2. If using the sensor with a fluid, place the sensor probe in the fluid. If using the sensor for air temperature monitoring, suspend or place the sensor probe so that it has air on all sides and is not touching a surface, ideally.



App Functions: Device Screen

In the app, tap on your Weatherproof Temperature Sensor icon. Your Weatherproof Temperature Sensor main screen should be similar to the one shown below.

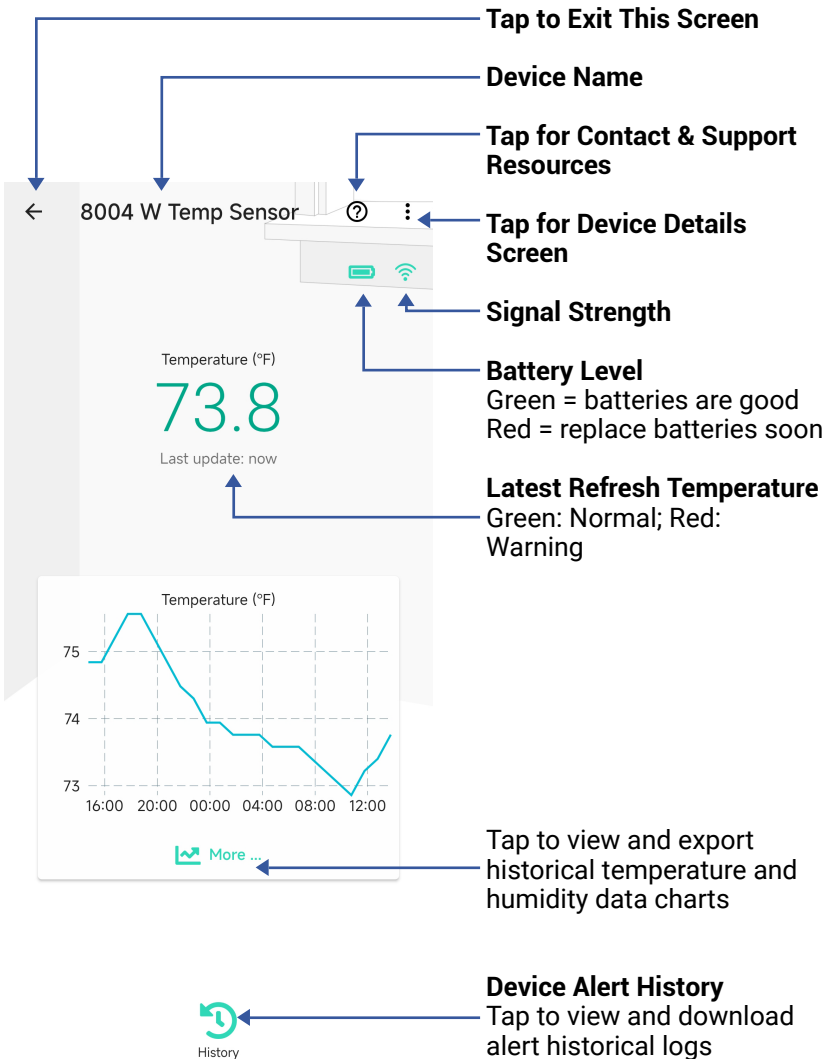



App Functions: Device Details Screen

Tap the three dots (in the upper right corner) to open the Weatherproof Temperature Sensor **Details** screen. Your Weatherproof Temperature Sensor screen should be similar to the one shown below.

The screenshot shows the 'Details' screen for a Weatherproof Temperature Sensor. The screen has a teal header with a back arrow, the title 'Details', and a help icon. The main content is a list of device details, each with a label on the left and a value on the right. Some values are followed by a chevron icon, indicating they are clickable. At the bottom, there is a red 'Delete' button.

Label	Value	Annotation
Type	Temperature Sensor	Device Type
Name	8004 W Temp Sensor >	Device Name (Tap to Edit)
Room	Office >	Room (Tap to Edit)
Alert	>	Alert (Tap to edit Alert Settings (see Alert Settings Screen))
Calibration	>	Calibration (Tap to calibrate the sensor (see page 20))
Temperature Unit	Fahrenheit(°F) ▾	Temperature Unit (Switch temperature display mode: °F / °C)
Favorite	Will show in favorite screen (Heart icon)	Favorite (Red if Favorite, Tap to Edit)
History	>	History (Tap to view device history)
State	Normal	State (General status of the device (Normal, Offline, Warning, etc.))
Other		
Model	YS8004-UC	
Device EUI	d88b4c0100037fe5	
SN	00500C52B4 >	
Signal Intensity	Strong (-15 dBm) >	
Battery	>	
Firmware	0409	

Delete



App Functions: Device Details Screen, Continued

← Details ⓘ

Type	Temperature Sensor
Name	8004 W Temp Sensor >
Room	Office >
Alert	>
Calibration	>
Device parameter calibration	
Temperature Unit	Fahrenheit(°F) ▾
Favorite	♡
Will show in favorite screen	
History	>
Get device logs	
State	Normal

Other

Model	YS8004-UC
Device EUI	d88b4c0100037fe5
SN	00500C52B4  >
Signal Intensity	Strong (-15 dBm) >
Battery	 >
Firmware	0409

Delete

Model Number

Device EUI
Unique Identifier Number

Device Serial Number

Signal Intensity
(From YoLink Hub)


Battery Level Indicator
If red, batteries are low;
replace batteries soon.

Firmware Revision
(Refer to page 32)

**Remove Device From
Current Account**
Tap to delete the device
from your YoLink account



App Functions: Alert Settings Screen

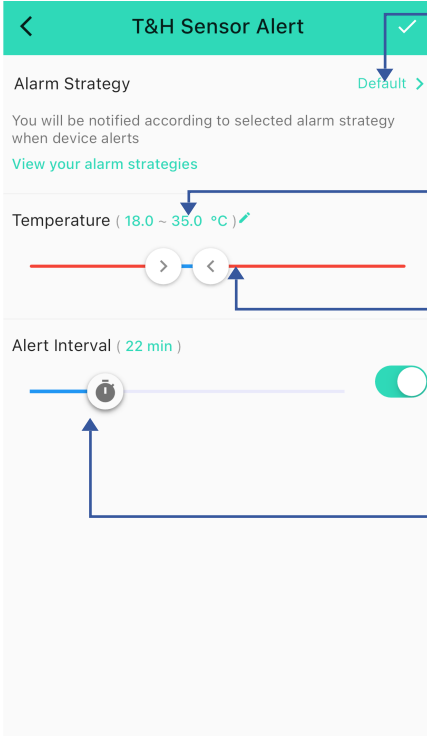

Alarm Strategy

Tap to edit the sensor's Alarm Strategy

Tap here to open the digital temperature alert settings

Tap the slider control and adjust the high or low alert value. The "normal" range will be displayed in blue text as a low alert value, to the high alert value.

Alert interval

Choose how often you want to be reminded after an alert.



App Functions: Chart Screen



8004



Real-Time Hourly

2/18 12:00 AM ~ 2/18 9:19 AM




Tap to select real-tim or hourly data

Tap to select time range

Temperature (°F)

L:70.34 H:73.04 A:71.3

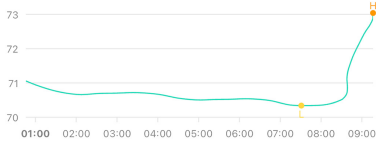

Export

Tap to export data



App Functions: Alarm Strategy Screen

You can set up notifications in Alarm Strategy settings, make sure you have enabled App, Email, SMS notification from the app->Menu->Settings->Account Settings->Advanced Settings, and verified your email address and added your phone number in the app.

The screenshot shows the 'Alarm Strategy' settings screen. The header is green with a back arrow, a question mark icon, and the title 'Alarm Strategy'. Below the header, there are several sections: 'Name' with the value 'Always' and a chevron; 'Related Devices' with the value '1' and a chevron; 'Enable Device Alarm' with a toggle switch that is turned on; 'Do Not Disturb' with a toggle switch that is turned off; 'Send App Notification' with a dropdown menu set to 'Admin'; 'Send Email' with a dropdown menu set to 'None'; 'Send SMS' with a dropdown menu set to 'None'; and 'Trigger Action' with a dropdown menu set to 'None'. At the bottom, there is a green 'Save' button. Annotations with arrows point to the question mark icon, the 'Always' text, the '1' text, the 'Enable Device Alarm' toggle, and the 'Do Not Disturb' toggle.

Strategy Name
Tap to edit the name

Related Devices
Tap to add more devices (that can alert) to this strategy, a device can be related to only one strategy

Tap to enable or disable the strategy

Tap to set up DND (Do Not Disturb)



App Functions: Alarm Strategy Screen, Continued

The screenshot shows the 'Alarm Strategy' configuration screen. At the top is a green header with a back arrow, the title 'Alarm Strategy', and a help icon. Below the header are several settings sections. The 'Name' section has a value of 'Always' with a right arrow. The 'Related Devices' section shows '1' with a right arrow. The 'Enable Device Alarm' section has a toggle switch that is turned on. The 'Do Not Disturb' section has a toggle switch that is turned off. The 'Send App Notification' section has a dropdown menu set to 'Admin'. Below this is a link for 'Notification Settings' with a description: 'Will send App Notification to the administrator of this home when device alerts'. The 'Send Email' section has a dropdown menu set to 'None' and a description: 'Will not send Email when device alerts'. The 'Send SMS' section has a dropdown menu set to 'None' and a description: 'Will not send SMS when device alerts'. The 'Trigger Action' section has a dropdown menu set to 'None' and a description: 'Have not set any action'. At the bottom is a green 'Save' button. Blue callout arrows point from the text descriptions on the right to the corresponding settings on the screen.

Send App Notification

Tap to select Admin to enable App push, select All, if desired for all members

Notification Settings (iOS only)

Tap to change notification tone, if desired

Send Email

Tap to select Admin to enable email notification, select All, if desired to send to all members

Send SMS

Tap to select Admin to enable limited text messages, select All (subscribe required-starter or standard plan), if desired to send to all members

Trigger Action

Tap to choose trigger actions (YoLink sirens, YoLink SpeakerHubs, scene)



App Functions: Automation

The Weatherproof Temperature Sensor can be set up as a condition in an automation. For example, you can automatically turn on a fan if the sensor detects a high temperature. This example is shown below. The automation also sends a custom notification (via app push notification, email SMS, or SpeakerHub broadcast) reminding you the sensor detects high or low temperature or humidity.

Automation

Name

High temp turn on fan

21/64

When

Temp Humidity Sensor

High temperature alert

Then

Behavior

+

Fan

Turn ON

Working Time

Always Working

Delete

P Sensor Calibration


Your Weatherproof Temperature Sensor has a high-accuracy digital sensor that has been calibrated at the time of manufacture. Your sensor readings should always be accurate, but if you believe the sensor is not accurate and/or if you have a thermometer or trusted sensor, etc. that displays a different reading, you can adjust the humidity and temperature readings with a plus or minus offset of your choice. For example, if a calibrated or trusted thermometer reads 0.5 degrees higher than your sensor, you can adjust, or calibrate, the sensor reading to be 0.5 degrees higher than it normally displays.



Sensor Calibration, Continued

How to Calibrate Your Sensor:

1. Open the sensor's **Details** screen and tap Calibration.
2. The Calibration screen is displayed, as shown below. To calibrate the temperature or humidity, tap and hold the associated slider bar control, then slide the control to the right, for a positive offset, or to the left, for a negative offset. The offset will be displayed with a "+" or "-" number. For example, to adjust the temperature plus 1 degrees, tap and hold the Temperature control, and slide it slowly to the right, until "+1.0°" is displayed.

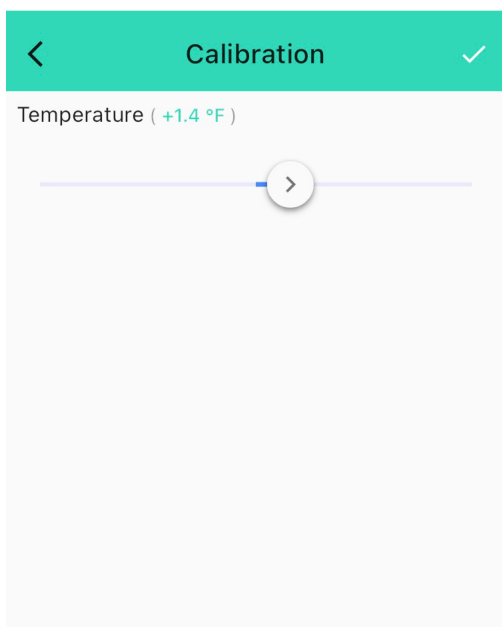


3. Tap the checkmark, to save your settings.



Sensor Refresh Frequency

The temperature reading refreshes when one of the following conditions are met:

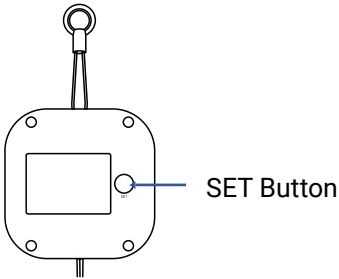

a. The SET button has been pressed

b.

- When temp is over 32°F(0°C), at least 1.8°F (1°C) change over a period longer than 1 minute;
- When temp is between 14°F(-10°C) and 32°F(0°C), at least 2.7°F (1.5°C) change over a period longer than 1 minute;
- When temp is between 5°F(-15°C) and 14°F(-10°C), at least 3.6°F (2°C) change over a period longer than 1 minute;
- When temp is below 5°F(-15°C), at least 9°F (5°C) change over a period longer than 1 minute.





Sensor Refresh Frequency, Continued



c. At least 3.6°F (2°C)
change within 1 minute



e. Device alert level
reached or restored to
normal range

d. Otherwise, the values
will be refreshed
automatically once an
hour

3rd-Party Services

The YoLink Weatherproof Temperature Sensor works with several voice assistants, including Alexa and Google, and it works with other automation platforms such as IFTTT.

To set up voice assistant integrations, in the app, go to Settings, Third-Party Services, and follow the instructions.

Please note, IFTTT supports Weatherproof Temperature Sensor as a trigger action (High Temp, or Low Temp) in the routine.

Alexa now includes the capability to query the temperature of a device and utilizes the Weatherproof Temperature Sensor for initiating trigger actions, based on high or low temperature.

Notably, in the Alexa interface, these temperature conditions are represented as motion sensors. For instance, when setting up a routine in Alexa, you can select "Pool Temp Humidity | High Temperature - Motion Detected" as the condition under the "when" section to initiate the routine.

Google only supports querying the temperature of the devices.


For example, edit the name of the device in Alexa or Google to "Pool", then you can ask: "Echo, what is the Pool temperature?"

You can also try, "Alexa, what is the temperature of the Pool sensor?"




Battery Replacement

Tools Required :

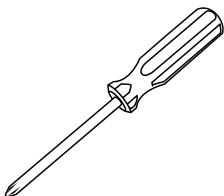

Small Phillips Screwdriver

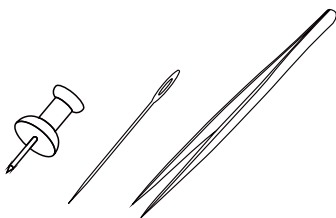


Tweezers or Needle/Pin or Tack




1. To maintain the watertight design of your Sensor, use extreme care and follow the battery replacement instructions closely
2. Do not mix old and new batteries
3. Make sure that the bottom shell and sealed rubber pads are tightly secured. Otherwise, the entry of water into the sensor may cause severe damage

S Battery Replacement, Continued

- 1 Use a pin or needle, tack, or tweezers to remove the four sealed rubber pads at the base of the device

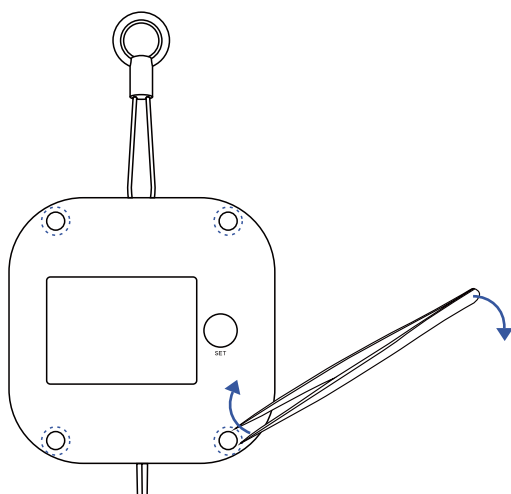


- 2 Use a screwdriver to loosen the screws at the base of the device and remove the base. Use care to retain the screws in the base, or carefully set them aside

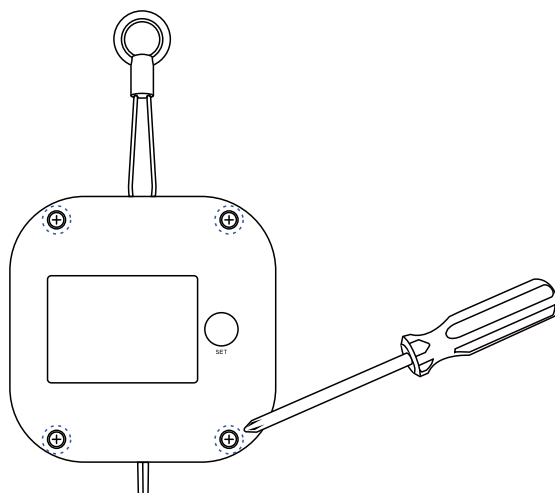


S Battery Replacement, Continued

- 3 Remove the two old batteries

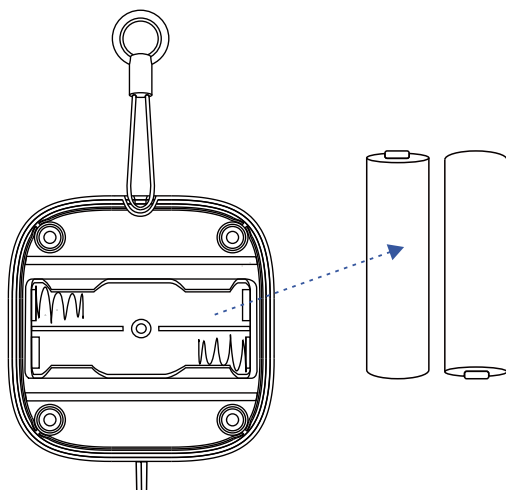

- 4 Install two new AAA batteries

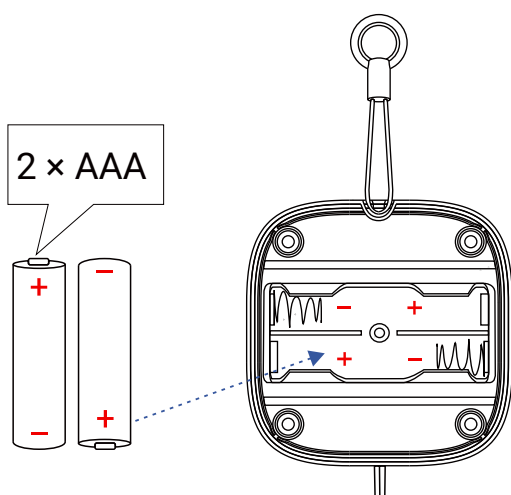



Specifications

Voltage:	3VDC (2-lithium non-rechargeable AAA batteries)
----------	---

Device Current Draw:	$\leq 135\text{mA}$ (operating), $\leq 5\mu\text{A}$ (standby)
----------------------	---

Sensor Types:	Temperature
---------------	-------------

Temperature Value Accuracy:	0.1 ($^{\circ}\text{F}/^{\circ}\text{C}$)
-----------------------------	---

Temperature Error (Typical):	-40 $^{\circ}\text{F}$ -14 $^{\circ}\text{F}$, $\pm 1.26^{\circ}\text{F}$ (-40 $^{\circ}\text{C}$ --10 $^{\circ}\text{C}$, $\pm 0.7^{\circ}\text{C}$) 14 $^{\circ}\text{F}$ -116.6 $^{\circ}\text{F}$, $\pm 0.9^{\circ}\text{F}$ (-10 $^{\circ}\text{C}$ -47 $^{\circ}\text{C}$, $\pm 0.5^{\circ}\text{C}$) 116.6 $^{\circ}\text{F}$ -176 $^{\circ}\text{F}$, $\pm 1.8^{\circ}\text{F}$ (47 $^{\circ}\text{C}$ -80 $^{\circ}\text{C}$, $\pm 1.0^{\circ}\text{C}$) 176 $^{\circ}\text{F}$ -221 $^{\circ}\text{F}$, $\pm 2.7^{\circ}\text{F}$ (80 $^{\circ}\text{C}$ -105 $^{\circ}\text{C}$, $\pm 1.5^{\circ}\text{C}$)
------------------------------	---

IP Rating:	IP65
------------	------


T Specifications, Continued

Dimensions:	Sensor body: 2.44x 2.44 x 0.87 inches (62 x 62 x 22 millimeters) (L x WxD)
	Cable Whip: 3.28 feet (1 meter) (L)
	Detection Probe: Φ0.2 x0.98 inches (Φ5 x25 millimeters) (Dia x D)


Environment:	Working Temperature: 1. Sensor body: -22°F - 140°F (-30°C - 60°C) 2. Cable Whip & Detection Probe: -40°F - 221°F (-40°C- 105°C)
	Working Humidity: 1. Sensor body: ≤ 95% (non-condensing) 2. Cable Whip & Detection Probe: ≤ 100% (non-condensing)




Specifications, Continued

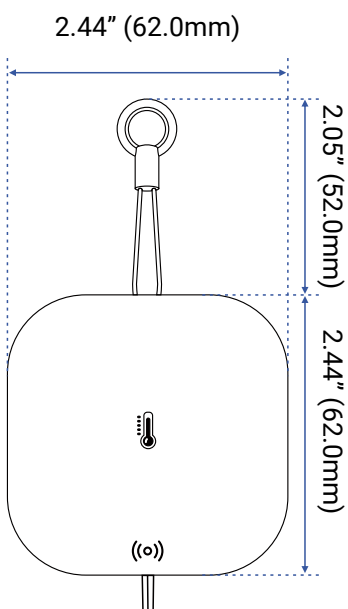

FRONT

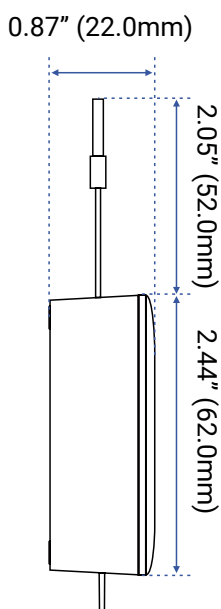

SIDE

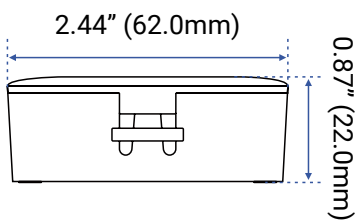


TOP



Factory Reset

When directed by customer support, and/or as an attempt to resolve a problem with your Weatherproof Temperature Sensor, it may be necessary to perform a factory reset. Factory resetting your sensor returns it to the factory default programming and settings. This is a simple process:

Hold the SET Button for 20 to 30 seconds, until the LED blinks red and green alternately, then release the button.

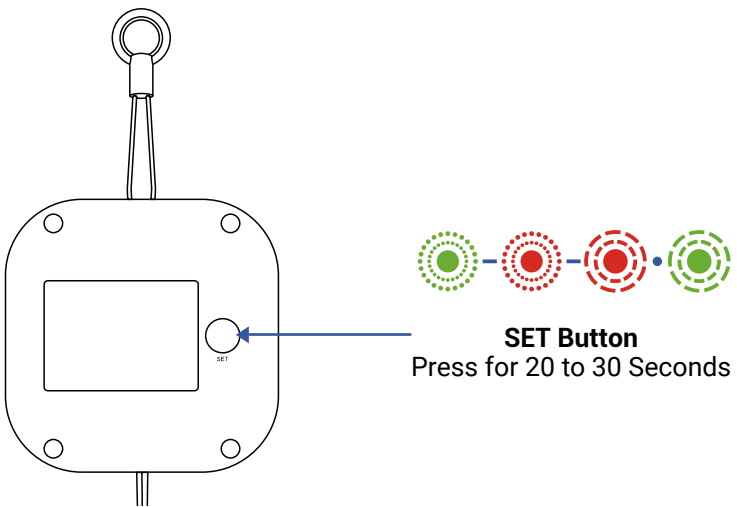

Factory reset is complete when the LED stops flashing.



Only deleting a device from the app will remove it from your account



Firmware Updates

Your YoLink products are frequently being improved, with new features and functions added over time. It is periodically necessary to make changes to your device firmware. For optimal performance of your device, and to give you access to any improvements made to your device model, these firmware updates should be installed (added to your device) when they become available.

In the **Details** screen of your device, you will see the Firmware section, as shown in the image below. A firmware update is available if it says “#### ready now” (where #### is a four-digit combination of letters and/or numbers).

Signal Intensity

Strong (-32 dBm)

Firmware

0703

Delete



Firmware Updates, Continued

Firmware is like settings in your sensor that define the overall operations of the sensor. These settings are added to the sensor when it is manufactured, and they are periodically updated, as needed, to add improvements, new features, new integrations, etc, to your sensor, as they become available.

Tap in the Firmware area to start the update. The sensor will update automatically, indicating the progress by percentage-complete. You may use your sensor during the update process, as the update is performed “in the background”. You may see the LED slowly blink green during the update, and the update may continue for several minutes beyond the LED turning off.



If you experience incomplete firmware updates, please update only one device at a time. If this does not resolve the problem, please contact our customer support department!

Problem:

Sensor is offline or has a low signal status.

Possible Solution:

a) Signal strength for the sensor is too low at that location. Move the sensor closer to the hub, relocate the hub closer to the sensor (if possible), or add another hub (to extend the signal range).

b) If offline, confirm the hub is powered on and connected to the internet. Otherwise, move sensor and/or hub or add a hub.

Problem:

Sensor temperature is not accurate, compared to another sensor

Possible Solution:

Your Weatherproof Temperature Sensor does have a Calibration feature, that allows for adjusting the displayed temperature, to match that of a trusted temperature measuring device or method. See the Calibration section on page 20.

If this does not resolve the issue, please contact our customer support department (see the contact info on the last page of this guide).



Troubleshooting, Continued



We recommend checking for and performing any available firmware updates before contacting customer support. See [Firmware Updates](#), page 31.

Warnings

For optimal performance and lifetime of your Weatherproof Temperature Sensor, please adhere to the following warnings:

- When replacing the batteries, only use new alkaline or lithium non-rechargeable batteries.
- Do not use zinc blend batteries.
- Do not mix old and new batteries.
- Adhere to the battery manufacturer's safety and disposal or recycling instructions.
- Please contact Customer Support before attempting to repair, disassemble, or modify your sensor, any of which can permanently damage your sensor and void the warranty.



2 Year Limited Electrical Warranty

YoSmart Inc. warrants to the original user (“customer”) of this product that it will be free from defects in materials and workmanship, under normal use, for 2 years from the date of purchase. This warranty does not apply to devices that have been improperly installed, modified, put to a use other than designed, or subjected to acts of God (such as floods, lightning, earthquakes, etc.). This warranty does not cover neglected or abused products. This warranty is limited to the repair or replacement of the device, only, at YoSmart's sole discretion. YoSmart will NOT be liable for the cost of installing, removing, nor reinstalling this product, nor direct, indirect, or consequential damages to persons or property resulting from the use of this product. This warranty only covers the cost of replacement parts or replacement units, it does not cover shipping & handling fees. The customer must provide proof of purchase, in the form of the original purchase invoice or order number. The purchase must have been made from an authorized seller.

To implement this warranty please contact us by one of the methods listed on the Contact Us page of this user guide.

Z FCC Statement

This device complies with part 15 of the FCC Rules. Operation is subject to the following two conditions: (1) This device may not cause harmful interference, and (2) this device must accept any interference received, including interference that may cause undesired operation. Any Changes or modifications not expressly approved by the party responsible for compliance could void the user's authority to operate the equipment.

Note: This equipment has been tested and found to comply with the limits for a Class B digital device, pursuant to part 15 of the FCC Rules. These limits are designed to provide reasonable protection against harmful interference in a residential installation. This equipment generates uses and can radiate radio frequency energy and, if not installed and used in accordance with the instructions, may cause harmful interference to radio communications. However, there is no guarantee that interference will not occur in a particular installation. If this equipment does cause harmful interference to radio or television reception, which can be determined by turning the equipment off and on, the user is encouraged to try to correct the interference by one or more of the following measures:

- Reorient or relocate the receiving antenna.
- Increase the separation between the equipment and receiver.
- Connect the equipment into an outlet on a circuit different from that to which the receiver is connected.

Z FCC Statement, Continued

- Consult the dealer or an experienced radio/TV technician for help.

The device has been evaluated to meet general RF exposure requirement. The device can be used in portable exposure condition without restriction.

PRODUCT NAME:
WEATHERPROOF TEMPERATURE SENSOR

PARTY:
YOSMART, INC.

TELEPHONE:
831-292-4831

MODEL NUMBER:
YS8004-UC

ADDRESS:
25172 ARCTIC OCEAN DRIVE, SUITE 106, LAKE
FOREST, CA 92630 USA

EMAIL:
SERVICE@YOSMART.COM



Contact Us

We are here for you, if you ever need any assistance installing, setting up or using a YoLink app or product!

Need help? For fastest service, please email us 24/7 at service@yosmart.com

Or call us at **831-292-4831** (US phone support hours: **Monday - Friday, 9AM to 5PM** Pacific)

You can also find additional support and ways to contact us at:

www.yosmart.com/support-and-service

Or scan the QR code:



Support Home Page

Finally, if you have any feedback or suggestions for us, please email us at feedback@yosmart.com

Thank you for trusting YoLink!

YoLink Customer Support

YOLINK

25172 Arctic Ocean Drive, Suite 106 Lake Forest, CA 92630
© 2026 YOSMART INC. CALIFORNIA, USA